

HONITURE S12

HONITURE S12 Cordless Vacuum Cleaner Instruction Manual

Model: S12

[Box](#) [Assembly](#) [Operation](#) [Introduction](#) [What's in the](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty &](#)
[Support](#)

1. INTRODUCTION

Thank you for choosing the HONITURE S12 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and retain it for future reference.



Image: The HONITURE S12 Cordless Vacuum Cleaner in its full assembly, ready for use.

2. WHAT'S IN THE BOX

Carefully unpack all components and check against the list below. If any items are missing or damaged, please contact customer support.

- Host Machine (Main Vacuum Body)
- Telescopic Tube
- Floor Brush with LED Light
- Rechargeable Battery
- 2-in-1 Brush

- Crevice Nozzle
- Adapter (Charger)
- HEPA Filter (pre-installed or spare)
- Stainless Steel Filter (pre-installed or spare)
- Wall Mount Hanger
- User Manual

Video: An unboxing demonstration showing all components included with the HONITURE S12 Cordless Vacuum Cleaner.

3. ASSEMBLY

Follow these steps to assemble your HONITURE S12 Cordless Vacuum Cleaner:

1. **Install Filters:** Ensure the stainless steel filter and HEPA filter are correctly placed inside the dust cup. The stainless steel filter should be inserted first, followed by the HEPA filter.
2. **Attach Dust Cup:** Securely attach the dust cup assembly to the main host machine.
3. **Insert Battery:** Slide the rechargeable battery into the designated slot on the main host machine until it clicks into place.
4. **Connect Extension Tube:** Attach the telescopic tube to the main host machine.
5. **Attach Floor Brush:** Connect the floor brush to the other end of the telescopic tube. For handheld use, you can directly attach accessories like the crevice nozzle or 2-in-1 brush to the main host machine.

Video: A detailed guide on assembling the HONITURE S12 Cordless Vacuum Cleaner, including filter installation, battery attachment, and connecting the main components.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Suction Adjustment

The HONITURE S12 features an intuitive LCD touch screen for easy control.

- **Power On:** Press the power button to start the vacuum cleaner.
- **Adjust Suction:** Swipe on the LCD touch screen to adjust between 5 suction levels. The screen displays the current power level and battery status.
- **Smart Sensor Technology:** The vacuum automatically adapts suction power based on the surface, conserving battery on hard floors.
- **Power Off:** Press the power button again to turn off the vacuum cleaner.



All-in-one LCD Touch Screen

- 100 | Power Display
- ⇄ | Suction Adjustment Slider
- 🧹 | Brush Tangled Indicator
- U | Air Channel & Dust Sensor Blocked

Image: Close-up of the HONITURE S12's LCD touch screen, showing power display, suction adjustment slider, brush tangled indicator, and air channel/dust sensor blocked indicator.

4.2 Using Attachments

- **Floor Brush:** Ideal for carpets, hard floors, and hardwoods. The integrated LED light illuminates dust and debris in dark areas.
- **2-in-1 Brush:** Use for upholstery, curtains, and delicate surfaces.
- **Crevice Nozzle:** Perfect for narrow gaps, corners, and hard-to-reach areas.



Upgraded Turbo Brush

Gives you powerful deep cleaning
on all floor types

Image: The HONITURE S12's upgraded floor brush actively cleaning a carpeted surface, demonstrating its powerful suction.

4.3 Cleaning Demonstrations

Video: A short demonstration of the HONITURE S12 effectively cleaning pet hair from a sofa.

Video: A brief clip showcasing the HONITURE S12's maneuverability and cleaning performance on a hard floor.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dust Cup

The 1.2L dust cup should be emptied regularly, especially when the 'dust sensor blocked' indicator appears on the LCD screen. Press the release button to detach the dust cup and empty its contents into a waste bin.

5.2 Cleaning Filters

The HONITURE S12 features a 5-stage fully sealed HEPA filtration system. Both the HEPA filter and the stainless steel filter are washable and reusable.

- Remove the dust cup from the main unit.
- Twist and pull out the stainless steel filter, then remove the HEPA filter.
- Rinse both filters under cold running water until the water runs clear.
- Allow filters to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.



Image: Diagram illustrating the 5-stage fully sealed HEPA filtration system, designed to capture fine dust and allergens.

5.3 Cleaning the Anti-tangle Floor Brush

The V-shaped floor brush is designed to prevent hair tangling. If hair accumulates, use the provided cleaning tool or carefully remove the roller brush to clean it manually. The LCD screen will indicate if the brush is tangled.

5.4 Battery Charging

The detachable 17.5Ah Lithium-Ion battery provides up to 55 minutes of runtime and charges fully in approximately 4 hours using the provided adapter. Charge the battery when the display indicates low power.



Image: Illustration of the HONITURE S12's detachable 17.5Ah battery, highlighting its 4-hour fast charging and 55-minute runtime capabilities.

6. TROUBLESHOOTING

If you encounter issues with your HONITURE S12, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure the battery is fully charged and correctly inserted.
Reduced suction power	Dust cup is full, filters are clogged, or brush roll is tangled.	Empty the dust cup. Clean or replace filters. Clear any tangles from the brush roll.
Brush roll stops rotating	Hair or debris is tangled in the brush roll.	Turn off the vacuum and remove any obstructions from the brush roll.
Battery not charging	Adapter is not connected correctly or is faulty.	Check adapter connection. Ensure the power outlet is working. Contact support if the adapter is faulty.
Unusual noise	Obstruction in the air path or damaged component.	Check for blockages in the nozzle, tube, or dust cup. If noise persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	HONITURE
Model Number	S12
Suction Power	Up to 38KPa (450W motor)
Display	LCD Touch Screen
Battery Type	17.5Ah Lithium-Ion (Detachable)
Runtime	Up to 55 minutes
Charge Time	Approx. 4 hours
Dust Cup Capacity	1.2 Litres
Filtration System	5-Stage Fully Sealed HEPA Filtration
Special Features	Smart Sensor Technology, Anti-tangle Floor Brush, LED Headlights
Noise Level	65 Decibels
Item Weight	3 Kilograms
Dimensions (L x W x H)	43.2L x 30.5W x 17.8H centimetres
Surface Recommendation	Carpet, Hard Floor, Hardwoods

8. WARRANTY & SUPPORT

HONITURE offers a 3-year warranty for the vacuum cleaner upon registration, with a 1-year warranty for the battery. This warranty covers manufacturing defects and ensures reliable performance under normal use. For any questions, technical assistance, or warranty claims, please contact HONITURE customer support through their official website or the retailer where the product was purchased. Please have your model number (S12) and proof of purchase ready.