

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZORAMI](#) /

› [ZORAMI Rechargeable Ear and Nose Hair Trimmer - TC-011 User Manual](#)

ZORAMI TC-011

ZORAMI Rechargeable Ear and Nose Hair Trimmer - TC-011 User Manual

Model: TC-011

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your ZORAMI Rechargeable Ear and Nose Hair Trimmer. Please read these instructions carefully before use and retain them for future reference.



Image 1: ZORAMI Rechargeable Ear and Nose Hair Trimmer and its packaging.

2. SAFETY INSTRUCTIONS

CAUTION:

- To avoid injury, NEVER insert the outer head too deep into your nostril or ear canal.
- Keep the device out of children's reach.
- Regularly clean the device to extend its lifetime.
- Do not share the same device with others.
- Do not attempt to open, disassemble, repair, or modify the device by yourself.

- Avoid contact with water for the main body. Only the detachable trimmer head is washable.
- Use the trimmer as intended to prevent injury.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your ZORAMI trimmer:

- **Outer Blade:** The protective casing for the inner blade.
- **Inner Blade:** The cutting component.
- **Joint:** Connects the blade assembly to the fuselage.
- **On/Off Switch:** Activates and deactivates the device.
- **Fuselage:** The main body of the trimmer, housing the motor and battery.
- **Protective Cover:** Shields the blades from dust when not in use.

PRECISION HAIR TRIMMING PAINLESS HAIR REMOVAL

High-strength stainless steel blades are powered by a 9000rpm high-speed motor for fast and precision trimming.



Image 2: Exploded view of the trimmer components.

4. SETUP

4.1 Charging the Device

The ZORAMI trimmer features a rechargeable battery and is equipped with a USB-C charging port. Use the included USB-C charging cable to power the device. A full charge takes approximately 2 hours and provides up to 6 months of standby time, assuming 1-2 minutes of use once a week.

- Connect the USB-C cable to the charging port at the bottom of the trimmer.

- Plug the other end of the cable into a USB port, power bank, computer, or USB car charger.
- The device will indicate charging status (e.g., via an LED display if available).
- Fully charge the nose hair trimmer before first use and whenever the battery is low.



Image 3: Convenient Type-C charging for extended use.

4.2 Installing/Removing the Blade

To ensure proper function and hygiene, the trimmer head can be easily removed and reinstalled.

- **To Remove:** Turn off the device. Hold the device with one hand and twist the trimmer head counter-clockwise to remove it. Remove the inner blade from the outer head.

- **To Install:** Insert the inner blade into the outer head, align it with the connecting shaft, and twist the trimmer head clockwise to lock it securely.

5. OPERATING INSTRUCTIONS

The ZORAMI trimmer is designed for efficient and painless hair removal from the nose, ears, eyebrows, beard, and face. It features a 9000RPM high-speed motor and dual-edge spinning blades for precise trimming.

- Ensure the trimmer is charged and the head is securely attached.
- Turn on the device using the one-touch control switch.
- **For Nose/Ear Hair:** Gently insert the tip of the outer blade into your nostril or ear canal. Do not insert too deep. Rotate the trimmer 360 degrees slowly around the nostril or ear canal to trim unwanted hair.
- **For Eyebrow/Facial Hair:** Carefully guide the trimmer along the desired area to remove excess hair.
- The device is designed to lower its power level stably when the battery is low to avoid painful pulling.

Ear and Nose Hair Trimmer



Trim the excess hairs in a safe, comfortable and painless way.



Image 4: Using the trimmer for ear and nose hair.

Your browser does not support the video tag.
Video 1: An overview of the ZORAMI rechargeable trimmer's features and usage.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your trimmer.

- After each use, turn off the device and detach the trimmer head by twisting it counter-clockwise.

- Rinse the detachable trimmer head directly under running water to remove hair clippings.
- Use the included cleaning brush to remove any stubborn hair from the blades.
- Ensure the trimmer head is completely dry before reattaching it to the main body.
- Store the trimmer with its protective cover to shield the blades from dust.

Detachable Design Washable Trimmer

Directly remove the trimmer head to wash and rinse under running water.

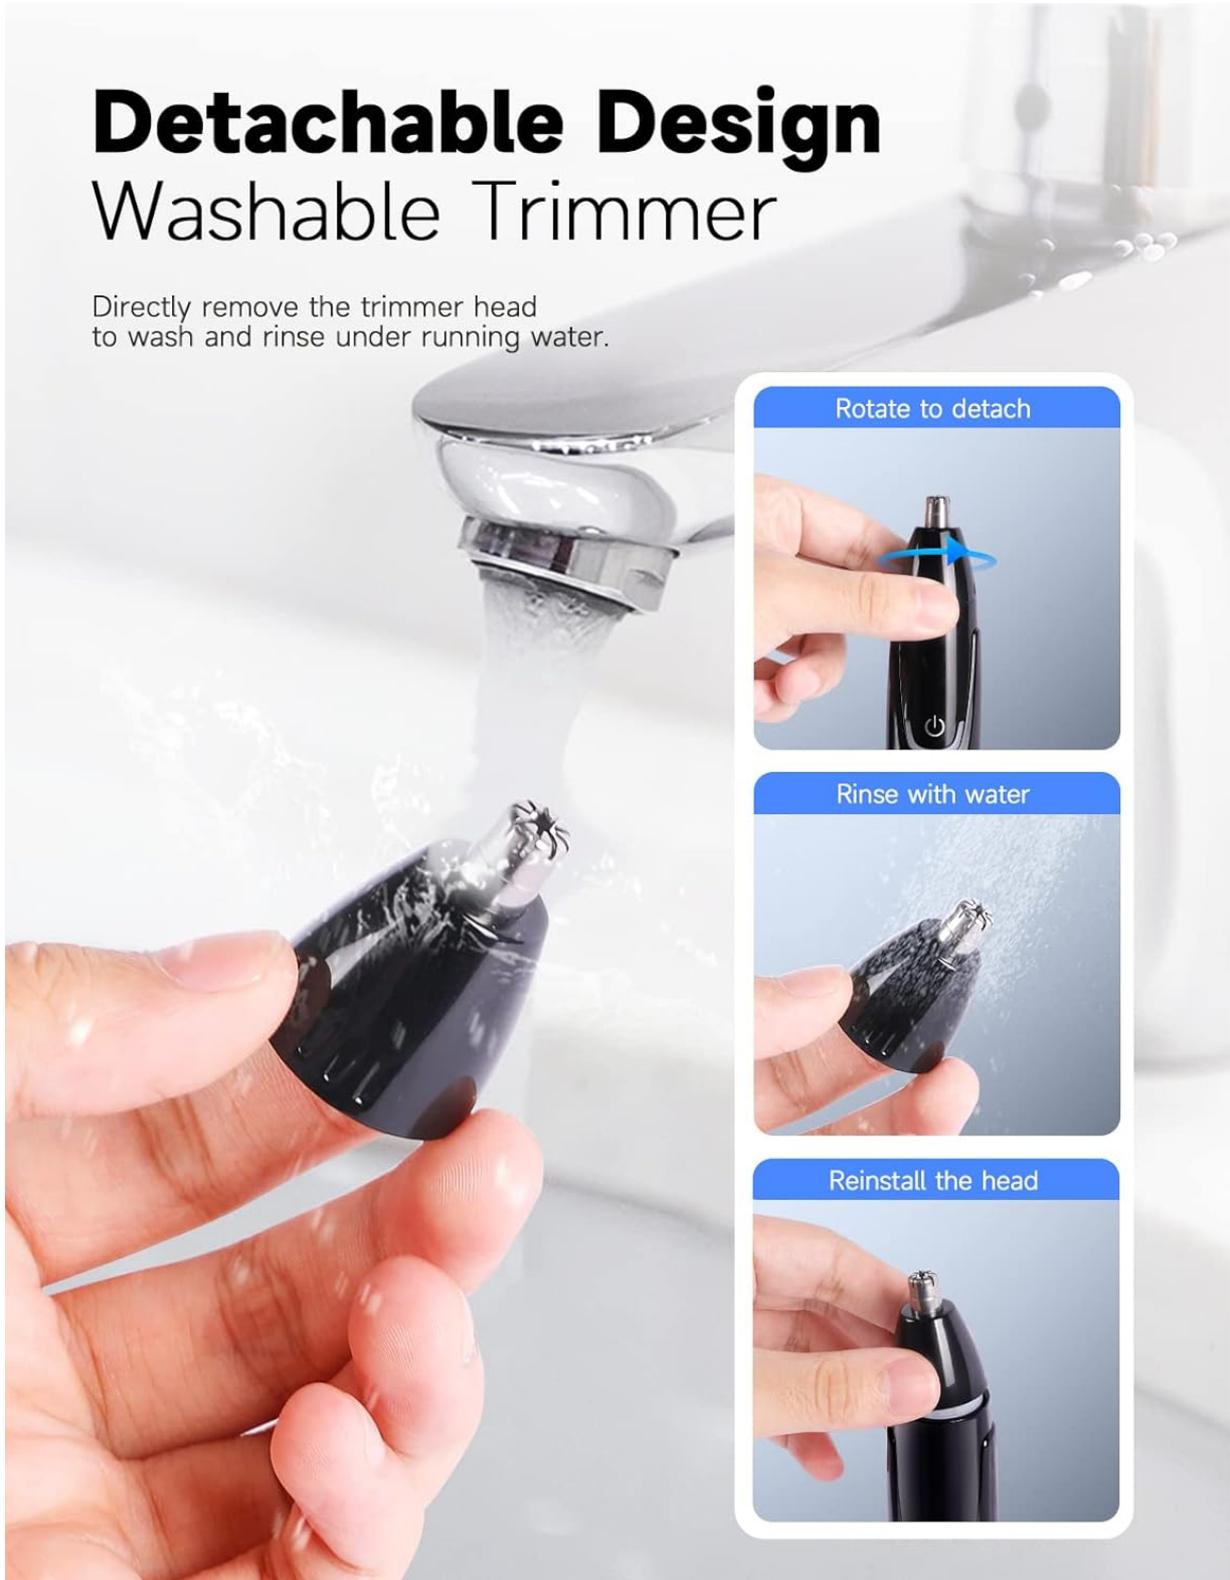



Image 5: Detachable design for easy cleaning of the trimmer head.

7. TROUBLESHOOTING

If you encounter any issues with your ZORAMI trimmer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Device does not work properly.	The battery is running low or out of power.	Charge the device.
Device does not work properly.	The outer head and inner blade are not installed correctly.	Install the outer head and inner blade correctly as guided in this instruction manual.
Abnormal noise from using the device.	The outer head and inner blade are not installed correctly.	Install the outer head and inner blade correctly as guided in this instruction manual.

Note: If the device still does not work properly after using the above solutions, please stop using the device and contact us.

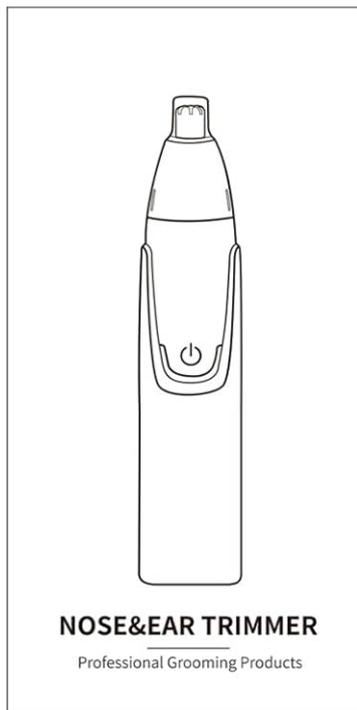

SAFETY INSTRUCTIONS
To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

CAUTION

To avoid injuries, NEVER insert the outer head too deep into your nostril or ear canal.

Keep the device out of children's reach.

Regularly clean the device to extend its lifetime.

Do not share the same device with others.
To avoid accidents, DO NOT attempt to disassemble, repair, or modify the device by yourself.

DEVICE DESCRIPTION

PREPARATION INSTRUCTIONS
Technical Specifications:

Name: Nose hair trimmer
Model: TC-011 TC-011-Pink
TC-011-Magenta TC-011-Mint Green

Rechargeable battery: 1x lithium-ion rechargeable battery, 500 mAh
Input: DC5V/1A (Power adapter not included)
Charging time: approx. 2 hours
Operation time: approx. 2.5 hours

Note: Please fully charge the nose hair trimmer before using it for the first time. The indicator light is red when charging, white after fully charged, flashes red when power shortage.

Remove/Install the Blade

1) To remove: Turn off the device. Hold the device with one hand, rotate the outer head clockwise and pull to remove it. Remove the inner blade from the outer head.

2) To install: Turn off the device. Insert the inner blade into the outer head, align it with the connecting shaft, and place it in the device's body, rotating it counterclockwise to lock it.

HOW TO USE
To ensure the correct operation of this device, please read the instructions carefully before use.

1) Remove the protective cap from the device. Turn on the device.

2) Slowly insert the tip of the outer blade into your nostril or ear canal. Do not insert the outer head more than 0.5cm into the nose or ear canal. Move the outer head and rotate 360 degrees slowly around the nostril or ear canal.

※ Applicable Areas: Nose and Ears.

CLEANING & MAINTENANCE
※ To ensure the best performance of the device, clean the device before and after each use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not work properly.	The battery is running low or out of power.	charging the device
	The outer head and inner blade are not installed correctly.	Install the outer head the and inner blade correctly as guided in this instruction manual.
Abnormal noise when using the device.	The outer head and inner blade are not installed correctly.	Install the outer head and inner blade correctly as guided in this instruction manual.

Note: If the device still does not work properly after using the above solutions, please stop using the device and contact us.

CE Made in China

Image 6: Troubleshooting guide from the manual.

8. SPECIFICATIONS

- **Product Dimensions:** 2 x 1.3 x 6.5 inches
- **Item Weight:** 4 Ounces
- **Item Model Number:** TC-011
- **Batteries:** 1 Lithium Ion battery required (included)
- **Power Source:** Battery Powered
- **Recommended Uses:** Beard, Ear, Eyebrows, Face, Nose
- **Manufacturer:** Ningbo Tianchao Electrical Appliance Co., LTD

9. WARRANTY AND SUPPORT

ZORAMI stands behind the quality of its products. If you are not entirely satisfied for any reason, please contact us directly. You may return the product for a replacement or refund with no questions asked.

For customer support, please refer to the contact information provided with your product packaging or visit the official ZORAMI website.

Related Documents - TC-011

	<p>Brother TC Cassette Ribbon (Black) - Safety Data Sheet (SDS)</p> <p>Safety Data Sheet for Brother TC cassette ribbon (Black) used in P-touch label writers, detailing identification, hazards, composition, first aid, handling, storage, exposure controls, physical and chemical properties, stability, toxicology, ecology, disposal, transport, and regulatory information.</p>
	<p>Rombica Type-C Falcon Dock Station: User Manual and Specifications</p> <p>Comprehensive user manual and technical specifications for the Rombica Type-C Falcon USB-C Dock Station, detailing features, setup, safety, and warranty information.</p>
	<p>AMTROL TITAN™ COMPOSITE Residential Well Tank Installation & Operation Instructions</p> <p>Comprehensive installation and operation guide for AMTROL TITAN™ COMPOSITE residential pre-pressurized well tanks (Models TC-20 through TC-119), covering safety, installation, startup, and maintenance.</p>
	<p>Reedog NoBark Smart Mini Pro TC-011 Pro User Manual - Dog Training Collar</p> <p>Comprehensive user manual for the Reedog NoBark Smart Mini Pro TC-011 Pro dog training collar. Learn about safety, features, operation, testing, and specifications for effective and humane bark control.</p>

