

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FOHERE](#) /

› [FOHERE 23L XXL 1700W Air Fryer Oven Instruction Manual](#)

## FOHERE 23L XXL 1700W Air Fryer Oven

# FOHERE 23L XXL 1700W Air Fryer Oven Instruction Manual

Model: 23L XXL 1700W Air Fryer Oven | Brand: FOHERE

## 1. IMPORTANT SAFETY WARNINGS

Please read all instructions thoroughly before using this appliance. Failure to follow these safety guidelines may result in electric shock, fire, or serious injury.

- Always use high-temperature resistant gloves when handling hot surfaces or accessories to prevent burns.
- Avoid direct contact with the oven interior or baking trays during and immediately after operation.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances to allow for proper ventilation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Unplug the appliance from the outlet when not in use and before cleaning.

### **United Kingdom --- Safety Compliance Warning**

- Read all instructions before use
- Pay attention to personal safety, use high-temperature resistant gloves and avoid direct contact with the oven interior or baking tray to prevent burns.

### **Deutschland --- Warnung zur Einhaltung der Sicherheitsvorschriften**

- Lesen Sie vor der Verwendung alle Anweisungen
- Achten Sie auf die persönliche Sicherheit, tragen Sie hochtemperaturbeständige Handschuhe und vermeiden Sie direkten Kontakt mit dem Inneren des Ofens oder der Backform, um Verbrennungen zu vermeiden.

### **France --- Avertissement de conformité en matière de sécurité**

- Lisez toutes les instructions avant utilisation
- Faites attention à votre sécurité personnelle, utilisez des gants résistants aux températures élevées et évitez tout contact direct avec l'intérieur du four ou du plat de cuisson pour éviter les brûlures.

### **Italia --- Avviso di conformità alla sicurezza**

- Leggere tutte le istruzioni prima dell'uso
- Prestare attenzione alla sicurezza personale, utilizzare guanti resistenti alle alte temperature ed evitare il contatto diretto con l'interno del forno o della teglia per evitare ustioni.

### **Spagna --- Avviso di conformità alla sicurezza**

- Leggere tutte le istruzioni prima dell'uso
- Prestare attenzione alla sicurezza personale, utilizzare guanti resistenti alle alte temperature ed evitare il contatto diretto con l'interno del forno o della teglia per evitare ustioni.

### **Nederland --- Veiligheidswaarschuwing**

- Lees voor gebruik alle instructies
- Let op uw persoonlijke veiligheid, gebruik handschoenen die bestand zijn tegen hoge temperaturen en vermijd direct contact met de binnenkant van de oven of bakvorm om brandwonden te voorkomen.

### **Polska --- Ostrzeżenie dotyczące zgodności z bezpieczeństwem**

- Przed użyciem przeczytaj całą instrukcję
- Zwracaj uwagę na bezpieczeństwo swoje osobiste, używaj rękawic odpornych na wysoką temperaturę i unikaj bezpośredniego kontaktu z wnętrzem piekarnika lub blachą do pieczenia, aby uniknąć poparzeń.

Image 1: Safety compliance warnings for the FOHERE Air Fryer Oven, indicating the need to read instructions and use protective gloves.

## **2. PRODUCT OVERVIEW**

The FOHERE 23L XXL 1700W Air Fryer Oven is a versatile kitchen appliance designed for healthy cooking

with less oil. It combines multiple functions into one compact unit, serving as an air fryer, toaster, dehydrator, and rotisserie oven.

## Key Features:


- **Multi-functional Cooking:** Capable of air frying, roasting, baking, toasting, dehydrating, and rotisserie cooking.
- **Large Capacity:** A 23-liter interior, suitable for preparing meals for families, accommodating a whole chicken, a 10-inch pizza, or up to 1.5 kg of fries.
- **Efficient Heating:** Features 1700W power with 360° air circulation technology for even and rapid cooking.
- **User-Friendly Controls:** Equipped with four mechanical knobs for easy adjustment of temperature, timer, and cooking functions.
- **Easy to Clean:** Non-stick coated inner wall and a removable crumb tray simplify cleaning. All removable accessories are dishwasher safe.
- **Integrated Oven Light:** Allows for monitoring the cooking process without opening the door.
- **Double Glass Door:** Enhances safety and heat retention.
- **Adjustable Layers:** Three adjustable rack positions for cooking multiple items simultaneously.



Image 2: The FOHERE Air Fryer Oven, showcasing its design and capacity with various cooked foods.

# All-In-One Air Fryer Oven

Meet your difference baking needs by using only one air fryer oven

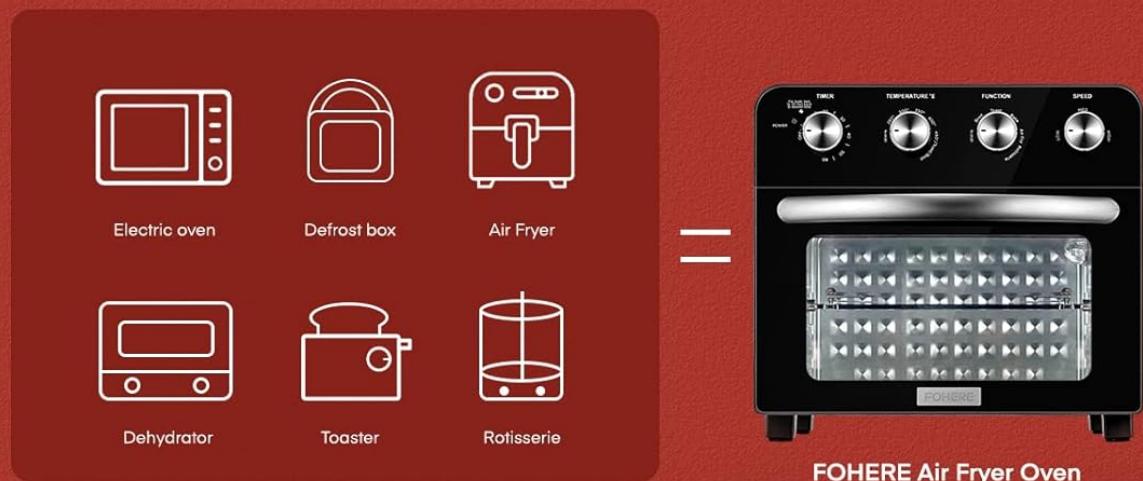

Pizza



Grilled Chicken Thighs



Toast Bread



Roast Chicken



Dried Fruit



French Fries

Image 3: Visual representation of the FOHERE Air Fryer Oven's multi-functionality, combining an electric oven, defrost box, air fryer, dehydrator, toaster, and rotisserie.

## 3. GETTING STARTED (SETUP)

### 3.1 Unpacking

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any protective film, stickers, or packaging materials from the unit.
3. Inspect the appliance for any damage. Do not use if damaged.

### 3.2 Placement

- Place the air fryer oven on a stable, level, and heat-resistant surface.
- Ensure there is at least 10-15 cm (4-6 inches) of clear space on all sides and above the appliance for adequate air circulation.
- Do not place the appliance near flammable materials or heat sources.

### 3.3 Initial Cleaning

1. Before first use, wipe the exterior of the appliance with a damp cloth.
2. Wash all removable accessories (air fryer basket, baking rack, baking tray, rotisserie fork, crumb tray) with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the interior with a damp cloth and dry.

### 3.4 First Use (Burn-off)

It is recommended to perform a 'burn-off' cycle before cooking food to eliminate any manufacturing odors.

1. Place the crumb tray at the bottom of the oven.
2. Plug the appliance into a grounded electrical outlet.
3. Turn the Function knob to 'Air Fry'.
4. Set the Temperature knob to 230°C (450°F).
5. Set the Timer knob to 15 minutes.
6. Allow the oven to run for the set time. A slight odor or smoke may be present; this is normal.
7. Once complete, unplug the appliance and allow it to cool down completely before wiping the interior again.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Controls Overview

- **Timer Knob:** Sets the cooking time (up to 60 minutes). The oven will automatically shut off when the timer reaches zero.
- **Temperature Knob:** Adjusts the cooking temperature from 80°C to 230°C (170°F to 450°F).
- **Function Knob:** Selects the desired cooking mode (e.g., Toast, Air Fry, Bake, Roast, Rotisserie, Dehydrate).

### 4.2 General Operation


1. Place the crumb tray at the bottom of the oven.
2. Place food on the appropriate accessory (air fryer basket, baking rack, or baking tray) and insert it into the desired rack position.
3. Close the oven door.
4. Turn the Function knob to select your desired cooking mode.
5. Turn the Temperature knob to set the cooking temperature.
6. Turn the Timer knob to set the cooking time. The oven will begin heating.
7. The oven light can be turned on/off to monitor cooking progress.
8. When the timer rings, cooking is complete. Carefully remove food using oven mitts.

### 4.3 Using Accessories

The FOHERE Air Fryer Oven comes with 6 accessories to enhance your cooking experience:

- **Air Fryer Basket:** Ideal for fries, chicken wings, and other items requiring maximum air circulation for crispiness.
- **Rotisserie Kits:** Used for roasting whole chickens, ducks, or larger cuts of meat. Ensure the meat is securely fastened and balanced on the spit.
- **Baking Tray:** Suitable for cakes, pizzas, or items that may drip.
- **Baking Rack:** For general baking, roasting, or dehydrating.
- **Rotisserie Tool:** For safe removal of the hot rotisserie spit.
- **Crumb Tray:** Collects crumbs and drips, placed at the very bottom of the oven.

## 6 Free Accessories Included

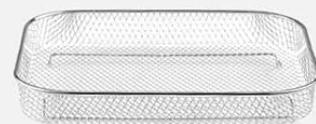

**Air fryer basket**

suitable for fries/chicken popcorn etc.



**Rotisserie Kits**

Suitable for roast chicken/duck/steak etc.



**Baking Tray**

Suitable for cake/pizza/grill, etc.



**Baking Rack**

suitable for dried fruit/vegetable/dried meat, etc.



Image 4: The six accessories included with the FOHERE Air Fryer Oven, designed for various cooking methods.

## 4.4 Cooking Tips

- For best air frying results, preheat the oven for 5-10 minutes before adding food.
- Shake or flip food halfway through cooking for even browning and crispiness.
- Do not overcrowd the basket or tray; cook in batches if necessary to ensure proper air circulation.
- A recipe book with 100 recipes is included to help you explore various cooking options.



Image 5: A family utilizing the FOHERE Air Fryer Oven, with a recipe book open, highlighting the included cooking guide.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

## 5.1 Before Cleaning

- Always unplug the air fryer oven from the power outlet and allow it to cool down completely before cleaning.

## 5.2 Cleaning the Interior

- The interior features a non-stick coating for easy cleaning. Wipe with a damp cloth and mild detergent.
- For stubborn food residue, use a non-abrasive sponge or brush. Avoid metal scouring pads.
- Remove and empty the crumb tray after each use. Wash it with warm, soapy water.

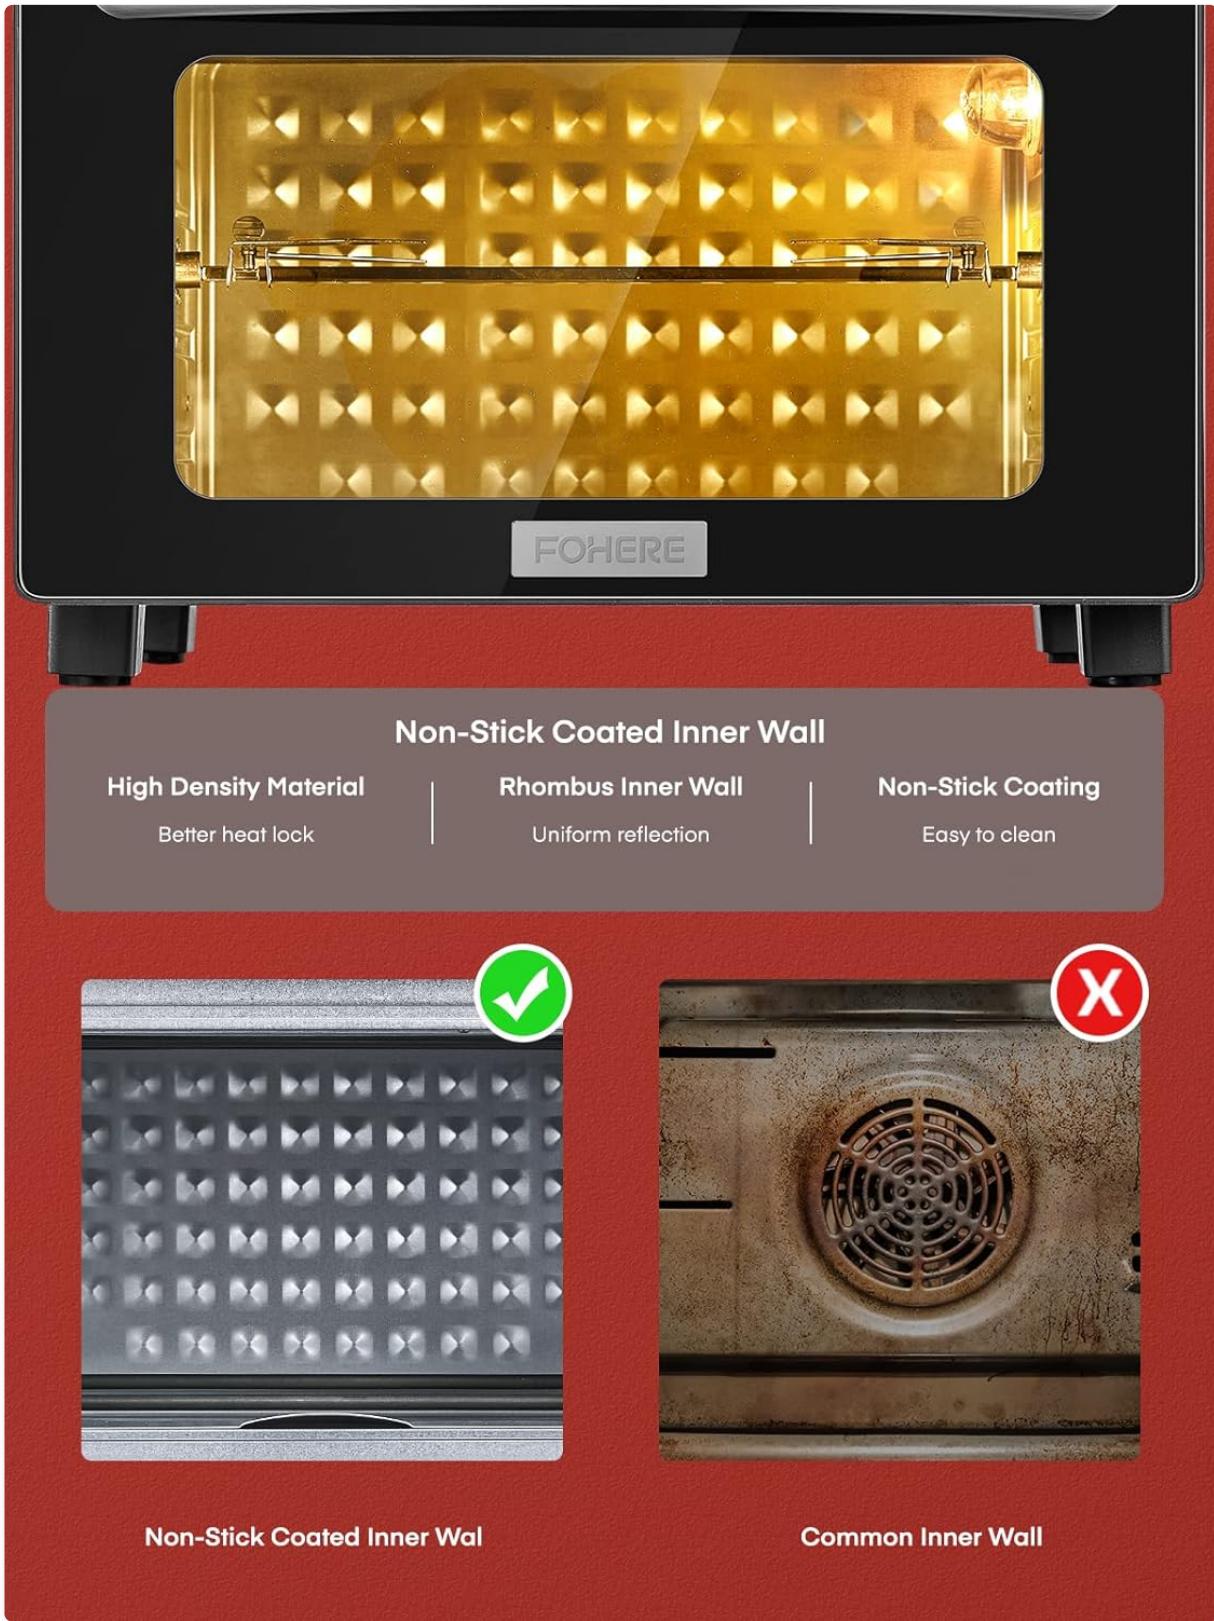


Image 6: A detailed view of the non-stick coated inner wall, designed for easy cleaning and uniform heat reflection.

### 5.3 Cleaning Accessories

- All removable accessories (air fryer basket, baking rack, baking tray, rotisserie fork, crumb tray) are dishwasher safe.
- Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge.
- Ensure all accessories are completely dry before storing or reusing.

### 5.4 Cleaning the Exterior

- Wipe the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 6. TROUBLESHOOTING

If you encounter any issues with your FOHERE Air Fryer Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet issue; Timer not set.	Ensure the power cord is securely plugged into a working outlet. Set the timer and temperature knobs.
Food is not cooking evenly	Overcrowding; Incorrect temperature/time; Food not flipped/shaken.	Cook in smaller batches. Adjust temperature and time as per recipe. Shake or flip food halfway through.
White smoke coming from the appliance	Grease/oil residue; Fatty food cooking.	Clean the interior and accessories thoroughly. For fatty foods, ensure the crumb tray is clean and consider using less oil.
Food is not crispy	Too much moisture; Overcrowding; Not enough oil (for air frying).	Pat food dry before cooking. Do not overcrowd. Lightly brush food with oil for crispier results.

If the problem persists after trying these solutions, please contact customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	FOHERE
Model	23L XXL 1700W Air Fryer Oven
Color	Black
Product Dimensions (L x W x H)	41.5 x 41 x 37.5 cm (16.3 x 16.1 x 14.8 inches)
Capacity	23 Liters
Power	1700 Watts
Voltage	220 Volts
Material	Stainless Steel
Item Weight	10.83 Kilograms (23.88 lbs)
Temperature Range	80°C - 230°C (170°F - 450°F)
Timer	Up to 60 minutes
Special Features	4 easy-to-use buttons, 1700W rapid heating, 6 mode functions, 360° air convection technology, 23L large capacity, 6 free accessories.

## 8. WARRANTY AND SUPPORT

Information regarding the product warranty and customer support details is not available in this instruction manual. Please refer to the product packaging, the official FOHERE website, or your point of purchase for specific warranty terms and contact information for support.

© 2024 FOHERE. All rights reserved.