

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Shark](#) /

> [Shark EVOPOWER SYSTEM ADV Cordless Stick Cleaner CS601J User Manual](#)

Shark CS601J

Shark EVOPOWER SYSTEM ADV Cordless Stick Cleaner CS601J User Manual

Model: CS601J | Brand: Shark

INTRODUCTION

Thank you for purchasing the Shark EVOPOWER SYSTEM ADV Cordless Stick Cleaner CS601J. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

The Shark EVOPOWER SYSTEM ADV is designed for powerful and convenient cleaning. It features an advanced Hybrid Power Clean head that prevents hair tangles, extended battery life with a dual battery system, and multiple cleaning modes to suit various tasks. Its versatile design allows for easy conversion to a handheld unit for cleaning furniture and tight spaces, and its hygienic one-touch dust disposal system simplifies maintenance.



Image: The Shark EVOPOWER SYSTEM ADV Cordless Stick Cleaner CS601J, available in black metallic and sand pink, shown with its charging dock and accessories.

SETUP AND ASSEMBLY

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the packing list are present.

2. Assembly:

- Insert the wand into the floor nozzle until it clicks securely into place.
- Insert the handheld vacuum into the top of the wand until it clicks securely into place.

3. Charging the Battery:

The vacuum cleaner is powered by a rechargeable battery. For optimal performance, fully charge the battery before first use. The system includes a dual battery setup, allowing one battery to charge while the other is in use.



ブーストモード

大きめのゴミや多めのゴミを取り除く時、
時短でお掃除したい時に



エコモード

音に敏感なペットやお子様のいらっしゃる
ご家庭や夜間など、音が気になる時に



標準モード

吸引力と駆動時間が最適化されたモード。
普段のお掃除に

3つのモードでさまざまなお掃除シーンに対応

Image: A user inserting the battery into the handheld unit and placing a spare battery into the charging dock.

- Connect the charging adapter to the charging dock and plug it into a power outlet.
- Place the vacuum cleaner onto the charging dock, or insert the spare battery directly into the charging slot on the dock.
- The battery indicator lights will show the charging status.

Power On/Off

Press the power button located on the handheld unit to turn the vacuum on or off.

Selecting Cleaning Modes

The Shark EVOPOWER SYSTEM ADV offers three cleaning modes to adapt to different cleaning needs:



ハンディ部分が1kg未満の製品の中で
最も強力な吸引力*

*自社テストによる。IEC 62885-4cl 5.8に基づきブーストモードで測定。15製品と比較（2021年7月現在）

Image: A visual representation of the control panel indicating Boost, Eco, and Standard modes.

- **Standard Mode:** Optimized balance of suction power and runtime for everyday cleaning.
- **Boost Mode:** Provides maximum suction for larger debris or heavily soiled areas. Use when powerful cleaning is needed for a shorter duration.
- **Eco Mode:** Designed for quieter operation and extended runtime, ideal for sensitive environments or nighttime cleaning.

Using as a Stick Vacuum

For floor cleaning, ensure the handheld unit is attached to the wand and floor nozzle. Glide the vacuum over the surface. The Hybrid Power Clean head is designed to effectively pick up debris without hair tangles.



Image: A person demonstrating the use of the Shark EVOPOWER SYSTEM ADV Cordless Stick Cleaner on a hard floor.

Using as a Handheld Vacuum

To convert to a handheld vacuum, press the release button on the wand to detach the handheld unit. Attach desired accessories for cleaning upholstery, car interiors, or tight spaces.



髪の毛もペットの毛も絡まない*

*自社テストによる。長さ45cmの毛0.25グラムを
0.6㎡のフローリングで10サイクルテストした結果

Image: The handheld unit of the Shark vacuum being used to clean up debris.

MAINTENANCE

Emptying the Dust Cup

Empty the dust cup regularly to maintain optimal suction power. The one-touch dust disposal system allows for hygienic emptying without direct contact with debris.

1. Hold the handheld unit over a trash bin.
2. Press the dust cup release button to open the bottom flap and empty the contents.
3. Close the dust cup flap securely until it clicks.

Cleaning the Filter and Dust Cup

The dust cup and filter are washable. Clean them periodically to ensure efficient operation.



インテリアのようにお部屋に出しておけるデザイン

Image: A user washing the dust cup and filter under running water.

1. Detach the dust cup from the handheld unit.
2. Remove the filter from the dust cup.
3. Rinse the dust cup and filter with cold water until the water runs clear.
4. Allow all parts to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating methods.

Cleaning the Brush Roll

While the Hybrid Power Clean head is designed to be tangle-free, it is recommended to periodically inspect the brush roll for any accumulated debris or hair that may affect performance.



お掃除をもっと快適に。
進化したシステムクリーナー

Image: A close-up view of the Hybrid Power Clean brush head demonstrating its ability to pick up debris.



シャーク独自の新開発ヘッド 「ハイブリッドパワークリーン」

Image: A comparison showing a traditional vacuum head with tangled hair versus the Shark Hybrid Power Clean head, which remains clear.

1. Ensure the vacuum is turned off and disconnected from power.
2. Access the brush roll compartment (refer to the quick start guide for specific instructions on opening the floor nozzle).
3. Remove any debris or hair if necessary.
4. Reassemble the brush roll and close the compartment securely.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly inserted.	Ensure the battery is fully charged and securely inserted into the handheld unit.

Problem	Possible Cause	Solution
Reduced suction power	Dust cup is full, filter is dirty, or there is a blockage.	Empty the dust cup. Clean the filter. Check for and remove any blockages in the nozzle, wand, or hose.
Brush roll not spinning	Debris is tangled in the brush roll or the floor nozzle is blocked.	Turn off the vacuum and remove any obstructions from the brush roll. Ensure the floor nozzle is clear.
Battery not charging	Charger not connected, or battery/charger issue.	Ensure the charging adapter is securely plugged into both the dock and the wall outlet. Verify the battery is correctly placed in the charging dock.

SPECIFICATIONS

- **Brand:** Shark
- **Model Number:** CS601J
- **Color:** Black Metallic
- **Dimensions (Package):** 56.8 x 31.1 x 22.5 cm
- **Weight (Package):** 5.57 Kilograms
- **Power Source:** Battery Powered
- **Filter Type:** Cartridge
- **Recommended Use:** Hard Floor
- **Special Feature:** Lightweight design, Tangle-free brush roll

WARRANTY AND SUPPORT

The manufacturer's warranty applies only to products purchased from "SharkNinja" or our authorized retailers. Product registration is required to receive warranty service. Please register your product after arrival. The warranty period may vary by product; please refer to the official Shark website or the documentation included with your purchase for specific details.

For further assistance, troubleshooting, or to inquire about replacement parts, please contact Shark customer support through their official website or the contact information provided in your product packaging.