

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fashionit](#) /

› [Fashionit U Speakers Micro Portable Wireless Bluetooth Speaker and Insulated Canteen Manual](#)

Fashionit U Speakers Micro

Fashionit U Speakers Micro Portable Wireless Bluetooth Speaker and Insulated Canteen User Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Fashionit U Speakers Micro Portable Wireless Bluetooth Speaker and Insulated Canteen bundle. Please read this manual thoroughly before operating the products and retain it for future reference.

WHAT'S IN THE BOX

- 1 x U Speakers Micro Portable Wireless Bluetooth Speaker (Black)
- 1 x Insulated Galaxy Far Away 16 oz. Canteen Bottle (White)
- 1 x Micro USB to USB Charging Cord

PRODUCT OVERVIEW

The Fashionit bundle combines a compact Bluetooth speaker with an insulated water bottle, designed for active lifestyles.



Image: The complete Fashionit bundle, featuring the U Speakers Micro Bluetooth speaker and the insulated canteen bottle.

U Speakers Micro Bluetooth Speaker

This coin-sized wireless speaker offers Bluetooth 5.0 connectivity, a built-in microphone for hands-free calls, and a remote selfie button. It features a durable aluminum shell and delivers clear stereo sound.



Image: A detailed view of the U Speakers Micro Bluetooth Speaker, showcasing its compact design and speaker grille.

Insulated Canteen Bottle

The 16 oz. stainless-steel canteen is triple-insulated to keep drinks cold for up to 25 hours and hot for up to 12 hours. It features ergonomic flat sides, a non-slip silicone bottom, and a leakproof screw-on cap.



Image: The insulated canteen bottle, highlighting its design and pattern.

SETUP

Speaker Initial Setup

1. **Charging:** Before first use, fully charge the speaker. Connect the provided Micro USB cable to the speaker's charging port and the other end to a USB power source (e.g., computer, wall adapter). The charging indicator light will show charging status.
2. **Power On:** Press and hold the power button until you hear an audible prompt or see an indicator light.

Canteen Initial Setup

1. **Cleaning:** Wash the canteen bottle and cap thoroughly with warm, soapy water before first use. Rinse completely.

OPERATING INSTRUCTIONS

Speaker Operation

1. Bluetooth Pairing:

- Ensure the speaker is powered on and in pairing mode (indicated by a flashing LED).
- On your device (smartphone, tablet), enable Bluetooth and search for available devices.
- Select "U Speakers Micro" from the list. Once paired, the speaker will indicate a successful connection.

2. **Audio Playback:** After pairing, play audio from your connected device. The speaker will output the sound.

3. **Hands-Free Calling:** When connected to a smartphone, incoming calls will be routed through the speaker. Press the multi-function button (usually the power button) once to answer or end a call.

4. **Selfie Remote:** Open your device's camera app. With the speaker connected via Bluetooth, press the multi-function button on the speaker to remotely trigger your device's camera shutter.

5. **Power Off:** Press and hold the power button until you hear an audible prompt or the indicator light turns off.

Canteen Operation

1. **Filling:** Fill the canteen with your desired beverage. Do not overfill; leave some space below the cap.

2. **Sealing:** Securely screw on the cap to ensure a leakproof seal and maintain temperature.

3. **Temperature Retention:** The triple insulation keeps cold drinks cold for up to 25 hours and hot drinks hot for up to 12 hours.

MAINTENANCE

Speaker Maintenance

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.

Canteen Maintenance

- **Cleaning:** Hand wash the canteen bottle and cap with warm, soapy water. Use a bottle brush for thorough cleaning. Rinse thoroughly.
- **Drying:** Allow all parts to air dry completely before reassembling or storing to prevent odor and mildew.
- **Do Not Dishwash:** The canteen is not dishwasher safe.
- **Do Not Microwave:** Do not place the canteen in a microwave.

TROUBLESHOOTING

Speaker Issues

- **Speaker will not power on:** Ensure the speaker is charged. Connect it to a power source using the Micro USB cable.

- **Cannot pair with device:**

- Ensure the speaker is in pairing mode (flashing LED).
- Make sure Bluetooth is enabled on your device.
- Move the speaker closer to your device.
- Turn off and on both the speaker and your device, then try pairing again.

- **No sound:**

- Check if the speaker is successfully paired and connected to your device.
- Adjust the volume on both the speaker and your connected device.
- Ensure the audio source on your device is playing.

- **Selfie remote not working:** Ensure the speaker is paired and connected. Verify your camera app is open and active.

SPECIFICATIONS

Feature	Detail
Brand	Fashionit
Speaker Dimensions	34mm x 29.5mm (1.33" x 1.16")
Speaker Weight	37g (1.3 oz.)
Battery Capacity	220 mAh
Playback Time	Up to 3 hours
Connectivity Technology	Bluetooth 5.0, USB
Control Method	Remote
Audio Output Mode	Stereo
Canteen Capacity	16 oz.
Canteen Material	Stainless Steel (BPA Free)
Canteen Insulation	Triple-insulated
Package Dimensions	10 x 7 x 5 inches
Item Weight	2 pounds (total bundle)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Fashionit website. Keep your proof of purchase for any warranty claims.

Manufacturer: Fashionit

ASIN: B09WWS5ST2

UPC: 840104308196

