

Manuals.plus /

› HADEN /

› Haden Heritage 2 Slice Wide Slot Stainless Steel Toaster User Manual

HADEN Heritage2S

Haden Heritage 2 Slice Wide Slot Stainless Steel Toaster

Model: Heritage2S | Brand: HADEN

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Always use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use outdoors.
- Do not use the appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not leave appliance unattended when in use.

PRODUCT OVERVIEW

The Haden Heritage 2 Slice Toaster combines classic design with modern engineering to enhance your

kitchen experience. It features two wide slots, a self-centering function for even toasting, and non-slip feet for stability on your countertop. This toaster is designed for convenience and performance, offering adjustable browning control and specialized settings for various bread types.



Figure 1: The Haden Heritage 2 Slice Toaster in Black and Copper, showcasing its sleek design and compact form factor.

Key features include a premium coated stainless steel housing with elegant copper accents, ensuring durability and a sophisticated look. The toaster also boasts 900W of power and a 32-inch power cord for flexible placement.



HERITAGE BLACK & COPPER

2-SLICE TOASTER



Convenient cancel, defrost, and bagel settings.



Self-centering function keeps bread in the perfect toasting position.



Non-slip rubberized feet provide stability.



Boasts 900W of power with a 32" power cord.

Figure 2: Visual representation of the toaster's main features, including wide slots for various bread types, a self-centering function for even toasting, non-slip rubberized feet for stability, and its 900W power rating.

SETUP

Before first use, unpack the toaster and remove all packaging materials. Place the toaster on a stable, heat-resistant surface, away from walls, curtains, and other flammable materials. Ensure there is adequate ventilation around the appliance.

It is recommended to operate the toaster for the first time without bread on the highest setting (6) to burn off any manufacturing residues. A slight odor or smoke may be present during this initial use; this is normal and will dissipate. Allow the toaster to cool completely before subsequent use.

OPERATING INSTRUCTIONS

The Haden Heritage Toaster offers intuitive controls for perfect toasting results.

1. **Insert Bread:** Place up to two slices of bread, bagels, or waffles into the wide toasting slots. The

self-centering guides will automatically adjust to hold the bread in the optimal position for even browning.

2. **Select Browning Level:** Use the browning control dial on the front of the toaster to select your desired toast shade, from 1 (lightest) to 6 (darkest). The dial provides a tactile click for precise selection.



Figure 3: Detailed view of the browning control dial and function buttons (Cancel, Bagel, Defrost).

3. **Lower Lever:** Push the toast lever down until it locks into place. The toasting cycle will begin, and the indicator light for the selected function (if any) will illuminate.

4. **Special Functions:**

- **CANCEL Button:** Press this button at any time to stop the toasting cycle and eject the bread.
- **BAGEL Button:** Press this button after lowering the lever to toast bagels. This setting toasts the cut side of the bagel while gently warming the outer side.
- **DEFROST Button:** Press this button after lowering the lever to defrost and toast frozen bread. This setting adds extra time to the toasting cycle to account for the frozen state of the bread.

5. **Toasting Complete:** Once the toasting cycle is complete, the toast will automatically pop up. The high-lift lever allows for easy removal of smaller items without burning your fingers.

Your browser does not support the video tag.

Video 1: An official product video demonstrating the features and operation of the HADEN Heritage Stainless Steel

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and appearance of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Empty Crumb Tray:** The toaster features a removable crumb tray located at the bottom. Slide out the tray, discard crumbs, and wipe it clean with a damp cloth. Ensure the tray is completely dry before reinserting it.



Figure 4: The toaster's dimensions are approximately 11.5 inches deep, 7.5 inches wide, and 7.5 inches high, making it a compact appliance for most kitchen counters.

3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface. For stubborn marks, a mild detergent can be used, followed by wiping with a clean, damp cloth and drying thoroughly.
4. **Do Not Immerse:** Never immerse the toaster, power cord, or plug in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your Haden Heritage Toaster, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet issue; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your household circuit breaker.
Bread is not toasting evenly.	Inconsistent bread thickness; browning setting too high/low; internal element issue.	Ensure bread slices are of uniform thickness. Adjust the browning dial to a lower or higher setting. For persistent uneven toasting, contact customer support.
Smoke coming from toaster.	Crumbs accumulated in the bottom; food stuck in slots; initial burn-off.	Unplug and allow to cool. Empty the crumb tray. If food is stuck, carefully remove it with non-metallic tongs. Initial smoke is normal for first use.
Toast lever does not stay down.	Toaster not plugged in; internal mechanism issue.	Ensure the toaster is plugged into a live electrical outlet. If the issue persists, contact customer support.

If the problem persists after trying these solutions, please contact Haden customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	HADEN
Model	Heritage2S
Color	Black & Copper
Material	Stainless Steel
Product Dimensions (D x W x H)	11.5"D x 7.5"W x 7.5"H
Number of Slices	2
Wattage	900 watts
Voltage	120 Volts
Number of Browning Settings	6
Special Features	Cancel Function, Bagel Setting, Defrost Setting, Wide Slots, Self-Centering, Removable Crumb Tray, Non-Slip Feet
Item Weight	2.6 Pounds

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official user manual provided with your product or visit the HADEN website. You can also find a digital version of the user manual [here](#).

For any technical assistance or inquiries, please contact HADEN customer service.