

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FOHERE](#) /

› [FOHERE Automatic Yogurt Maker Instruction Manual](#)

FOHERE B09WY6P2WK

FOHERE Automatic Yogurt Maker Instruction Manual

Model: B09WY6P2WK

INTRODUCTION

Thank you for choosing the FOHERE Automatic Yogurt Maker. This appliance allows you to easily prepare delicious and healthy homemade yogurt. Please read this manual carefully before use to ensure proper operation and maintenance.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than intended use.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Use caution when handling hot liquids or steam.

PRODUCT COMPONENTS

The FOHERE Automatic Yogurt Maker consists of the following parts:

- Main Unit (Stainless Steel Body with heating element and control panel)
- Transparent Lid
- 7 Glass Jars (180ml each) with Lids

- Power Cord

Super Facile à Utiliser

Savourez un yaourt frais et délicieux en 3 étapes faciles



NO.4 Une fois le yaourt préparé, ajoutez des fruits selon votre goût



Image: The FOHERE Automatic Yogurt Maker with its main unit, transparent lid, and seven glass jars.

FOHERE



Image: A close-up view of the seven glass jars, highlighting their capacity and reusability.



Image: Close-up of the stainless steel body and glass jars, emphasizing material safety and durability.

SETUP AND FIRST USE

1. Unpack all components and remove any packaging materials.
2. Wash the glass jars and their lids thoroughly with warm, soapy water. Rinse and dry completely.
3. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
4. Place the yogurt maker on a stable, flat, and dry surface.
5. Ensure the power cord is not damaged and is placed away from heat sources.

OPERATING INSTRUCTIONS: MAKING YOGURT

Follow these simple steps to make homemade yogurt:

Fohere Yaourtière Maison



7 Bocalux en
Verre de 200 ml



Affichage LCD



Opération Simple



Image: Visual guide showing the three main steps for yogurt preparation: mixing ingredients, pouring into jars, and setting the timer.

1. Prepare the Mixture:

- Pour 800-1000ml of pure milk into a clean pitcher.
- Add 1 packet (1g) of yogurt starter culture powder to the milk.
- Stir the mixture gently until the powder is fully dissolved and evenly distributed.

2. Fill the Jars:

- Carefully pour the milk and starter mixture into the 7 individual glass jars.
- Place the lids on the glass jars.
- Arrange the filled and covered jars inside the yogurt maker's main unit.
- Place the transparent lid over the entire unit.

3. Set the Fermentation Time:

Your browser does not support the video tag.

Video: A short demonstration of the yogurt making process, including mixing ingredients, filling jars, and setting the timer. This video is a preview and approximately 7 seconds long.

- Plug in the yogurt maker. The LCD display will illuminate.
- Press the power button to turn on the machine.
- Use the '+' and '-' buttons to adjust the fermentation time. A common recommendation is 8 to 10 hours. Longer fermentation times generally result in thicker yogurt.
- Once the desired time is set, the machine will automatically start the fermentation process. The PTC heating element will maintain a constant temperature between 35°C and 45°C.

4. Completion:

- When the fermentation time is complete, the machine will automatically shut off and emit a beep.

- Carefully remove the jars from the yogurt maker.
- Allow the yogurt to cool to room temperature, then refrigerate for at least 2-3 hours before serving. This helps the yogurt set further and improves texture.

5. Serving Suggestion:

- Once chilled, enjoy your homemade yogurt. You can add honey, jam, nuts, cereals, or fresh fruits according to your preference.

18W Consommation d'énergie

Préparez le yogourt avec
moins de consommation d'énergie

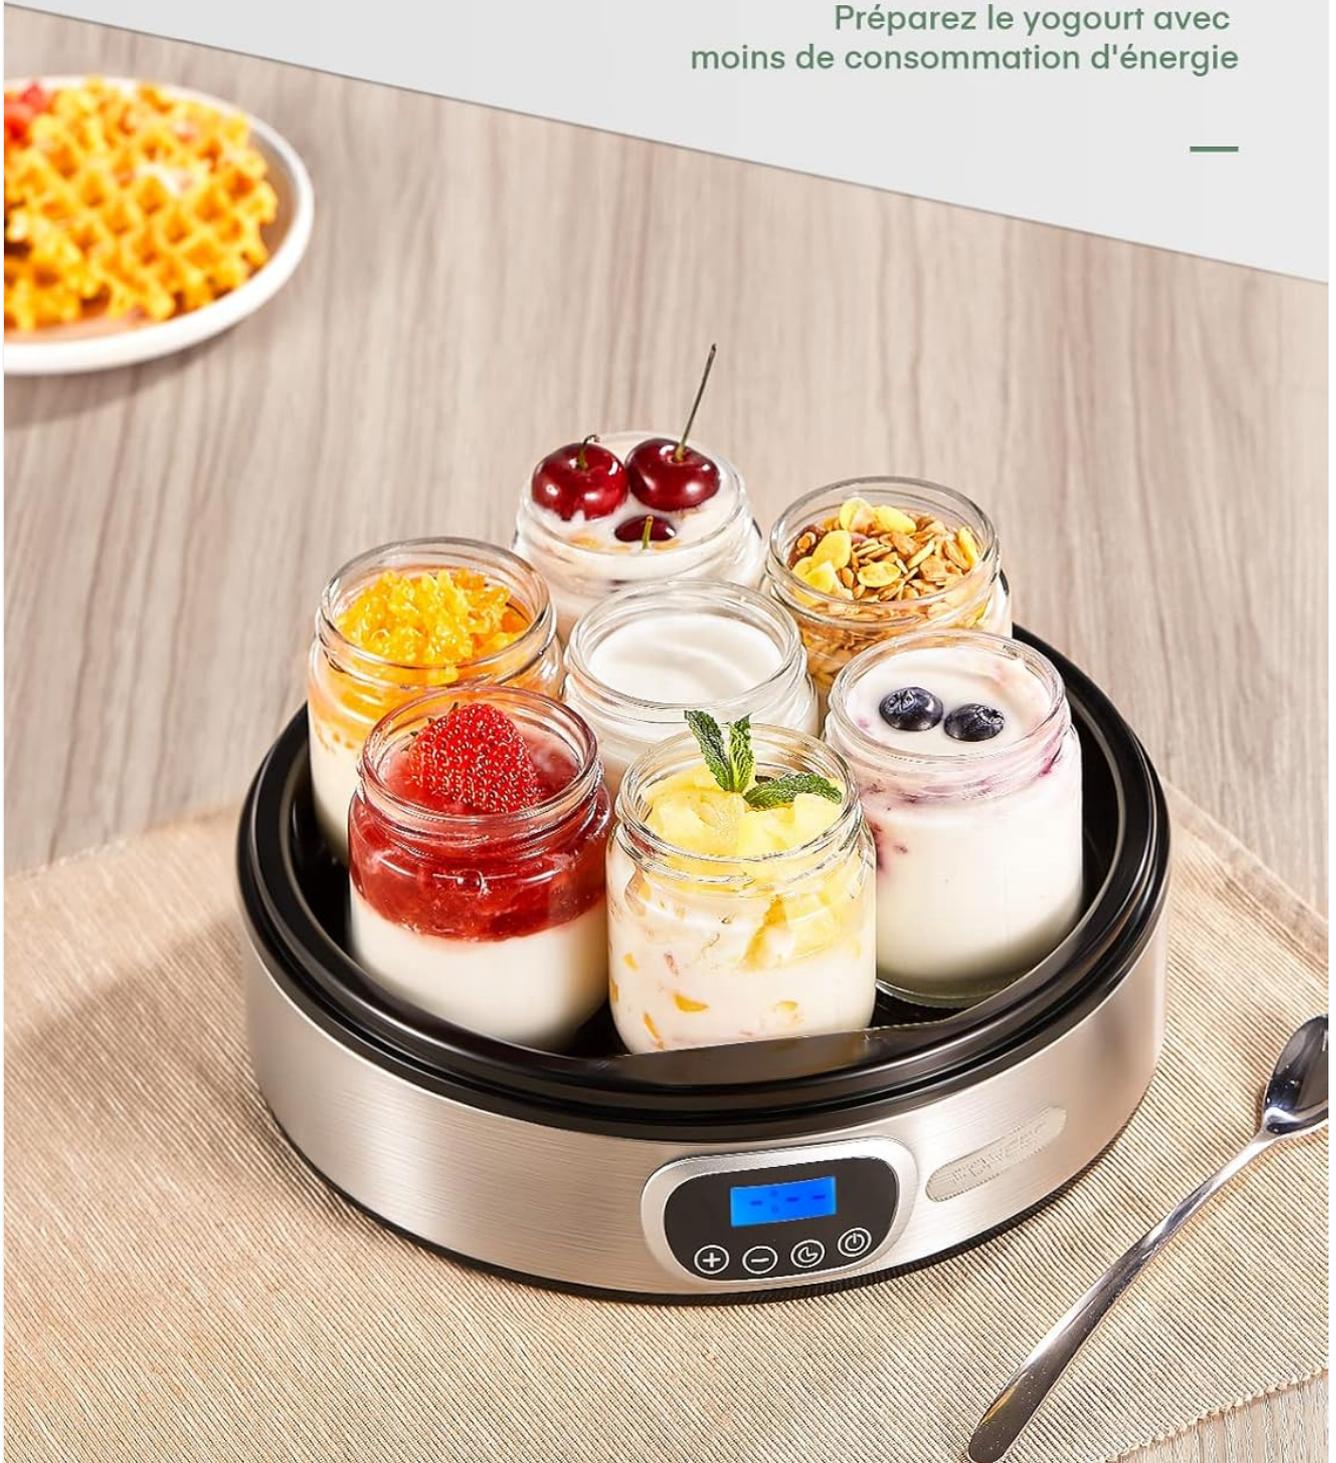


Image: Seven individual yogurt jars topped with different fruits and ingredients, showcasing customization options.

Faire 7 Tasses de Yaourt à la Fois

Savourez un yaourt frais avec une saveur différente avec la famille



Image: The yogurt maker's LCD display, illustrating the timer function for precise fermentation control.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your yogurt maker.

1. Always unplug the appliance before cleaning and allow it to cool completely.
2. The glass jars and their lids are reusable and dishwasher safe. They can also be washed by hand with warm, soapy water.
3. Wipe the exterior of the main unit and the transparent lid with a soft, damp cloth. For stubborn stains, use a mild detergent.
4. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surfaces.
5. Ensure all parts are completely dry before storing or next use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Yogurt is too thin/liquid.	Insufficient fermentation time; low quality milk or starter; incorrect temperature.	Increase fermentation time (e.g., to 10-12 hours). Ensure fresh milk and active starter are used. Verify the lid is properly closed.
Yogurt is too sour.	Excessive fermentation time.	Reduce fermentation time for future batches.
Machine does not turn on.	Not plugged in; power outage; faulty power cord.	Check if the power cord is securely plugged into a working outlet. Check your home's circuit breaker. If the cord is damaged, contact customer support.

Problem	Possible Cause	Solution
LCD display not working.	Power issue; internal malfunction.	Ensure the machine is powered on. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	FOHERE
Model	B09WY6P2WK
Color	Silver
Dimensions (L x W x H)	24.5 x 24.5 x 15 cm
Weight	2.51 Kilograms
Jar Volume	7 x 180 ml (Total 1260 ml)
Power	18 Watts
Material	Stainless Steel body, Glass jars
Features	LCD display, Timer function, Automatic temperature control (35-45°C), Low power consumption



Image: The compact design of the yogurt maker, showing its dimensions for easy storage.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact FOHERE customer service through the retailer where the product was purchased. Please have your model number (B09WY6P2WK) ready when contacting support.