

Bisofice A40

OUR STORY

Bisofice PeriPage A40 Portable Thermal Printer

USER MANUAL

1. Introduction

1.1 Welcome

Thank you for choosing the Bisofice PeriPage A40 Portable Thermal Printer. This manual provides essential information for setting up, operating, and maintaining your printer. Please read it carefully to ensure optimal performance and longevity of your device.

1.2 Product Overview and Key Features

The PeriPage A40 is a versatile and portable thermal printer designed for various printing needs, from documents to photos. It offers convenience and efficiency without the need for ink, toner, or ribbons.

- **High Quality Printing:** Supports flexible paper widths of 210mm (A4), 107mm (4"), 77mm (3"), and 56mm (2"). Compatible with both roll and folding paper. Supports multiple file formats including Word, Excel, PPT, TXT, and JPG.
- **Inkless Thermal Technology:** Utilizes advanced thermal printing, eliminating the need for costly ink, toner, or ribbons, ensuring clear and cost-effective prints.
- **Portable Design & Long Battery Life:** Compact and lightweight, similar in size to a pencil case, making it ideal for travel, home, or office use. Features two built-in 2600mAh rechargeable batteries, providing up to 3 hours of continuous printing and a standby time of 90 days.

Small & Delicate But Useful

Lighter weight and
smaller size

Thermal printing & inkless
save your cost

The HD print head can print at least
50km (approximately equal to **168,000**
sheets of A4 paper)

Image: The compact and lightweight design of the PeriPage A40 printer, highlighting its portability.

1.3 Package Contents

Please ensure all items are present in your package:

- Bisofice PeriPage A40 Portable Thermal Printer
- Thermal Paper (sample roll/sheets)
- USB-C Charging Cable
- User Manual (this document, also available as PDF online)

2. Setup

2.1 Charging the Printer

Before first use, fully charge the printer. Connect the included USB-C cable to the printer's Type-C port and plug the other end into a compatible USB power adapter (not included) or computer USB port. The charging indicator light will provide status.



Long Standby Time **5200mAh**

Built-in battery/Type-C
port power connection
gives you a mobile
office to print on the go

90 Days
Long Standby Time

3 Hours
Continuous Print 3 Hours
as Full Charge

360 Sheets
360 Sheets Can Be Printed
as Full Charge

Image: The PeriPage A40 printer, emphasizing its 5200mAh battery and long standby time capabilities.

2.2 Loading Paper

The PeriPage A40 supports both roll paper and folding paper. To load paper:

1. Open the paper compartment cover.
2. Insert the paper roll or stack of folding paper, ensuring the printing side faces the print head.
3. Adjust the built-in clip to match the width of your paper (210mm, 107mm, 77mm, or 56mm).
4. Close the paper compartment cover, leaving a small portion of paper extended from the output slot.

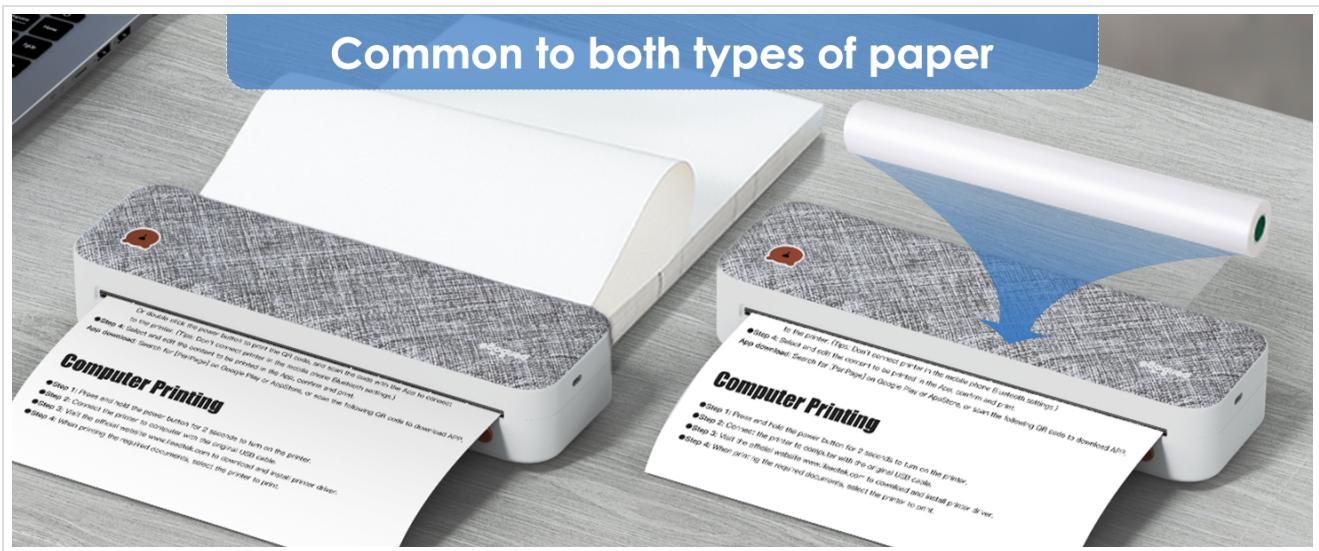 


Image: Illustration demonstrating how the PeriPage A40 printer accommodates both roll and folding paper types.

2.3 Installing the Mobile App (for Android and iOS)

For mobile printing, download the official PeriPage app:

1. Search for "PeriPage" in your device's App Store (iOS) or Google Play Store (Android).
2. Download and install the app.
3. Open the app and select your preferred language after installation.

How to Download PeriPage App ?

1 Search "PeriPage" in APP Store

GET IT ON
Google Play

GET IT ON
App Store

Or

2 Scan QR Code to Download

→

→

Image: Visual guide on how to download the PeriPage app from app stores or via QR code, and selecting the language.

2.4 Installing Drivers (for Windows and Mac)

For computer printing, you will need to install the appropriate drivers:

1. Visit the official website: <https://www.ileadtek.com/en/download.html>
2. Click on "Windows Driver Download" or locate the Mac driver.
3. Select the A4 Series driver corresponding to your operating system.
4. Follow the on-screen instructions to complete the driver installation.

How to Download Driver on your Computer?

Step 1: Visit the official website - <https://www.ileadtek.com/en/download.html>

Step 2: Click " Windows Driver Download"

Step 3: Choose the A4 Series, tab to download the driver according your computer system.

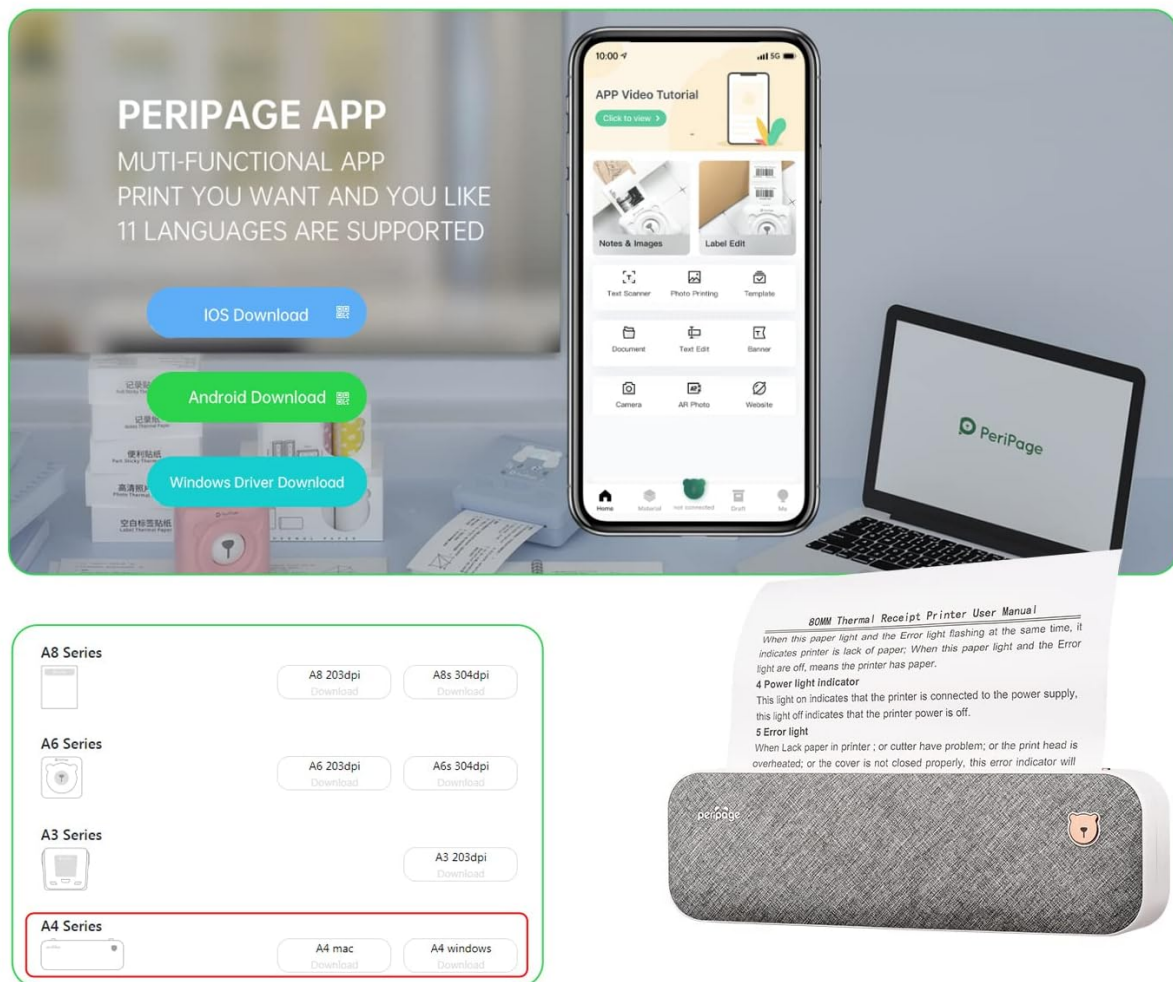 


Image: A screenshot of the PeriPage app and driver download page, illustrating the process to download drivers for Windows and Mac computers.

3. Operation

3.1 Powering On/Off

To power on the printer, press and hold the power button for 2 seconds. The indicator light will illuminate. To power off, press and hold the power button again for 2 seconds until the indicator light turns off.

3.2 Mobile Printing (Bluetooth Connection)

Once the PeriPage app is installed:

1. Ensure your printer is powered on and Bluetooth is enabled on your mobile device.
2. Open the PeriPage app and search for available devices.
3. Select your PeriPage A40 printer from the list to connect.
4. Once connected, you can select documents, photos, or templates within the app to print.

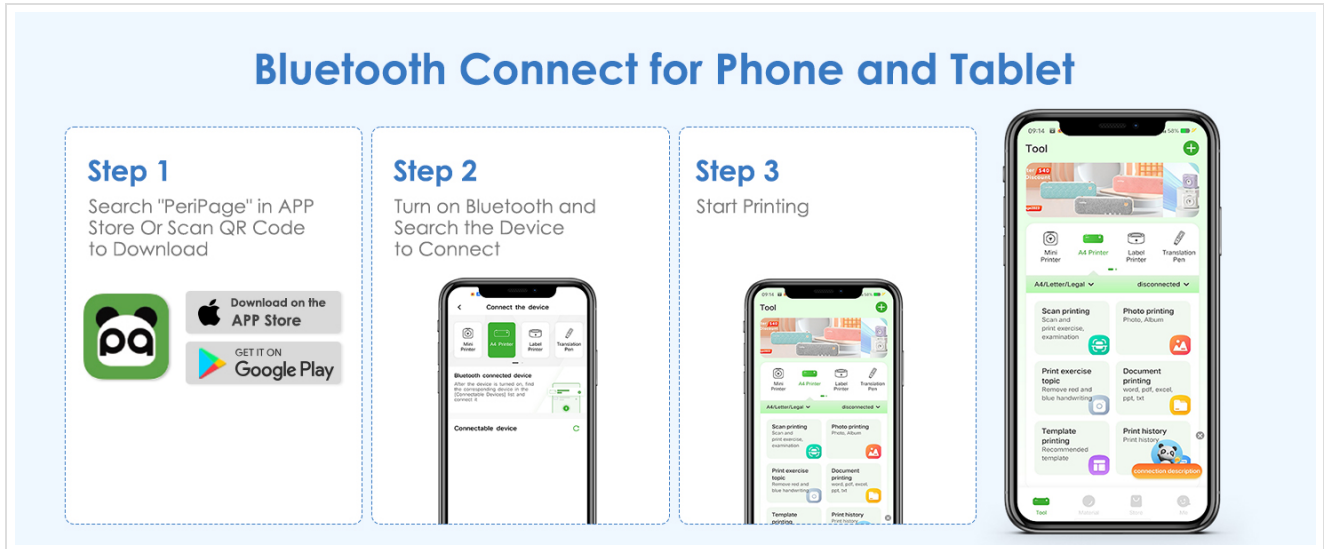 


Image: Step-by-step guide on how to connect the PeriPage A40 printer to a phone or tablet via Bluetooth for mobile printing.

3.3 Computer Printing (USB Connection)

After installing the printer drivers:

1. Connect your PeriPage A40 printer to your computer using the provided USB-C cable.
2. Ensure the printer is powered on.
3. Open the document or image you wish to print on your computer.
4. Select the PeriPage A40 from your printer options and proceed with printing.

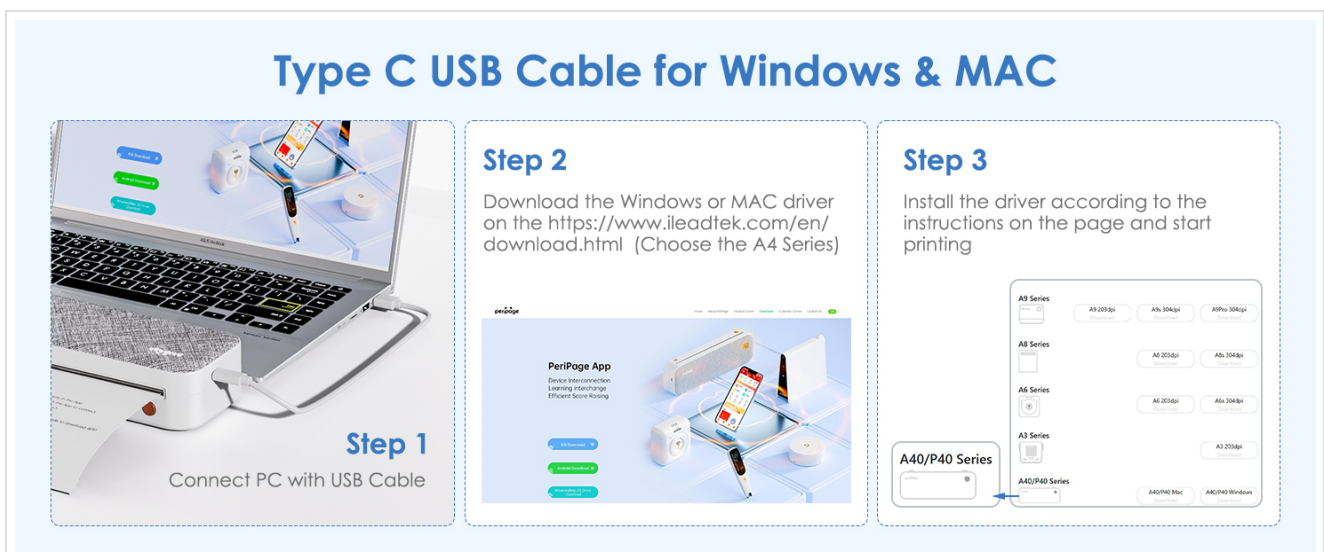 


Image: Instructions on connecting the PeriPage A40 printer to Windows and Mac computers using a USB-C cable and installing drivers for printing.

3.4 Printing Quality

The PeriPage A40 utilizes thermal printing technology to produce clear and legible text and images without the need for ink. For best results, use high-quality thermal paper.



Image: An example of the high-quality output from the PeriPage A40 printer, demonstrating clarity and detail.

4. Maintenance

4.1 Cleaning the Print Head

To maintain optimal print quality, regularly clean the print head. Use a soft, lint-free cloth lightly dampened with isopropyl alcohol. Gently wipe the print head surface. Ensure the printer is off and cool before cleaning.

4.2 Paper Handling and Storage

Store thermal paper in a cool, dry place away from direct sunlight and heat to prevent premature fading or damage. Always use thermal paper specifically designed for thermal printers.

4.3 Battery Care

To prolong battery life, avoid fully discharging the printer frequently. Charge the printer regularly, even if not in constant use. If storing for an extended period, charge the battery to about 50% and store in a cool, dry place.

5. Troubleshooting

5.1 Common Issues and Solutions

Issue	Possible Cause	Solution
Printer not turning on	Low battery; Power button not pressed correctly	Charge the printer; Press and hold the power button for 2 seconds.
No print output / Blank page	Paper loaded incorrectly; Out of paper; Print head dirty	Ensure paper is loaded correctly with printing side facing up; Load new paper; Clean the print head.
Poor print quality (faint, streaky)	Low battery; Dirty print head; Old/poor quality thermal paper	Charge the printer; Clean the print head; Use fresh, high-quality thermal paper.

Issue	Possible Cause	Solution
Bluetooth connection failure	Bluetooth off; Printer not discoverable; App issue	Ensure Bluetooth is on for both devices; Restart printer and app; Re-pair the device in app settings.
Error light illuminated	Paper jam; Cover not closed properly; Overheating	Check for paper jams and clear; Ensure paper compartment cover is securely closed; Allow printer to cool down.

5.2 Customer Support

If you encounter issues not covered in this manual or require further assistance, please contact Bisofice customer service. We are committed to providing video tutorials, printing tips, and remote help to ensure your satisfaction.

6. Specifications

Feature	Detail
Model Name	A40
Product Dimensions	12"D x 9"W x 2"H (approx. 30.5cm x 22.9cm x 5.1cm)
Item Weight	1.45 pounds (approx. 658 grams)
Printing Technology	Thermal
Maximum Media Size	A4
Supported Paper Widths	210mm (A4), 107mm (4"), 77mm (3"), 56mm (2")
Max Copy Speed (Black & White)	20 ppm
Max Copy Resolution (Black & White)	203 dpi
Connectivity Technology	Bluetooth, USB, Wi-Fi
Compatible Devices	PC, Smartphones (Android, iOS)
Control Method	App
Battery	2 x 2600mAh Lithium Metal (included)
Battery Wattage	5200 milliamp_hours
Continuous Print Time	3 hours (after full charge)
Standby Time	90 days
Included Components	Paper
UPC	752911419272

7. Warranty and Support

7.1 Warranty Information

The Bisofice PeriPage A40 Portable Thermal Printer comes with a limited warranty. Please refer to the warranty card included in your product packaging or contact Bisofice customer service for detailed terms and conditions.

7.2 Additional Resources

For further assistance, you may refer to the official User Guide PDF available online:[Download User Guide PDF](#).

No official product videos from the seller were found in the provided data to embed in this manual.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question