

[manuals.plus](#) /› [USX MOUNT](#) /› [USX MOUNT TV Wall Mount Instruction Manual for 26-55 Inch LCD/LED TVs, Model B09WYKF4QB](#)

## USX MOUNT B09WYKF4QB

# USX MOUNT TV Wall Mount Instruction Manual

Model: B09WYKF4QB

For 26-55 Inch LCD/LED TVs

## 1. INTRODUCTION

Thank you for choosing the USX MOUNT TV Wall Mount. This manual provides essential information for the safe and correct installation, operation, and maintenance of your new TV wall mount. Please read these instructions thoroughly before installation and retain them for future reference.


## 2. SAFETY INFORMATION

**WARNING:** Failure to read and follow these instructions may result in serious personal injury, property damage, or voiding of your warranty. If you have any questions, please contact customer service.

- Ensure the mounting surface can safely support the combined weight of the mount and the television.
- Do not exceed the maximum load capacity of 35 kg (77 lbs).
- This product is designed for installation on wood studs or solid concrete walls only. Do not install on drywall alone.
- Always use a stud finder to locate wood studs accurately.
- Use appropriate safety gear during installation, including eye protection.
- Two people are recommended for installation to ensure safety.

## 3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. If any parts are missing or defective, contact customer service.

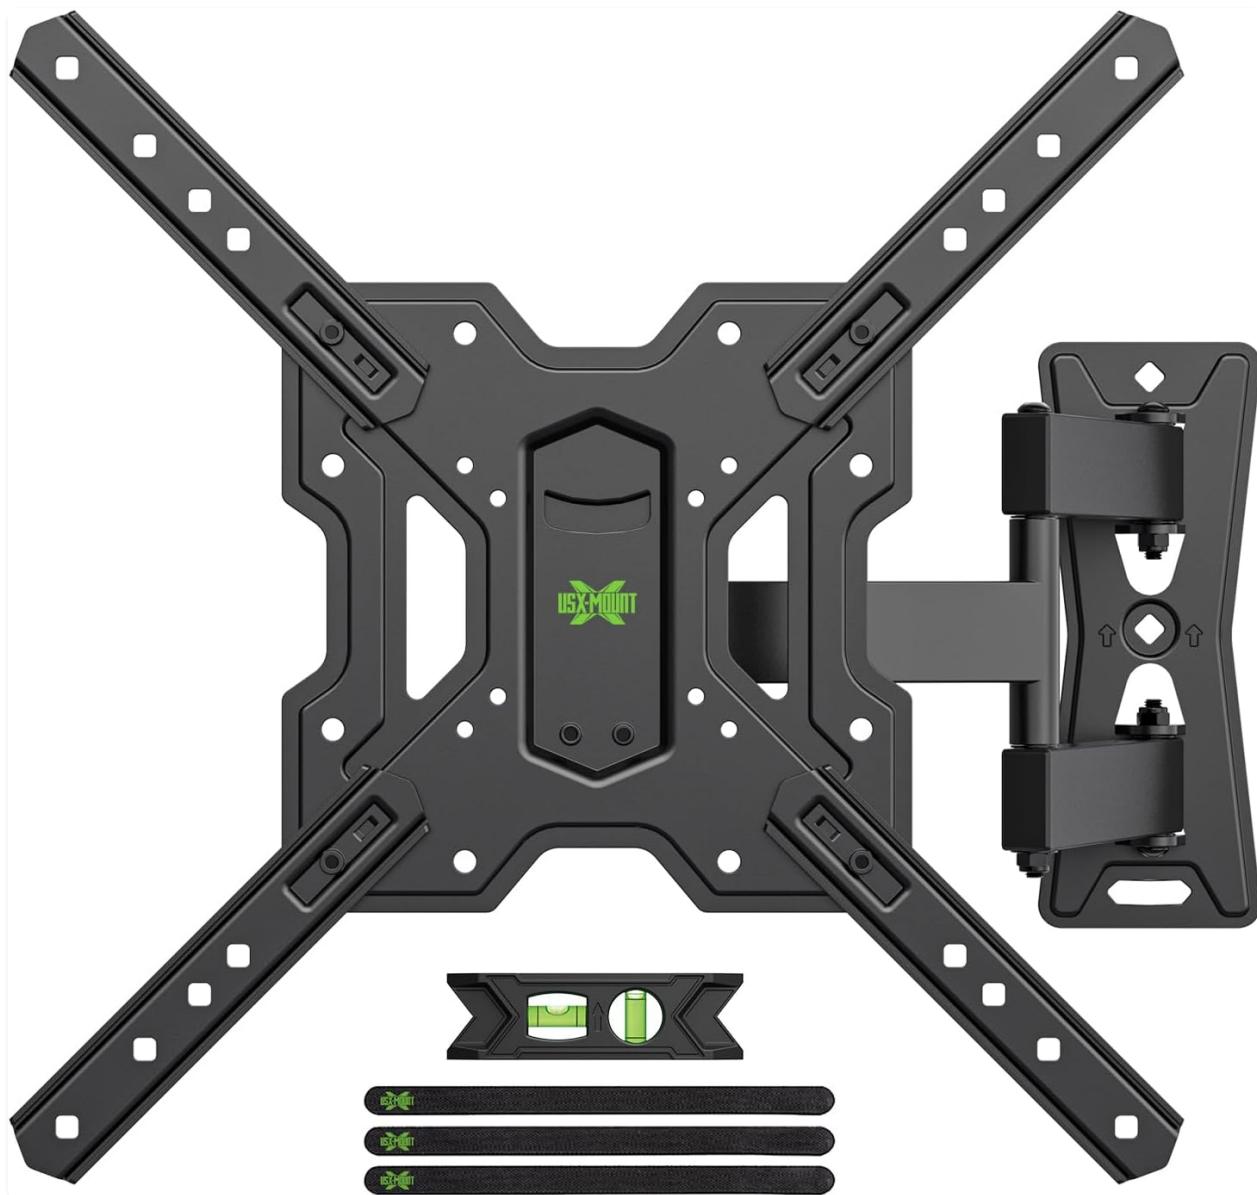

**Figure 3.1:** Overview of the USX MOUNT TV Wall Mount and all included accessories, such as the main mount assembly, VESA extension arms, bubble level, and cable ties.

### Included Hardware:

- Wall Plate Assembly
- TV Plate (VESA Adapter)
- Various screws, washers, and spacers for TV attachment
- Lag bolts and concrete anchors for wall attachment
- Bubble Level
- Cable Ties
- Hex Key

## 4. SPECIFICATIONS

Feature	Specification
Compatible TV Sizes	26-55 inches

Maximum Load Capacity	35 kg (77 lbs)
VESA Compatibility	75x75mm, 100x100mm, 100x200mm, 200x100mm, 200x200mm, 150x150mm, 200x300mm, 200x400mm, 300x200mm, 300x300mm, 400x200mm, 400x300mm, 400x400mm
Tilt Angle	+5° to -15°
Swivel Angle	±90° (depending on TV size)
Level Adjustment	±4°
Distance to Wall	70mm (min) to 480mm (max)
Material	Steel
Color	Black

## 適用のVESA規格

### VESA壁掛け規格対応(mm)

**75x75      100x100**  
**100x200    200x100**  
**200x200    150x150**  
**200x400    200x300**  
**300x200    400x200**  
**400x300    300x300**  
**400x400**




対応サイズ  
26-55"



耐荷重  
27KG(60LBS)

最大: 400mm(15.75in)  
最小: 75mm(2.95in)

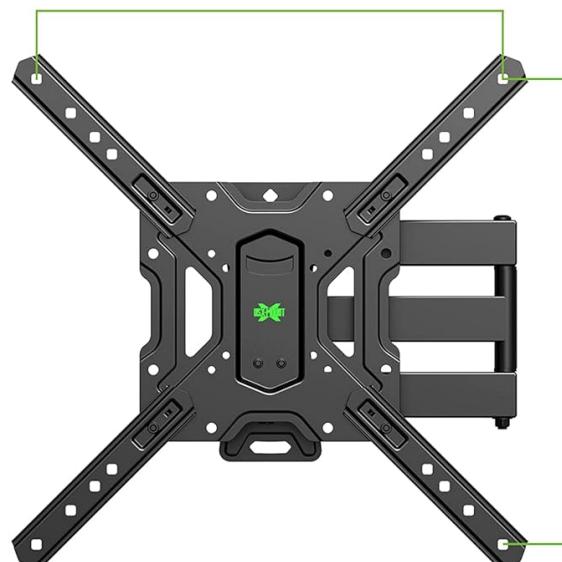

最大: 400mm(15.75in)  
最小: 75mm(2.95in)




### VESA=水平x垂直

ご注文の際は、お使いのテレビの  
VESAをご確認ください。


Figure 4.1: VESA compatibility chart and maximum load capacity for the mount. Always check your TV's VESA pattern before installation.

# 適用のVESA規格


A.

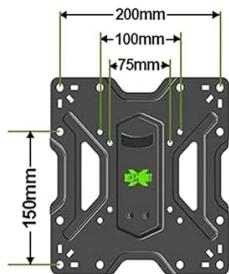


B.

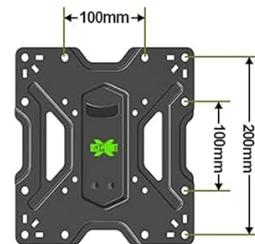


C.

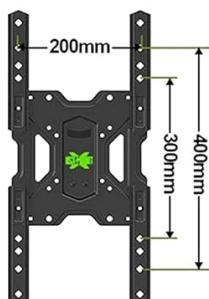


D.

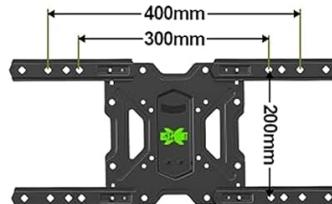

E.

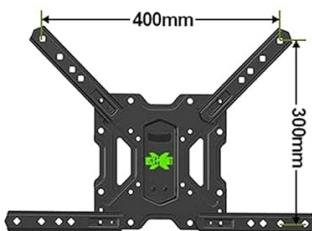

F.

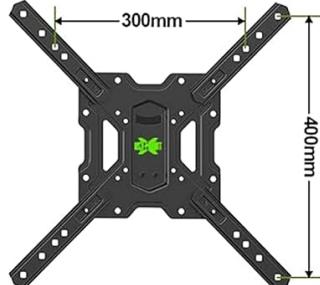

**NOTE: VESA=水平x垂直 (the four holes on the back of the TV)**

**Figure 4.2:** Visual representation of various VESA mounting patterns supported by the mount, indicating horizontal and vertical screw hole distances.

## 5. INSTALLATION INSTRUCTIONS


### Step 1: Attach TV Plate to TV

1. Carefully place your TV face down on a soft, clean surface to prevent screen damage.
2. Identify the VESA mounting holes on the back of your TV.
3. Select the appropriate screws, washers, and spacers from the provided hardware kit that fit your TV's mounting holes.
4. Attach the TV plate (VESA adapter) to the back of your TV using the selected hardware. Ensure it is securely fastened but do not overtighten.


### Step 2: Attach Wall Plate to Wall

**IMPORTANT:** Determine your wall type before proceeding. This mount is suitable for wood stud walls and solid concrete walls.

# 確認してください...

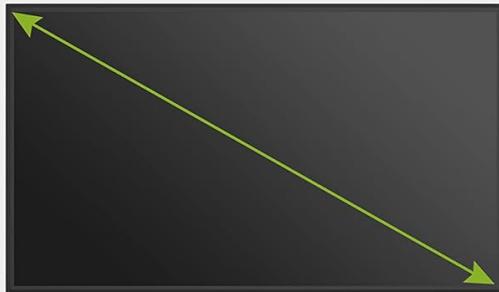

対応サイズ: 26-55"  
耐荷重: 35KG

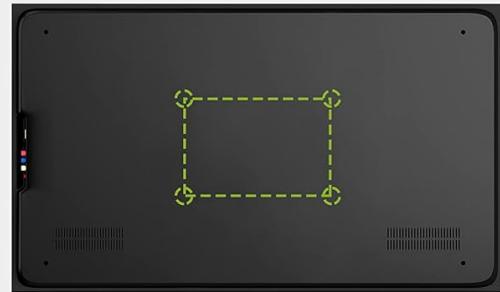

VESA規格:  
75x75mm ~ 400x400mm

## 壁の種類



木製間柱



コンクリート壁



※ご注意※必ずコンクリートの壁か、もしくは壁の  
内部に木製の芯材がある場所に取付けてください。

Figure 5.1: Illustration of compatible wall types for installation: wood stud and solid concrete. Ensure your wall matches one of these types.

### For Wood Stud Walls:

1. Use a stud finder to locate the edges and center of the wood stud. Mark the center of the stud.
2. Position the wall plate at your desired height and use the integrated bubble level to ensure it is perfectly horizontal. Mark the pilot hole locations.
3. Drill pilot holes into the center of the stud at the marked locations. The drill bit size should be 5/32" (4 mm) and the depth approximately 2.36" (60 mm).
4. Attach the wall plate to the wall using the provided lag bolts. Tighten securely with a wrench.

### For Solid Concrete Walls:

1. Position the wall plate at your desired height and use the integrated bubble level to ensure it is perfectly horizontal. Mark the pilot hole locations.
2. Drill pilot holes into the concrete at the marked locations. The drill bit size should be 3/8" (10 mm) and the depth approximately 2.36" (60 mm).
3. Insert the concrete anchors into the drilled holes. Tap them gently with a hammer until they are flush with the wall surface.

4. Attach the wall plate to the wall using the provided lag bolts. Tighten securely with a wrench.

### Step 3: Hang and Secure TV to Wall Plate

1. With assistance, carefully lift the TV (with the TV plate attached) and hook it onto the wall plate.
2. Ensure the TV is properly seated and centered on the wall plate.
3. Secure the TV to the wall plate using the safety screws or locking mechanisms provided. This prevents accidental dislodgement.

Your browser does not support the video tag.

**Video 5.1:** A short demonstration of the installation process, including attaching the TV plate, mounting the wall plate, and hanging the TV. This video also briefly shows the leveling and tilting adjustments.

## 6. OPERATING INSTRUCTIONS (ADJUSTMENTS)

---

Your USX MOUNT TV Wall Mount offers various adjustments for optimal viewing.

### Tilt Adjustment:

The mount allows for a tilt range of +5° to -15°. To adjust the tilt:

1. Locate the tilt adjustment knobs on the TV plate.
2. Loosen the knobs to allow the TV to tilt freely.
3. Adjust the TV to your desired vertical angle.
4. Tighten the knobs to secure the TV in place.



**Figure 6.1:** Visual guide for adjusting the horizontal level and vertical tilt of the TV. The top panel shows  $\pm 4^\circ$  leveling, and the bottom panel shows  $+5^\circ$  to  $-15^\circ$  tilt.

# 壁とテレビの背面がわずか70mm

部屋が広く感じられる



Figure 6.2: This image illustrates the adjustable distance from the wall (70mm to 426mm) and the tilt angles (+5° backward, -15° forward) of the TV mount.

## Swivel Adjustment:

The mount allows for a swivel of up to  $\pm 90^\circ$  (left/right), depending on the size of your TV. To adjust the swivel:

1. Gently push or pull the TV to the desired left or right angle.
2. The friction joints will hold the TV in position.

どこからでも最高な視野・多角度調

耐荷重最大 35KG



Figure 6.3: This diagram demonstrates the  $\pm 90^\circ$  swivel capability of the TV mount, allowing for flexible viewing angles from various positions in a room.

#### Level Adjustment:

The mount allows for a level adjustment of  $\pm 4^\circ$  after installation. To adjust the level:

1. Use the provided hex key to loosen the leveling screws on the TV plate.
2. Adjust the TV until it is perfectly level using the bubble level.
3. Tighten the leveling screws to secure the TV in the desired horizontal position.

## 7. MAINTENANCE

- Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary.
- Clean the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Ensure cables are managed neatly using the provided cable ties to prevent strain or damage.

## 8. TROUBLESHOOTING

If you encounter any issues during or after installation, please refer to the following common solutions:

- **TV not level:** Use the level adjustment feature as described in Section 6.
- **Mount feels loose:** Recheck all wall and TV attachment points and tighten any loose fasteners. Ensure the wall type is appropriate for installation.
- **Difficulty adjusting tilt/swivel:** Ensure all adjustment knobs/screws are sufficiently loosened before attempting to move the TV.

If the problem persists, contact USX MOUNT customer support.

## 9. WARRANTY AND SUPPORT

USX MOUNT provides a 10-year quality guarantee from the date of purchase. This warranty covers manufacturing defects and ensures the product's structural integrity under normal use.

For any questions, missing parts, or support needs, please contact USX MOUNT customer service. Our team is dedicated to providing assistance and ensuring your satisfaction.

**Contact Information:** Please refer to the contact details provided with your purchase or visit the official USX MOUNT website.

© 2025 USX MOUNT. All rights reserved.

### Related Documents - B09WYKF4QB

 XMM006-2 INSTRUCTION MANUAL For 26-55" TVs	<a href="#"><u>USX-MOUNT XMM006-2 TV Wall Mount Installation Manual</u></a> Comprehensive instruction manual for installing the USX-MOUNT XMM006-2 TV wall mount for 26-55 inch televisions. Includes VESA compatibility, weight limits, wall mounting instructions (wood studs and concrete), parts list, and adjustment guides.
 XML008-1K-01 INSTRUCTION MANUAL For 47-84" TVs	<a href="#"><u>USX-MOUNT XML008-1K-01: Instruction Manual for 47-84 inch TVs</u></a> This document provides comprehensive installation instructions for the USX-MOUNT XML008-1K-01 TV wall mount, suitable for 47-84 inch televisions. It details pre-installation checks, parts identification, step-by-step assembly for wood stud and solid concrete walls, integrity testing, TV mounting, and final adjustments. Safety warnings and dimension specifications are included.
 XML006-24K-1 INSTRUCTION MANUAL For 42-85" TVs	<a href="#"><u>USX-MOUNT XML006-24K-1 Instruction Manual for 42-85" TV</u></a> Instruction manual for the USX-MOUNT XML006-24K-1 full-motion TV wall mount, designed for 42-85 inch televisions. Provides detailed steps for installation on wood studs or solid concrete walls, including parts lists, dimensions, and adjustment procedures.

 <p>XAS309-1 INSTRUCTION MANUAL For 37-70" TV If you have any questions along the way, just message us. 1-800-449-0010 or visit <a href="http://www.usx-mount.com">www.usx-mount.com</a> We're ready to help!</p>	<p><b><u>USX-MOUNT XAS309-1 Swivel Universal TV Stand Instruction Manual</u></b></p> <p>Instruction manual for the USX-MOUNT XAS309-1, a swivel universal TV stand designed for 37-70 inch TVs. This guide provides detailed steps for assembly, installation, and adjustment, including VESA compatibility, weight limits, parts inventory, and dimensions. It ensures safe and proper setup for your television.</p>
 <p>XMM021 INSTRUCTION MANUAL For 32-65" TV If you have any questions along the way, just message us. 1-800-449-0010 or visit <a href="http://www.usx-mount.com">www.usx-mount.com</a> We're ready to help!</p>	<p><b><u>USX-MOUNT XMM021 TV Wall Mount Instruction Manual</u></b></p> <p>Comprehensive instruction manual for the USX-MOUNT XMM021 TV wall mount, designed for 32-65 inch TVs. Includes installation steps for wood studs and concrete walls, compatibility checks, and adjustment guides.</p>
 <p>XFM090-15/WFM009-01 INSTRUCTION MANUAL For 26-60" TV If you have any questions along the way, just message us. 1-800-449-0010 or visit <a href="http://www.usx-mount.com">www.usx-mount.com</a> We're ready to help!</p>	<p><b><u>USX-MOUNT XFM090-15/WFM009-01 Fixed TV Wall Mount Instruction Manual</u></b></p> <p>Comprehensive instruction manual for the USX-MOUNT XFM090-15/WFM009-01 fixed TV wall mount, designed for 26-60 inch TVs. Includes installation steps, compatibility checks, parts list, and safety precautions.</p>