

[Manuals.plus](#) /

› [FLEXISPOT](#) /

› FLEXISPOT EC5 Pro Standing Desk 180x80cm - User Manual

FLEXISPOT EC5S-FR+PR1808

FLEXISPOT EC5 Pro Standing Desk 180x80cm - User Manual

Model: EC5S-FR+PR1808

INTRODUCTION

Thank you for choosing the FLEXISPOT EC5 Pro Standing Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new adjustable height desk. Please read these instructions carefully before use and retain them for future reference.

FlexiSpot **EC5 PRO**

DUAL-MOTOR STANDING DESK



Image: The FLEXISPOT EC5 Pro Dual-Motor Standing Desk, highlighting its adjustable height feature and sleek design.

SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety guidelines:

- Do not exceed the maximum load capacity of **160 kg (352 lbs)**. Overloading can cause instability and damage.
- The anti-collision function is designed to stop the desk when an obstacle is detected during height adjustment. Ensure the area around the desk is clear to prevent injuries or damage.
- Keep children and pets away from the desk during operation.
- Ensure all cables are properly managed and secured to prevent entanglement or damage during height adjustments.
- Do not sit or stand on the desk frame.
- Only use the desk for its intended purpose as a workstation.

- If any unusual noise or movement occurs, immediately stop operation and consult the troubleshooting section or contact customer support.

PACKAGE CONTENTS

Your FLEXISPOT EC5 Pro Standing Desk is shipped in two separate packages. Please verify that all components are present before beginning assembly.

- Package 1: Desktop (180x80cm, Maple finish)
- Package 2: Desk Frame (Grey, including dual motors, control panel, and hardware)



Image: Illustration showing the desk components are shipped in two separate packages: one for the desktop and one for the desk frame.

SETUP AND ASSEMBLY

Assembly of the FLEXISPOT EC5 Pro desk is designed to be straightforward. All necessary tools are included. It is recommended that **two people** assemble the desk due to its weight and size.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble the Frame:** Follow the detailed instructions provided in the separate assembly guide for connecting the three-column legs, crossbars, and motor system.
3. **Attach the Desktop:** Securely fasten the desktop to the assembled frame using the provided screws. Ensure proper alignment.
4. **Connect Control Panel:** Plug the control panel into the motor system.
5. **Cable Management:** Organize and secure all cables using the included cable ties or clips to prevent interference with movement.

Estimated assembly time: Approximately 25 minutes.



Image: Visual representation of the desk frame components and an "Easy Installation" label, indicating a quick setup process.

OPERATING INSTRUCTIONS

The FLEXISPOT EC5 Pro features a digital control panel for easy height adjustment and memory functions.

Height Adjustment

- Use the **Up (▲)** and **Down (▼)** arrows on the control panel to adjust the desk height.
- The height range is from **62 cm (24.4 inches)** to **127 cm (50 inches)**.
- The current height is displayed on the LED screen.

SLEEK AND PREMIUM CONTROL PANEL

Easy to Use, Intuitive, and Built to Last



The Soft-Curve Controller, Shaped Between an Oval and a Heart, Features Ergonomic Design and Elegant Aesthetics for a Refined Standing Desk Experience



Up and Down



3 Memory Presets



LED Height Display



Sedentary Reminder

Image: Close-up of the sleek digital control panel, showing the up/down arrows, memory preset buttons (1, 2, 3), and the LED height display.

Memory Presets

The control panel allows you to save and recall up to three preferred height settings.

1. Adjust the desk to your desired height.
2. Press the "M" button. The LED display will show "S-".
3. Immediately press one of the number buttons ("1", "2", or "3") to save the current height to that preset. The display will show "S-1", "S-2", or "S-3" to confirm.
4. To recall a saved height, simply press the corresponding number button ("1", "2", or "3"). The desk will automatically move to the saved position.

Sedentary Reminder

The control panel includes a time reminder function to encourage regular movement and improve well-being during work.

- To activate or adjust the reminder, refer to the detailed instructions in the separate control panel manual (if

provided) or contact customer support.

- The reminder will prompt you to change your posture (sit or stand) at set intervals.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your FLEXISPOT EC5 Pro Standing Desk.

- **Cleaning:** The desktop and frame are easy to clean. Use a soft, dry cloth for dusting. For spills or stains, use a damp cloth with a mild cleaning solution, then wipe dry immediately. Avoid abrasive cleaners or harsh chemicals.
- **Cable Inspection:** Periodically check all cables for wear, fraying, or damage. Ensure they are securely fastened and not pinched by moving parts.
- **Fastener Check:** Occasionally inspect all screws and bolts to ensure they are tight. Retighten if necessary.
- **Load Management:** Always adhere to the maximum load capacity. Distribute weight evenly across the desktop.

ONE-PIECE PREMIUM DESKTOP



Waterproof



Scratch-resistant



Smooth



Flexispot



Smooth,
Single-Piece
Desktop

VS

Other



Uneven Spliced
Desktop

Image: Close-up showing the desktop's premium features, including waterproof, scratch-resistant, and smooth surface properties, simplifying maintenance.

TROUBLESHOOTING

If you encounter any issues with your FLEXISPOT EC5 Pro Standing Desk, please refer to the following common solutions:

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected, motor error, overload.	Check power connections. Reduce load on the desk. Perform a reset (refer to control panel manual).
Uneven movement or shaking.	Loose fasteners, uneven weight distribution, floor instability.	Ensure all screws are tightened. Redistribute items on the desk. Place the desk on a level surface.
Anti-collision feature triggers frequently.	Obstruction in the path of movement, sensitivity setting.	Clear any objects around the desk. Adjust anti-collision sensitivity if possible (refer to control panel manual).
Control panel display shows an error code.	Specific system error.	Refer to the control panel manual for specific error code meanings and solutions. If unavailable, contact customer support.

If the problem persists after attempting these solutions, please contact FLEXISPOT customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model Number	EC5S-FR+PR1808-Maple
Desktop Dimensions (L x W)	180 cm x 80 cm (70.9 in x 31.5 in)
Height Adjustment Range	62 cm - 127 cm (24.4 in - 50 in)
Maximum Load Capacity	160 kg (352 lbs)
Motor Type	Dual Motor
Frame Material	Alloy Steel
Desktop Material	Maple Wood
Control Panel	Digital with Memory Presets (3) and Sedentary Reminder
Special Features	Ergonomic, Adjustable, Anti-collision System, Soft Start/Stop
Assembly Recommendation	2 people

Feature	Detail
Care Instructions	Easy to clean with a dry or damp cloth



Image: Demonstrates the desk's ultra-high load capacity, supporting up to 160 kg (352 lbs), along with details on rounded corners and desktop thickness.

WARRANTY AND SUPPORT

FLEXISPOT is committed to providing high-quality products. Your EC5 Pro Standing Desk comes with the following warranty:

- **3-Year Warranty:** On controllers and motors.
- **5-Year Warranty:** On the chassis (frame).

For warranty claims, technical support, or any questions not covered in this manual, please contact FLEXISPOT customer service through their official website or the retailer where you purchased the product. Please have your

model number (EC5S-FR+PR1808-Maple) and proof of purchase ready.

© 2024 FLEXISPOT. All rights reserved.