
[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER 1.9 Cu Ft Over-the-Range Microwave Oven User Manual

BLACK+DECKER 1.9 Cu Ft

BLACK+DECKER 1.9 Cu Ft Over-the-Range Microwave Oven

MODEL: 1.9 Cu Ft

Important Safety Instructions

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of fire, electric shock, or injury to persons, do not operate the oven when empty.
- Do not attempt to service this appliance yourself. Contact qualified service personnel for examination, repair, or adjustment.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when the appliance is used by or near children.
- Do not immerse cord or plug in water.

Product Overview



This image displays the front of the BLACK+DECKER 1.9 Cu Ft Over-the-Range Microwave Oven. The appliance features a sleek stainless steel finish with a large dark glass door on the left and a vertical control panel on the right. The control panel includes a digital display at the top, followed by various function buttons such as 'Smart Sensor Cooking', 'Popcorn', 'Potato', 'Veggies', 'Sensor Cook', 'Sensor Reheat', 'Auto Cook', 'Snack Menu', 'Melt/Soften', 'Auto Defrost', 'Timer', 'User Pref', 'Power Level', and a numeric keypad from 0-9. Below the keypad are 'STOP/Clear' and 'START' buttons, along with icons for 'Turntable' and 'Light'.

The BLACK+DECKER 1.9 Cu Ft Over-the-Range Microwave Oven is designed for convenient and efficient cooking. It features a spacious interior, intuitive controls, and multiple cooking functions to simplify meal preparation.

Setup and Installation

Unpacking

- Carefully remove the microwave oven from its packaging.
- Remove all packing materials, including any film or tape from the oven cavity and accessories.
- Inspect the oven for any damage, such as dents or a broken door. Do not operate if damaged.
- Ensure all accessories are present: Turntable, Turntable Ring, and Instruction Manual.

Location Requirements

This microwave oven is designed for over-the-range installation. Ensure the installation area meets the following criteria:

- **Electrical Requirements:** A dedicated 120V, 60Hz, 15 Amp or 20 Amp grounded outlet is required.
- **Clearance:** Maintain adequate clearance above the cooking surface as specified in the full installation guide.
- **Mounting Surface:** The cabinet above the microwave must be strong enough to support the weight of the oven (approximately 55.1 lbs).

Initial Setup

- Place the turntable ring in the center of the oven cavity.
- Place the glass turntable securely on the turntable ring.
- Plug the microwave oven into a grounded electrical outlet.
- Set the clock: Press the "Clock" button, enter the current time using the number pad, then press "Clock" again to confirm.

Operating Instructions

Control Panel Functions

- **LED Display:** Shows time of day, cooking time, and function indicators.
- **Number Pad (0-9):** Used to enter cooking times, power levels, and quantities.
- **START:** Begins cooking or a selected function.
- **STOP/Clear:** Stops cooking, clears settings, or cancels a program.
- **Sensor Menus (Popcorn, Potato, Veggies):** Automatically adjusts cooking time based on food moisture.
- **One-Touch Automatic Cooking Menus:** Pre-programmed settings for common foods.
- **Express Cook (1-6 min):** Starts cooking immediately for 1 to 6 minutes at full power.
- **30 Sec. Quick Start:** Adds 30 seconds to cooking time or starts cooking for 30 seconds at full power.
- **Power Level:** Adjusts the microwave power output.
- **Weight and Time Defrost:** Defrosts food based on weight or a set time.
- **Kitchen Timer:** Functions as a standalone timer.
- **Child Lock:** Locks the control panel to prevent accidental operation.

Basic Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door.
3. Enter desired cooking time using the number pad.
4. (Optional) Press "Power Level" and enter a power level (1-10) if not cooking at full power.
5. Press "START".

Using Pre-set Functions

For Sensor Menus (Popcorn, Potato, Veggies) or One-Touch Automatic Cooking Menus:

1. Place food in the oven.
2. Press the desired pre-set button (e.g., "Popcorn"). The oven will automatically set the time and power level.
3. Press "START".

Child Lock Function

To activate the Child Lock, press and hold the "STOP/Clear" button for 3 seconds until a lock indicator appears on the display. To deactivate, press and hold "STOP/Clear" again for 3 seconds until the indicator disappears.

Maintenance and Cleaning

Interior Cleaning

- Wipe the interior cavity with a damp cloth after each use to prevent food buildup.
- For stubborn stains, place a bowl of water with lemon slices inside and microwave on high for 2-3 minutes. The steam will loosen the stains, making them easier to wipe away.
- The glass turntable and turntable ring can be removed and washed in warm, soapy water or in the dishwasher.

Exterior Cleaning

- Clean the exterior surfaces with a soft, damp cloth.
- For stainless steel surfaces, use a stainless steel cleaner and polish in the direction of the grain.
- Avoid abrasive cleaners or scouring pads, as they can scratch the surface.

Odor Removal

To remove odors from the microwave, combine 1 cup of water with several lemon slices or 2 tablespoons of white vinegar in a microwave-safe bowl. Microwave on high for 5 minutes. Let it stand in the oven for 10-15 minutes before removing and wiping the interior.

Troubleshooting Guide

Problem	Possible Cause	Solution
Oven will not start.	Door not closed properly; Plug not inserted firmly into outlet; Fuse blown or circuit breaker tripped; Child Lock activated.	Ensure door is securely closed; Check plug connection; Check household fuse/circuit breaker; Deactivate Child Lock.
Food not heating.	Cooking time or power level set incorrectly; Door not closed properly.	Increase cooking time/power level; Ensure door is securely closed.
Turntable not rotating.	Turntable or ring not positioned correctly; Debris under turntable.	Reposition turntable and ring; Clean under the turntable.
Oven light not working.	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.

If the problem persists after attempting these solutions, please contact customer support.

Specifications

Feature	Detail
Brand	BLACK+DECKER
Model Number	1.9 Cu Ft
Capacity	1.9 Cubic Feet
Wattage	1000 watts
Voltage	120 Volts (AC)
Product Dimensions (DxWxH)	31.3" x 16.4" x 15"
Item Weight	55.1 Pounds
Color	Stainless Steel
Material	Stainless Steel
Installation Type	Over-the-Range

Warranty and Support

This BLACK+DECKER appliance comes with a limited manufacturer's warranty. Please refer to the warranty card

included with your product for specific terms and conditions, including warranty period and coverage details.

For technical assistance, troubleshooting not covered in this manual, or to inquire about warranty service, please contact BLACK+DECKER customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

When contacting support, please have your product model number (1.9 Cu Ft) and purchase date available.