

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KRUPS](#) /

› [KRUPS Simply Electric Egg Cooker User Manual](#)

KRUPS 10942227908

KRUPS Simply Electric Egg Cooker Instruction Manual

Model: 10942227908

INTRODUCTION

The KRUPS Simply Egg Cooker is designed to make preparing eggs quick and effortless. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure you get the best results from your appliance.

PRODUCT OVERVIEW

The KRUPS Simply Egg Cooker is a versatile kitchen appliance that allows you to prepare various egg dishes with ease. Its compact design makes it suitable for any kitchen size.



Figure 1: KRUPS Simply Electric Egg Cooker with included accessories.

Key Features:

- **6 Egg Capacity:** Cook up to 6 eggs at once.
- **Versatile Use:** Prepare soft, medium, or hard-boiled eggs, poached eggs, scrambled eggs, and omelets.
- **Compact Design:** Ideal for small kitchens, apartments, dorms, and campers.
- **Simple Operation:** Easy to use with a single button control and audible alert.
- **Included Accessories:** Comes with a water measuring cup with egg piercer, 6-egg holding tray, 2 & 3 egg poaching tray, and an omelet tray.

Your browser does not support the video tag.

Video 1: Official Product Overview of the KRUPS Simply Egg Cooker, demonstrating its features and versatility.

COMPONENTS

Your KRUPS Simply Egg Cooker comes with several key components to facilitate various cooking styles:

- **Main Unit:** The base unit containing the heating element and control dial.
- **6-Egg Holding Tray:** For boiling up to six eggs.
- **2 & 3 Egg Poaching Tray:** For preparing perfectly poached eggs.
- **Omelet Tray:** For cooking individual omelets.
- **Water Measuring Cup with Egg Piercer:** Essential for precise water measurement and preventing egg cracking during boiling.
- **Transparent Lid:** Covers the cooking area, allowing you to monitor the cooking process.



Figure 2: Detailed view of the KRUPS Egg Cooker components.

SETUP

- 1. Unpack:** Carefully remove all components from the packaging.
- 2. Clean:** Before first use, wash all removable parts (trays, lid, measuring cup) with warm, soapy water. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
- 3. Placement:** Place the main unit on a stable, flat, heat-resistant surface.
- 4. Assemble:** Place the 6-egg holding tray onto the heating plate. For poached eggs or omelets, place the respective trays on top of the 6-egg holding tray.

COMPACT DESIGN

Small footprint is perfect for apartments, campers, & dorms.



Figure 3: The compact design of the KRUPS Egg Cooker fits well in various kitchen setups.

OPERATING INSTRUCTIONS

General Operation:

- Measure Water:** Use the provided measuring cup to add the appropriate amount of water to the heating plate. The cup has markings for different egg consistencies (soft, medium, hard-boiled) and types (poached, omelet).
- Piercing Eggs (for boiled eggs):** Use the egg piercer located at the bottom of the measuring cup to make a small hole in the larger end of each egg. This helps prevent cracking during cooking.
- Place Eggs:** Place the eggs onto the 6-egg holding tray. For poached or omelet eggs, pour the egg mixture into the respective trays.
- Cover:** Place the transparent lid securely over the unit.
- Start Cooking:** Plug in the unit and turn the control dial to the desired setting (usually indicated by the water level markings). The indicator light will illuminate.
- Audible Alert:** An audible tone will sound when the cooking cycle is complete.
- Turn Off:** Manually turn the control dial to the "OFF" position and unplug the unit.

8. **Cool Down:** Carefully remove the cooked eggs or trays. For boiled eggs, immediately place them under cold running water or in an ice bath to stop the cooking process and facilitate peeling.

Cooking Specific Egg Types:

Boiled Eggs (Soft, Medium, Hard):

Use the 6-egg holding tray. Refer to the measuring cup for precise water levels for soft, medium, or hard-boiled eggs. Pierce each egg before placing it on the tray.



Figure 4: The egg cooker efficiently steams eggs to your desired doneness.

Poached Eggs:

Place the 2 or 3 egg poaching tray on top of the 6-egg holding tray. Lightly grease the poaching cups. Crack eggs directly into the cups. Use the water level indicated for poached eggs on the measuring cup.

FASTER THAN STOVETOP

Rapid heating cooks up to 6 eggs - soft, medium, or hard boiled



Figure 5: Preparing poached eggs with the dedicated tray.

Scrambled Eggs & Omelets:

Use the omelet tray. Whisk eggs with desired ingredients (milk, cheese, vegetables) and pour into the omelet tray. Use the water level indicated for omelets on the measuring cup.

FAST & EASY BREAKFAST

Eggs cooked your way
boiled, poached, omelet,
and sandwich



Figure 6: Example of a prepared egg dish using the cooker's versatility.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your egg cooker.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The lid, egg trays, and measuring cup are dishwasher safe or can be washed by hand with warm, soapy water.
3. **Clean Heating Plate:** The heating plate may develop mineral deposits (stains) over time due to water. To clean, add a mixture of water and white vinegar (1:1 ratio) to the heating plate and let it soak for 10-15 minutes. Gently scrub with a non-abrasive sponge or cloth. Rinse thoroughly.
4. **Wipe Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are completely dry before storing. Store the egg cooker in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your KRUPS Simply Egg Cooker, refer to the following common problems and

solutions:

Problem	Possible Cause	Solution
Eggs not cooked to desired consistency.	Incorrect water amount or egg size.	Ensure you are using the correct water level for your desired egg consistency and egg size (e.g., large eggs may require slightly more water).
Eggs cracking during boiling.	Eggs not pierced or too cold.	Always pierce the larger end of each egg with the provided piercer. Allow cold eggs to come closer to room temperature before cooking.
Audible tone is too loud/annoying.	This is a design feature to alert you when cooking is complete.	Manually turn off the unit as soon as the tone sounds to stop it.
Water measuring cup markings fading.	Wear and tear from washing.	Measure water carefully using a standard measuring spoon/cup if markings are no longer visible, or contact customer support for a replacement cup.
Poaching tray is wobbly or eggs are runny.	Tray design or insufficient cooking time.	Ensure the poaching tray is seated correctly. Adjust water level slightly or allow a few extra minutes of cooking time if eggs are not firm enough.

SPECIFICATIONS

Detailed technical specifications for the KRUPS Simply Electric Egg Cooker:

- **Model Number:** 10942227908
- **Brand:** KRUPS
- **Color:** Black
- **Material:** Plastic and Stainless Steel
- **Capacity:** 6 Eggs (Boiled), 2-3 Eggs (Poached), 1 Omelet
- **Power:** 400 Watts
- **Product Dimensions:** 8.9" L x 4.5" W x 5.3" H
- **Item Weight:** 2.03 pounds (921 Grams)
- **UPC:** 010942227908
- **Country of Origin:** China

WAKE UP WITH KRUPS

KRUPS has a full line of products
to make breakfast delicious & easy



Figure 7: Product dimensions for easy reference.

WARRANTY AND SUPPORT

KRUPS products are manufactured to high quality standards. For warranty information, product registration, or technical support, please refer to the official KRUPS website or contact their customer service department.

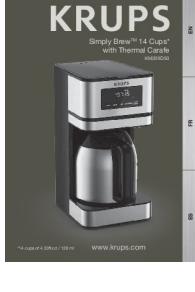
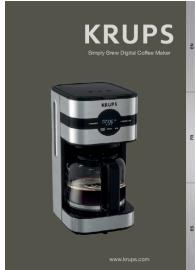
Protection Plans:

Extended protection plans are available for this product:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect: One plan covers all eligible past and future purchases (monthly billing)

For details on these plans, please visit the product page on Amazon.com or contact the plan provider.

Related Documents - 10942227908

	<p>KRUPS Simply Eggs 6pc Egg Cooker User Manual and Instructions</p> <p>Comprehensive guide to using the KRUPS Simply Eggs 6pc Egg Cooker for boiling, poaching, and making omelets. Includes safety, cleaning, descaling, and troubleshooting tips.</p>
	<p>Krups Ovomat Super EG230115 Egg Cooker User Manual</p> <p>This user manual provides comprehensive instructions for the Krups Ovomat Super EG230115 egg cooker, covering setup, operation for soft, medium, and hard-boiled eggs, cleaning, maintenance, descaling, and important safety precautions for safe and effective use.</p>
	<p>KRUPS Simply Brew™ 14 Cups* with Thermal Carafe User Manual</p> <p>User manual for the KRUPS Simply Brew™ 14 Cups* coffee maker (Model KM209D50). Learn about safety, brewing, maintenance, and settings for optimal coffee preparation.</p>
	<p>Krups Electronic Rice Cooker 4 in 1 User Manual - Operation and Maintenance</p> <p>Comprehensive user manual for the Krups Electronic Rice Cooker 4 in 1 (RK701150), covering setup, operation for various cooking modes (rice, slow cook, steam, oatmeal), cleaning, maintenance, and warranty information.</p>
	<p>KRUPS Simply Brew Single Serve Brewer User Manual</p> <p>User manual for the KRUPS Simply Brew Single Serve Brewer, providing instructions on setup, operation, cleaning, descaling, safety precautions, and warranty information.</p>
	<p>KRUPS Simply Brew Digital Coffee Maker User Manual and Safety Guide</p> <p>Comprehensive user manual and safety guide for the KRUPS Simply Brew Digital Coffee Maker (Model KM205D50), covering operation, safety precautions, cleaning, and warranty information.</p>