

[Manuals.plus](#) /

› [SIMPLETASTE](#) /

› SIMPLETASTE 4-in-1 Electric Milk Frother Instruction Manual

SIMPLETASTE 706NA-0003

SIMPLETASTE 4-in-1 Electric Milk Frother Instruction Manual

Model: 706NA-0003

Brand: SIMPLETASTE

1. INTRODUCTION

Thank you for choosing the SIMPLETASTE 4-in-1 Electric Milk Frother. This versatile appliance is designed to create rich, creamy milk foam for a variety of beverages, including cappuccinos, lattes, macchiatos, and iced coffees. It also functions as a milk warmer for hot chocolate and matcha. With its user-friendly design and multiple functions, you can enjoy barista-quality drinks from the comfort of your home.



The SIMPLETASTE 4-in-1 Electric Milk Frother, ready to create delicious beverages.

2. KEY FEATURES

- **4-in-1 Multifunctionality:** Capable of producing warm dense foam, warm airy foam, cold foam, and simply warming milk without frothing.
- **Large Capacity:** Warms up to 300 ml (10.1 oz) of milk for hot beverages or froths up to 130 ml (4.4 oz) for foam-based drinks.
- **Easy to Clean:** Features a non-stick interior coating for effortless cleaning.
- **Safe and Reliable:** Equipped with an automatic shut-off function to prevent overheating and burnt milk.
- **Durable Construction:** Made with stainless steel and a textured blue exterior.

4 in 1 Multifunctional

Warm Dense Foam Mode



Warming Mode



Cold Foam Mode



Warm Airy Foam Mode



Explore the four versatile functions of your milk frother.

Large Capacity



10.2oz/300ml

Max-level for warming



4.4oz/130ml

Max-level for frothing milk



2.6oz/75ml

Min-level for warming/frothing



Clearly marked fill lines for optimal performance.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, clean the interior of the frother with a soft, damp cloth. Do not immerse the base in water.
3. **Placement:** Place the frother base on a stable, flat, and dry surface.
4. **Connect Power:** Plug the power cord into a standard electrical outlet.



Ensure proper setup by placing the frother on its power base.

4. OPERATION

The SIMPLETASTE milk frother offers four distinct modes, easily selected with a single button. Refer to the MAX/MIN lines inside the frother for appropriate milk levels.

1. **Add Milk:** Pour milk into the frother, ensuring it is between the MIN and appropriate MAX line for your desired function.
2. **Select Mode:** Press the power button repeatedly to cycle through the modes. The illuminated icon will indicate the selected function:
 - *Warm Dense Foam:* Ideal for cappuccinos.
 - *Warm Airy Foam:* Perfect for lattes.
 - *Cold Foam:* For iced coffees and cold beverages.
 - *Warming Milk:* Heats milk without frothing, suitable for hot chocolate or matcha.

3. **Start:** Once the desired mode is selected, the frother will automatically begin operation.
4. **Automatic Shut-off:** The frother will automatically turn off once the process is complete.
5. **Pour:** Carefully remove the frother from its base and pour the frothed or warmed milk into your beverage.

Smooth & Tasty Milk Foam

Make your favorite
coffee beverage with
barista-level milk
foam



Achieve smooth and tasty milk foam for your favorite drinks.

Official Product Video: [SIMPLETASTE 4-in-1 Milk Frother](#)

Your browser does not support the video tag.

This video demonstrates the various functions and ease of use of the SIMPLETASTE 4-in-1 Milk Frother, showcasing how it creates different types of foam and warms milk for your beverages.

5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and optimal performance of your milk frother.

- **Hand Wash Only:** The frother jug should be hand washed. Do not place it in a dishwasher.
- **Interior Cleaning:** Rinse the non-stick interior with running water immediately after use. Use a soft cloth or sponge to wipe away any milk residue.
- **Avoid Water Contact:** Do not allow water to come into contact with the bottom electrical components or the exterior of the frother base. Wipe the exterior with a damp cloth only.
- **Drying:** Ensure all parts are completely dry before storing or next use.



Follow these steps for easy and safe cleaning of your frother.

6. TROUBLESHOOTING

If you encounter issues with your SIMPLETASTE milk frother, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frother not turning on.	Not properly plugged in; power outage.	Ensure the power cord is securely plugged into a working outlet. Check household power.
Milk not frothing or warming.	Incorrect milk level; whisk not properly installed; wrong mode selected.	Ensure milk is between MIN and MAX lines. Check if the whisk is correctly placed. Verify the selected mode.
Milk burnt or overfrothed.	Excessive milk quantity; incorrect milk type for frothing.	Do not exceed the MAX fill line for frothing. Some milk types (e.g., skim, oat) froth better than others.
Leaks from the bottom.	Water ingress into electrical components.	Discontinue use immediately. This indicates internal damage. Contact customer support.
Frother turns on randomly.	Electrical malfunction.	Unplug the device immediately. Contact customer support for assistance.

If the problem persists after trying these solutions, please contact SIMPLETASTE customer support.

7. SPECIFICATIONS

- **Brand:** SIMPLETASTE
- **Model Name:** Electric Milk Frother
- **Model Number:** 706NA-0003
- **Color:** Blue
- **Material:** Stainless Steel
- **Product Dimensions:** 3.94"W x 7.4"H
- **Item Weight:** 1.65 pounds (750 Grams)
- **Capacity:** 300 Milliliters (warming), 130 Milliliters (frothing)
- **Power Source:** Corded Electric
- **Wattage:** 500 watts
- **Special Feature:** Auto Shut-Off
- **Product Care Instructions:** Hand Wash Only
- **Country of Origin:** China
- **UPC:** 842120105698

8. WARRANTY AND SUPPORT

SIMPLETASTE products are designed for quality and durability. For any warranty claims, technical support, or product inquiries, please refer to the contact information provided with your product packaging or visit the official SIMPLETASTE website. Please retain your proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

My SIMPLETASTE 706NA-0003 milk frother doesn't turn on at all; how can I fix this?

If your SIMPLETASTE 4-in-1 Electric Milk Frother is not turning on, please follow these troubleshooting steps based on the product manual: Check the Power Connection: Ensure the power cord is securely plugged into a functional...

[Read full answer](#)