

[Manuals.plus](#) /

> [MYTOL](#) /

> MYTOL 40V(20V X2) Cordless Lawn Mower 16" Instruction Manual

MYTOL MLM4016

MYTOL 40V(20V X2) Cordless Lawn Mower 16" Instruction Manual

Model: MLM4016

PRODUCT OVERVIEW

Your browser does not support the video tag.

Video: An official overview of the MYTOL Cordless Lawn Mower, demonstrating its features and assembly.

1. IMPORTANT SAFETY INFORMATION

WARNING: Read all safety warnings and instructions before operating this lawn mower. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, including eye protection, hearing protection, and sturdy footwear.
- Keep children and bystanders away from the mowing area.
- Never operate the mower in wet conditions or on steep slopes.
- Ensure the safety key is removed when the mower is not in use or when performing maintenance.
- Inspect the mowing area for objects that could be thrown by the blade before starting.
- Do not operate the mower if any parts are damaged or missing.

2. SETUP AND ASSEMBLY

2.1 Handlebar Installation

Attach the handlebars to the mower body using the provided quick-release levers, washers, and bolts. Ensure they are securely tightened for safe operation. Use the cord retainers to secure the power cord along the handlebar, keeping it tidy and out of the way during operation.

BRUSHLESS MOTOR



MORE POWER
LOWER NOISE
MORE EFFICIENT
LONGER RUN TIME
LONGER LIFE TIME

Image: Handlebar assembly showing quick-release levers and bolts.

2.2 Battery Assembly

Open the battery compartment. Slide both 20V 4.0Ah batteries onto the matching tabs until they click into place. Insert the safety key into its slot.



Image: Two 20V batteries being inserted into the mower's battery compartment.

2.3 Grass Collection Bag Installation

Align the grass collection bag with the attachment slots at the rear of the mower and hook it securely into place. Ensure the bag is properly seated to prevent grass clippings from escaping.



Image: A person attaching the grass collection bag to the lawn mower.

2.4 Mowing Blade Installation (if not pre-installed)

If the mowing blade is not pre-installed, carefully attach it to the motor shaft using the provided bolt and washer. Ensure the blade is oriented correctly and tightened securely. Always remove the safety key and batteries before handling the blade.



Image: Underside of the cordless lawn mower, illustrating the blade installation area.

3. OPERATING INSTRUCTIONS

3.1 Starting the Mower

To start the MYTOL Cordless Lawn Mower, first ensure the safety key is inserted and the batteries are charged. Then, press and hold the safety button on the handle, and simultaneously pull the start lever towards the handle. Release the safety button once the mower starts.



Image: Visual guide for starting the lawn mower, showing the safety button and start lever.

3.2 Adjusting Cutting Height

The mower features a 6-position height adjustment lever. To change the cutting height, move the lever to your desired position, ranging from 0.98 inches to 3 inches. Adjust the height according to grass type and desired lawn appearance.



Image: Detail of the height adjustment lever with numbered settings.

3.3 Mowing Techniques

For best results, mow in overlapping rows. Avoid cutting more than one-third of the grass blade length at a time. For thick or tall grass, consider making two passes, raising the cutting height for the first pass.

Brushless Lawn Mower MLM4016



Image: A person operating the MYTOL lawn mower on a lawn.

3.4 Battery Usage and Runtime

The mower operates on two 20V 4.0Ah batteries, providing approximately 45+ minutes of runtime on a full charge. Monitor the battery indicator lights on the batteries to check the remaining power. Recharge batteries as needed using the provided charger.

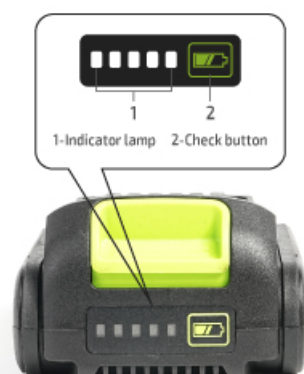


Image: Battery indicator lights and check button on a MYTOL battery.

3.5 Full Bag Indicator

The grass collection bag is equipped with a full bag indicator. When the indicator flap is closed, it signifies that the bag is full and needs to be emptied. Empty the bag regularly to maintain optimal cutting performance.



Image: The full bag indicator flap on the grass catcher.

4. MAINTENANCE

4.1 Cleaning the Mower

After each use, disconnect the safety key and remove the batteries. Clean the underside of the mower deck and the grass collection bag to prevent buildup of grass clippings. Use a brush or cloth; avoid using water directly on electrical components.

4.2 Blade Care

Regularly inspect the mowing blade for sharpness and damage. A dull or damaged blade can lead to poor cutting performance and strain the motor. Sharpen or replace the blade as necessary. Always wear heavy-duty gloves when handling the blade.

4.3 Battery Care and Storage

Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. Do not store batteries in a discharged state for extended periods. Always charge batteries fully before storing them for the off-season.

4.4 Storage

The MYTOL lawn mower features folding handles for compact storage. Loosen the quick-release levers on the handlebars and fold them down. Store the mower in a dry, secure location, out of reach of children.

EASY TO STORAGE WITH FOLDING HANDLES



Image: The lawn mower with its handles folded for easy storage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mower does not start	Safety key not inserted. Batteries not charged or improperly inserted. Safety button/start lever not engaged correctly.	Insert safety key fully. Charge batteries; ensure they are clicked into place. Press safety button, then pull start lever.
Poor cutting performance	Dull or damaged blade. Cutting height too low for grass conditions. Grass collection bag full.	Sharpen or replace blade. Increase cutting height. Empty grass collection bag.

Problem	Possible Cause	Solution
Mower stops unexpectedly	Batteries discharged. Overload protection activated (e.g., very thick grass). Safety key dislodged.	Recharge batteries. Clear obstruction, raise cutting height, or reduce mowing speed. Re-insert safety key.

6. SPECIFICATIONS

Feature	Detail
Brand	MYTOL
Model Number	MLM4016
Power Source	Battery Powered (2x 20V)
Motor Type	Brushless
Cutting Width	16 Inches
Mowing Heights	6 positions (0.98" to 3")
Grass Box Capacity	11.9 Gallons
Battery Life	Approx. 45+ minutes (with 2x 4.0Ah batteries)
Item Weight	36 pounds (bare tool)
Product Dimensions	52"D x 14.5"W x 39"H
Material	Polypropylene

7. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please contact MYTOL customer service. Refer to the product packaging or the official MYTOL website for the most current contact details.