

[Manuals.plus](#) /

› [Citizen](#) /

› Citizen Women's Eco-Drive Corso Classic Watch User Manual

Citizen EW2299-50A

Citizen Women's Eco-Drive Corso Classic Watch User Manual

Brand: Citizen | Model: EW2299-50A

INTRODUCTION

This manual provides essential information for the proper use and care of your Citizen Women's Eco-Drive Corso Classic Watch (Model: EW2299-50A). This elegant timepiece features a two-tone gold and silver-tone stainless steel bracelet, a 3-hand white dial with a date indicator, luminous hands, and gold-tone markers. It is equipped with Citizen's proprietary Eco-Drive technology, which powers the watch using any light source, eliminating the need for battery replacement. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

KEY FEATURES

- Timeless styling that effortlessly takes you from work to play.
- 3 Hand, Date display for essential timekeeping.
- Elegant Two-Tone Stainless Steel construction.
- Durable Mineral Crystal protects the dial.
- Water Resistant to 100 Meters (330 feet) for everyday use and light water activities.
- Powered by Citizen's proprietary Eco-Drive technology, sustainably charged by any light source, never needing a battery replacement.
- Comes with a 5 Year Limited Warranty.

SETUP

Initial Charge

Your Eco-Drive watch is powered by light. Before initial use, or if the watch has stopped, ensure it receives sufficient light exposure to charge the internal power cell. Place the watch in direct sunlight or under bright artificial light for several hours. A full charge can last for months, even in the dark.



Image: Front view of the Citizen Women's Eco-Drive Corso Classic Watch, showcasing its two-tone stainless steel design and white dial.

Setting Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) out to the first or second click position. Refer to your specific model's detailed user guide for exact crown positions.
2. **Set the time:** Rotate the crown to move the hands clockwise until the desired time is set. Ensure to account for AM/PM if your watch has a 24-hour indicator or date change.
3. **Set the date:** If applicable, rotate the crown in the opposite direction (or use the first click position) to adjust the date. Avoid setting the date between 9 PM and 1 AM, as this can damage the movement.
4. **Push in the crown:** Once time and date are set, push the crown back into its normal position to start the watch.

OPERATING YOUR WATCH

Timekeeping

Your Citizen Eco-Drive watch is designed for accurate timekeeping. The hour, minute, and second hands move continuously, powered by the light-generated energy stored in the power cell.

Date Display

The watch features a date display window. The date automatically advances once every 24 hours. You may need to manually adjust the date at the end of months with fewer than 31 days (February, April, June, September, November).

Water Resistance

This watch is water resistant to 100 meters (10 BAR). This means it is suitable for everyday use, showering, swimming, and snorkeling. It is not suitable for high-impact water sports or scuba diving. Always ensure the crown is fully pushed in before exposing the watch to water.

MAINTENANCE

Charging Guidelines

To maintain optimal performance, expose your Eco-Drive watch to light regularly. Avoid prolonged storage in dark places. While the watch can run for months on a full charge, consistent exposure to light will ensure it remains fully powered. Do not place the watch on a windowsill in direct sunlight for extended periods, as extreme temperatures can damage the movement.

Cleaning

Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dirt and moisture. For stainless steel parts, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners or abrasive materials, as these can damage the finish.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running intermittently.	Insufficient charge.	Expose the watch to bright light (sunlight or strong artificial light) for several hours to fully charge.
Time or date is incorrect.	Manual adjustment needed after prolonged storage or time zone change.	Pull out the crown and manually set the time and date as described in the "Setting Time and Date" section.
Condensation inside the crystal.	Sudden temperature change or water ingress.	If condensation persists, contact Citizen customer service for inspection. Avoid extreme temperature changes.

SPECIFICATIONS

Specification	Detail
Item Model Number	EW2299-50A
Department	womens

Specification	Detail
Batteries	1 Lithium Metal batteries required. (included) - <i>Note: This refers to the rechargeable power cell.</i>
Manufacturer	Citizen
Water Resistance	100 Meters (10 BAR)
Caliber Number	E011

WARRANTY AND SUPPORT

Warranty Information

Your Citizen Eco-Drive Corso Classic Watch is covered by a 5 Year Limited Warranty. Please refer to the official warranty documentation included with your purchase for full terms and conditions.

Additional Resources

For more detailed instructions and support, please refer to the official documents:

[Installation Manual \(PDF\)](#)

[User Guide \(PDF\)](#)

© 2023 Citizen Watch Company. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09X1B815L>

More documents and user manuals: <https://manuals.plus/>