

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [POMIACAM](#) /

› [POMIACAM X9-MOVTADHS Pro 8-Inch Retina Touch Screen IP Camera Tester User Manual](#)

## POMIACAM X9-MOVTADHS

# POMIACAM X9-MOVTADHS Pro IP Camera Tester User Manual

Model: X9-MOVTADHS

## 1. INTRODUCTION

The POMIACAM X9-MOVTADHS Pro is an advanced 8-inch retina touch screen IP camera tester designed for comprehensive surveillance system installation and maintenance. This all-in-one device supports a wide range of camera technologies including 8K H.265/H.264 IP, 8MP TVI/AHD/ CVI, CVBS, and SDI. It integrates multiple essential tools such as a digital multimeter, TDR cable diagnostics, optical power meter (OPM), visual fault locator (VFL), PoE power output, 4K HDMI input/output, and a Wi-Fi analyzer. This manual provides detailed instructions for the safe and effective use of your device.

## 2. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating this device. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not expose the device to rain or moisture.
- Avoid operating the device in environments with extreme temperatures or high humidity.
- Use only the provided power adapter and accessories.
- Do not attempt to disassemble or modify the device. Refer all servicing to qualified personnel.
- Exercise caution when working with electrical circuits, especially when using the multimeter functions.

## 3. PACKAGE CONTENTS

Verify that all items are present in your package:

- POMIACAM X9-MOVTADHS Pro IP Camera Tester Unit
- Power Adapter
- Lithium Polymer Battery (pre-installed)
- Multimeter Test Leads
- BNC Cables
- RS485 Cable
- Audio Cable
- DC Power Cable

- Cable Tracer
- Safety Strap
- Carrying Case
- User Manual (this document)

# Cable tracer + UTP cable test

Decisively rejects noise and false signals, more accurate.

Support network cable, shielded cable, BNC cable and telephone line.

**UTP cable test at the same time**

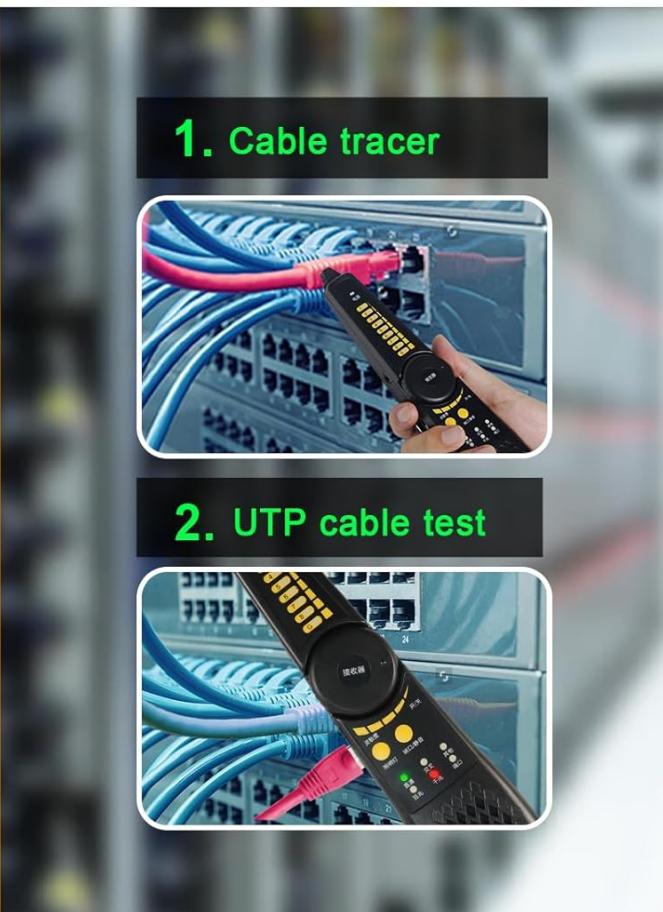


Figure 3.1: The complete package of the POMIACAM X9-MOVTADHS Pro IP Camera Tester, including the main unit, various testing cables, power adapter, and a protective carrying case, illustrating all components provided with the product.



Figure 3.2: A different perspective of the product and its accessories, clearly showing the included cable tracer, multimeter probes, and various connection cables, highlighting the comprehensive toolkit provided for diverse testing scenarios.

## 4. DEVICE OVERVIEW AND INTERFACE

The X9-MOVTDADHS Pro features an 8-inch retina touch screen and a robust design for field use. Familiarize yourself with the device's layout and ports.



Figure 4.1: Side view of the tester with its protective cover opened, revealing the 8-inch screen displaying a live video feed from a connected camera, demonstrating its real-time monitoring capability.



# Interface

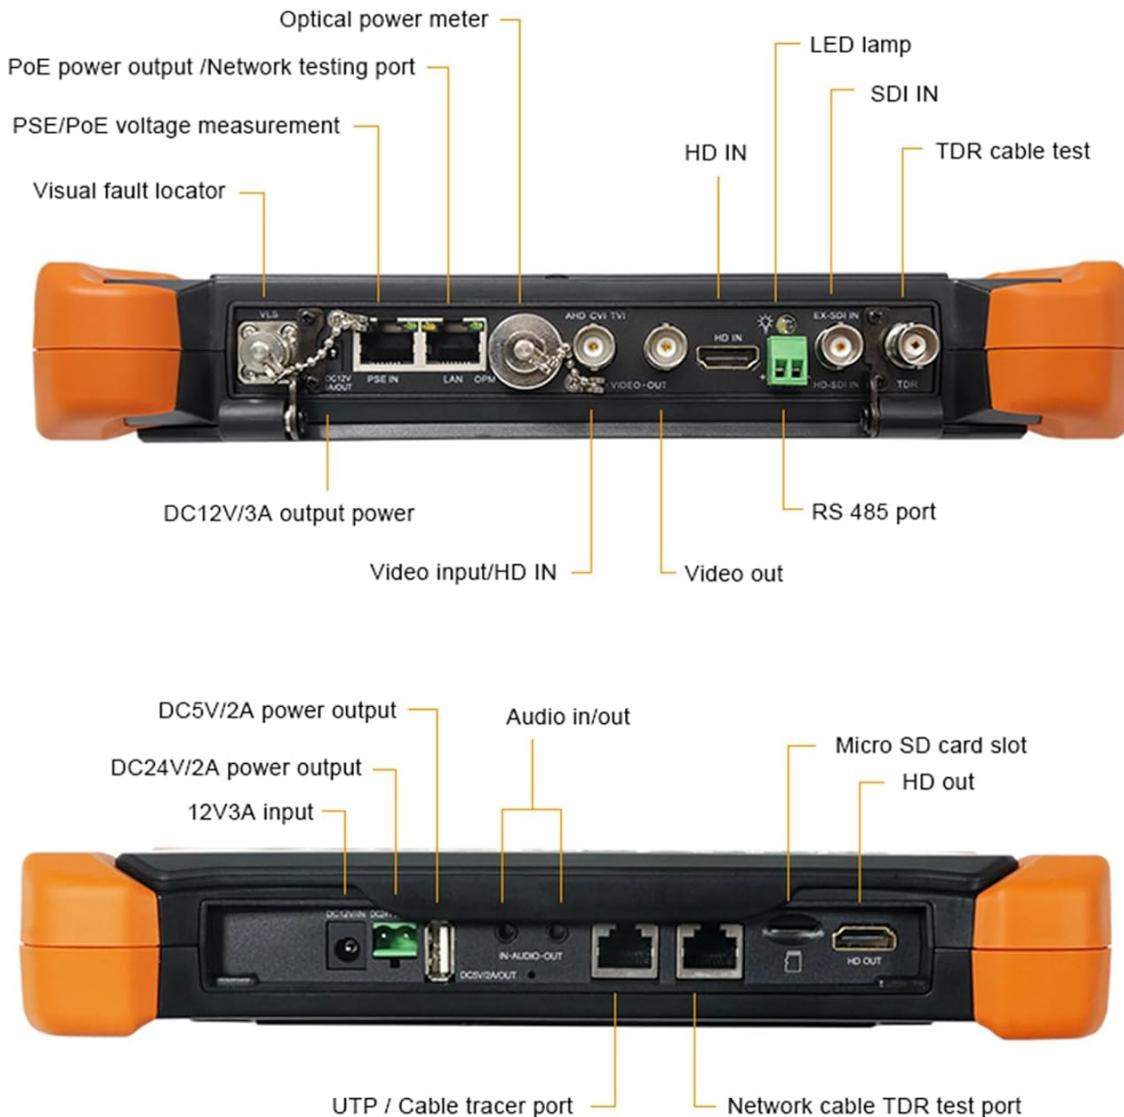


Figure 4.2: This diagram illustrates the various input and output ports on the POMIACAM X9-MOVTADHS Pro, including connections for optical power meter, PoE power output, network testing, SDI input, TDR cable test, DC power inputs/outputs, video and audio connections, micro SD card slot, and network cable ports, providing a comprehensive overview of its connectivity.

## Key Interface Components:

- Optical Power Meter (OPM) Port:** For fiber optic power testing.
- PoE Power Output / Network Testing Port:** Provides PoE power and network connectivity.
- PSE/PoE Voltage Measurement:** Measures Power Sourcing Equipment voltage.
- Visual Fault Locator (VFL) Port:** For fiber optic fault detection.
- LED Lamp:** Integrated light source.
- SDI IN:** Serial Digital Interface input.
- TDR Cable Test Port:** For Time Domain Reflectometer cable diagnostics.
- DC12V/3A Output Power:** Power output for cameras.
- Video Input/HD IN:** Connects to various video signals.
- Video Out:** Video signal output.
- RS 485 Port:** For PTZ control and data communication.

- **DC5V/2A Power Output:** Additional power output.
- **DC24V/2A Power Output:** Additional power output.
- **12V/3A Input:** Main power input.
- **Audio In/Out:** For audio testing.
- **Micro SD Card Slot:** For storage.
- **HD Out:** HDMI output.
- **UTP / Cable Tracer Port:** For tracing network cables.
- **Network Cable TDR Test Port:** Dedicated port for network cable TDR.

## 5. SETUP

---

### 5.1 Initial Charging

Before first use, fully charge the device using the provided power adapter. Connect the adapter to the 12V/3A input port and plug it into a power outlet. The charging indicator will show the charging status.

### 5.2 Power On/Off

- **Power On:** Press and hold the power button (usually located on the side or top) until the screen illuminates.
- **Power Off:** Press and hold the power button until a power-off menu appears, then select 'Power Off'. A short press will typically put the device into sleep mode.

### 5.3 Basic Navigation

The device operates via an 8-inch retina touch screen. Tap icons to open applications, swipe to navigate menus, and use the physical buttons for quick access to common functions.



Figure 5.1: The POMIACAM X9-MOVTDHS Pro IP Camera Tester being held, with its vibrant 8-inch retina touch screen displaying the main interface, including options for IP Camera Test, CVBS & HD Camera, Cable Test, Media Player, Tools, My APPS, Manual, and Update.

## 6. OPERATING INSTRUCTIONS

### 6.1 IP Camera Test

This function allows testing of IP cameras, supporting 8K H.265/H.264 video formats and ONVIF auto-detection.

1. Connect the IP camera to the tester's network port.
2. Select 'IP Camera Test' from the main menu.
3. The tester will automatically detect ONVIF cameras. Select the camera from the list.
4. View live video, configure camera settings, and perform network diagnostics.

### 6.2 Analog Camera Test (HD Coaxial Test)

The device supports 8MP TVI/AHD/CVI, CVBS, and SDI camera testing.

1. Connect the analog camera to the appropriate BNC input (TVI/AHD/CVI or SDI IN).
2. Select 'CVBS & HD Camera' from the main menu.
3. The tester will automatically detect the camera type and display the video feed.
4. Utilize coaxial PTZ control and OSD menu access for camera configuration.

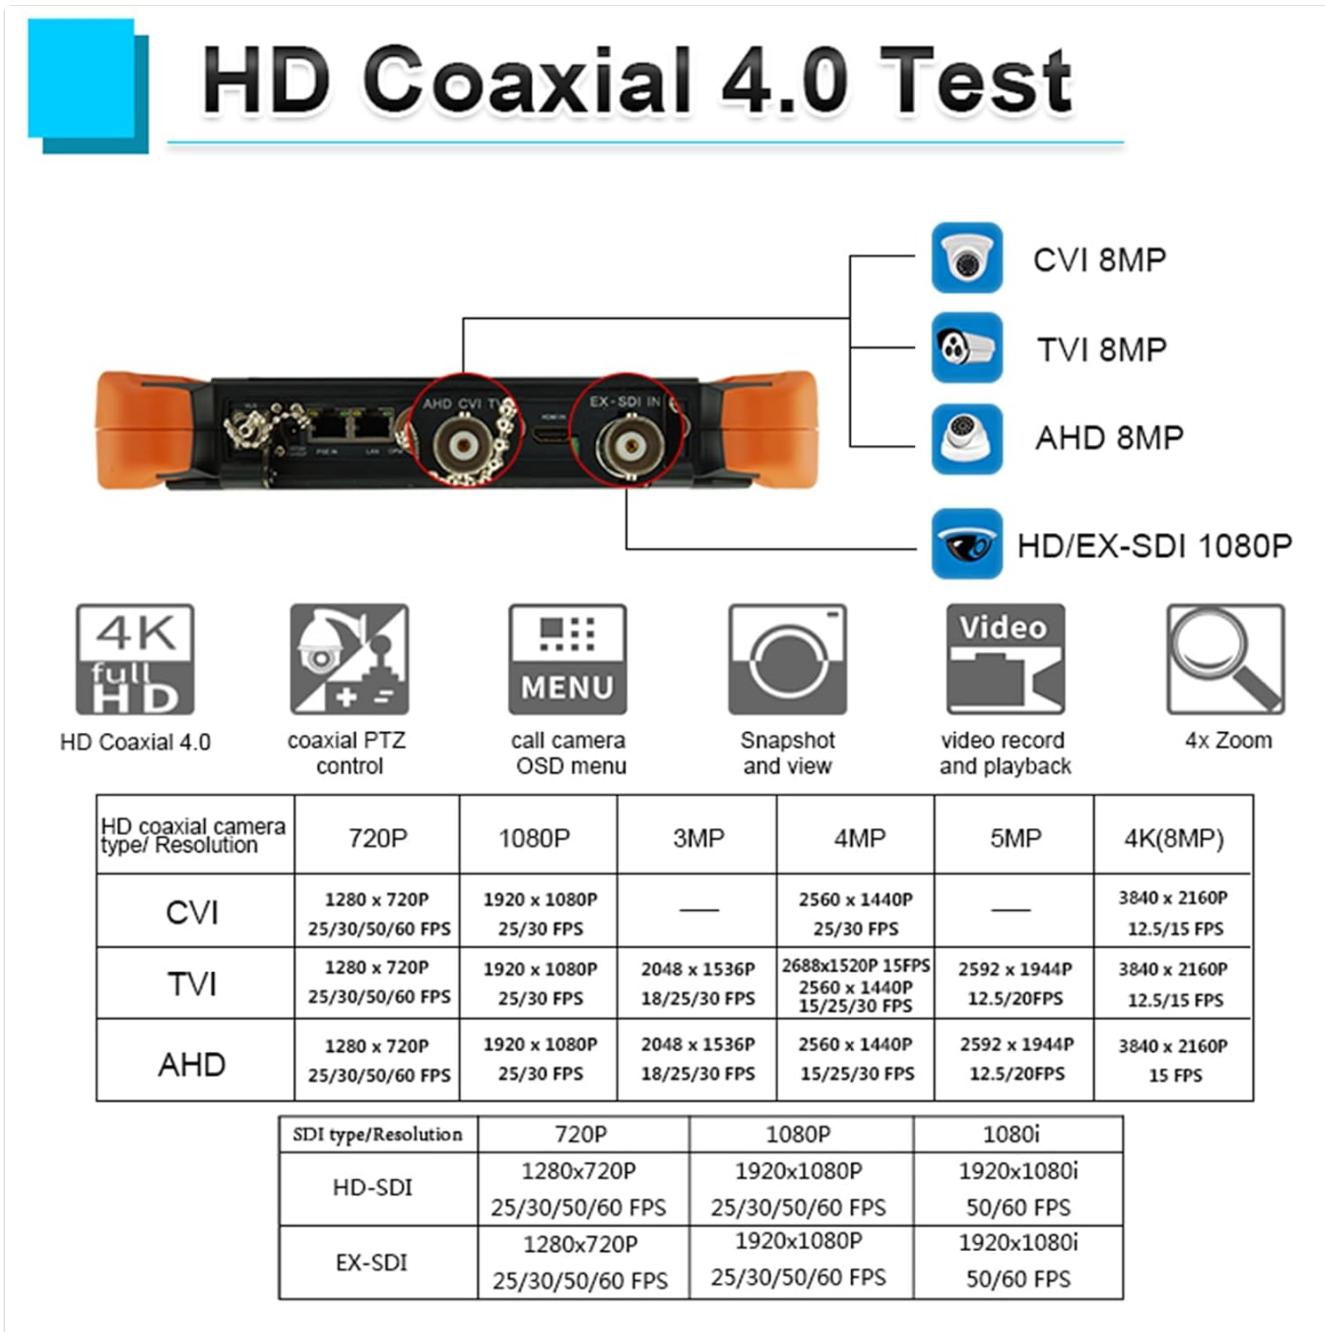


Figure 6.1: Table outlining the HD Coaxial 4.0 test functionalities, specifying the supported resolutions and frame rates for various camera types including CVI, TVI, AHD, HD-SDI, and EX-SDI, demonstrating the tester's compatibility with a wide range of coaxial camera systems up to 8MP.

### 6.3 Digital Multimeter Function

The integrated digital multimeter allows for various electrical measurements.

1. Connect the multimeter test leads to the designated ports on the tester.
2. Select the 'Multimeter' application from the 'Tools' menu.
3. Choose the desired measurement type: DC/AC voltage, resistance, continuity, diode, or capacitance.
4. Perform measurements and record data as needed.

### 6.4 TDR Cable Test

The Time Domain Reflectometer (TDR) function measures cable length and identifies faults like short circuits or breaks up to 1200 meters.

1. Connect the cable to be tested to the TDR cable test port.
2. Select 'Cable Test' from the main menu and then choose 'TDR'.
3. Initiate the test. The device will display cable length and fault locations.

**Innovative coaxial HD focus, video signal quality test**



Supported APP:



|       |           |     |
|-------|-----------|-----|
| ONVIF | TVI       | CVI |
| AHD   | HD/EX-SDI |     |

**309/317**

|               |            |
|---------------|------------|
| Current Value | Peak value |
|---------------|------------|

Innovative HD coaxial camera transmission signal quality test, transmit quality best value is 100. (ONVIF not support)  
Focus: Current value closer to the peak, the image is clearer  
More reliable and more intuitive to adjust the camera focal length  
Image quality test: Dark, normal and brighter indicates the image quality

Figure 6.2: The TDR 2.0 cable test screen, illustrating how the device measures cable length and identifies short circuits or breaks, with a visual representation of the cable's integrity and fault distance.



Figure 6.3: Different types of cables that the tester can work with, such as telephone, BNC, network, elevator, RVV, and power cables, indicating its versatility in cable testing applications.

## 6.5 Optical Power Meter (OPM) & Visual Fault Locator (VFL)

These tools are used for fiber optic cable testing.

1. **OPM:** Connect the fiber optic cable to the OPM port. Select the OPM function from 'Tools' to measure optical power at various wavelengths (1625, 1550, 1490, 1310, 1300, 850nm).
2. **VFL:** Connect the fiber optic cable to the VFL port. Activate the 10mW VFL (650nm wavelength) to visually locate bends and breaks in multi-mode and single-mode fibers up to 10KM.

## 6.6 PoE Power Output

The tester can provide Power over Ethernet (PoE) to power compatible devices.

1. Connect the network cable from the tester's PoE output port to the PoE-compatible device (e.g., an IP camera).
2. Activate the PoE output function from the menu. The tester will supply power to the connected device.

## 6.7 HDMI Input/Output

The device supports 4K HDMI input and output for connecting to external displays or receiving video signals.

- **HDMI Input:** Connect an HDMI source to the HDMI IN port to display its video on the tester's screen.
- **HDMI Output:** Connect an external monitor to the HD OUT port to display the tester's screen content.

## 6.8 Wi-Fi Analyzer

Analyze Wi-Fi signal strength and stability.

1. Select the 'Wi-Fi Analyzer' application from the 'Tools' menu.
2. The device will scan for available Wi-Fi networks and display their signal strength, channel usage, and stability.
3. Use this information to optimize Wi-Fi channel selection for better performance.



Figure 6.4: This image illustrates the dual 1000M Ethernet ports for connecting and testing network devices, alongside a visual representation of the Wi-Fi Analyzer feature, which helps in optimizing wireless network performance by showing signal strength and channel usage.

## 6.9 HD Coaxial Level Meter

Measure video signal quality for coaxial systems.

1. Connect the coaxial cable to the appropriate input.
2. Access the 'HD Coaxial Level Meter' function.
3. The device will display peak level, sync level, and burst level, allowing for quick diagnosis of signal issues.

**TDR 2.0 cable test**



• Cable shorts, opens and length test, measure max. 1.2KM length.  
 • New interface and system, the curve and value simultaneously display, move the curve, locate the fault point.  
 • The cable wave speed can be manually added and adjusted, and fault value directly display, BNC cable, elevator cable, RVV cable, network cable, and telephone cable etc test.

**HD coaxial video level meter**



• Through hardware high-speed sampling and processing technology, accurately measure video peak level, sync level and burst level, can check camera transmission image quality.  
 • Combined HD coaxial and analog camera test, can select corresponding camera type and display image directly.





By one key to create testing report, save level value, camera and meter info



Accurately judgment BNC cable whether is normal

| Video level | Reference value |
|-------------|-----------------|
| Peak level  | 1000±200mV      |
| Sync level  | 300±35mV        |
| Burst level | 220±20mV        |

Different camera manufacturers, different standards


Figure 6.5: The HD coaxial level meter interface, providing critical video signal quality measurements such as peak level, sync level, and burst level, which are essential for diagnosing and ensuring optimal performance of coaxial camera systems.

## 6.10 Coaxial HD Focus and Video Signal Quality Test

This feature assists in achieving optimal camera focus and assessing image quality.

1. While viewing a coaxial HD camera feed, access the focus and quality test function.
2. Adjust the camera's focal length while observing the 'Current Value' and 'Peak Value' indicators. The closer the current value is to the peak, the clearer the image.
3. Image quality indicators (Dark, Normal, Brighter) provide feedback on the overall video signal quality.

**Dual 1000M Ethernet ports**

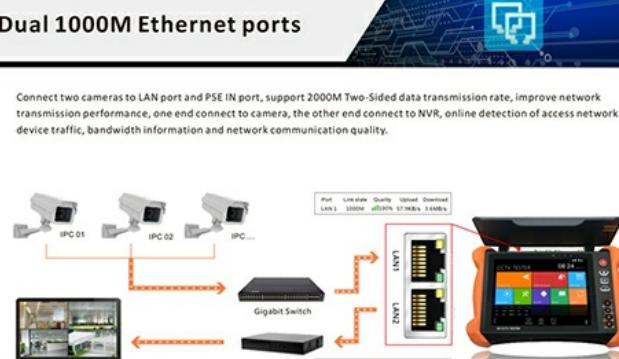

Connect two cameras to LAN port and PSE IN port, support 2000M Two-Sided data transmission rate, improve network transmission performance, one end connect to camera, the other end connect to NVR, online detection of access network device traffic, bandwidth information and network communication quality.

**Wi-Fi Analyzer**



Channel optimization adjustment  
 Check Wi-Fi signal strength and stability  
 View WiFi details

Figure 6.6: The coaxial HD focus and video signal quality test screen, which assists users in achieving optimal camera focus and assessing the overall image quality, with indicators for current and peak focus values.

## 7. MAINTENANCE

### 7.1 Cleaning

- Wipe the device with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly.
- Do not use abrasive cleaners, solvents, or strong chemicals, as these can damage the screen or casing.

- Keep the ports free of dust and debris. Use compressed air if necessary.

## 7.2 Battery Care

The device is equipped with a 7.4V 7000mAh Lithium Polymer battery.

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in use, to maintain battery health.
- Store the device in a cool, dry place when not in use for extended periods.

### Built-in battery

7.4V 7000mAh 51.8Wh battery Li-ion Polymer battery



- Ensure the battery is charged. Connect the power adapter and try again.
- Press and hold the power button for at least 10 seconds to perform a hard reset.

- **No video display from camera:**

- Check all cable connections to ensure they are secure and correctly plugged into the appropriate ports.
- Verify the camera is powered on and functioning correctly.
- Ensure the correct camera type (IP, AHD, TVI, CVI, SDI, CVBS) is selected in the tester's menu.
- For IP cameras, confirm network settings (IP address, subnet mask) are compatible.

- **Touch screen unresponsive:**

- Restart the device.
- Ensure the screen is clean and free of moisture or debris.

- **TDR or Multimeter readings are inaccurate:**

- Ensure test leads and cables are properly connected and not damaged.
- Calibrate the device if a calibration option is available in the settings.

## 9. SPECIFICATIONS

| Feature                    | Specification  |
|----------------------------|--|
| Model                      | X9-MOVTADHS  |
| Display                    | 8-inch Retina Touch Screen, 2048*1536 Resolution                       |
| IP Camera Test             | 8K H.265/H.264, ONVIF Auto-detection                                   |
| Analog Camera Test         | 8MP TVI/AHD/CVI, CVBS, SDI   |
| Multimeter                 | DC/AC Voltage, Resistance, Continuity, Diode, Capacitance              |
| TDR Cable Test             | Measurement Range up to 1200 meters                                    |
| Optical Power Meter (OPM)  | Wavelengths: 1625, 1550, 1490, 1310, 1300, 850nm; Range: -70 ~ +10 dBm |
| Visual Fault Locator (VFL) | 10mW, 650nm Wavelength, Test Range 10KM                                |
| PoE Power Output           | Yes, DC48V   |
| HDMI                       | 4K HDMI Input/Output   |
| Wi-Fi                      | Built-in Wi-Fi, Wi-Fi Analyzer, Hotspot Function                       |
| Battery                    | 7.4V 7000mAh Lithium Polymer (13-hour runtime)                         |
| Dimensions                 | 13.78 x 12.01 x 3.94 inches  |
| Weight                     | 6.27 Pounds  |
| Operating Voltage (Min.)   | 12 Volts (DC)  |

## 10. WARRANTY AND SUPPORT


The POMIACAM X9-MOVTADHS Pro IP Camera Tester comes with a one-year warranty from the date of purchase.

This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact POMIACAM customer service. Our support team is available to assist you with any questions or issues you may encounter.

**Contact Information:** Refer to the product packaging or the official POMIACAM website for the most current customer support contact details.

## Related Documents - X9-MOVTDADHS
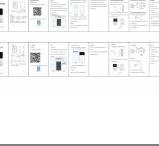
|   |   |
|---|---|
|    | <p><a href="#">Rsrting X9 Series IP Camera Tester User Manual</a></p> <p>Comprehensive user manual for the Rsrting X9 Series IP Camera Tester, detailing installation, operation, and testing of IP, HD Coaxial (TVI, CVI, AHD), SDI, and CVBS cameras. Features include network diagnostics, power outputs, and cable testing.</p>   |
|   | <p><a href="#">Rsrting X7 Series Security Camera Tester User Manual</a></p> <p>This user manual provides comprehensive instructions for operating the Rsrting X7 Series Security Camera Tester. It covers safety information, product introduction, detailed operation guides, and technical specifications for various models including X7 (Basic version), X7-ADH, X7-ADHS, and X7-MOVTDADHS.</p> |
|  | <p><a href="#">Ranger RCI-X9 10 Meter Amateur Mobile Transceiver User's Manual</a></p> <p>This user's manual provides comprehensive information for the Ranger RCI-X9 10 Meter Amateur Mobile Transceiver. It covers technical specifications, installation procedures, front panel controls, rear panel connections, operating modes, and microphone wiring instructions.</p>                      |
|  | <p><a href="#">SMART VISUAL DOORBELL X9 User Manual - Installation, Setup, and Operation Guide</a></p> <p>Comprehensive user manual for the SMART VISUAL DOORBELL X9, covering appearance, app installation and connection, doorbell setup, ding-dong machine pairing, and FCC compliance. Learn how to install and operate your smart doorbell.</p>  |
|  | <p><a href="#">Tuncmatik PowerUP ECO X9 6kVA / 10kVA Online UPS User Manual</a></p> <p>Comprehensive user manual for Tuncmatik PowerUP ECO X9 6kVA and 10kVA Online UPS systems, covering installation, operation, safety, troubleshooting, and specifications.</p>   |
|  | <p><a href="#">OGORUS X9 Wireless Charging Mouse User Guide</a></p> <p>Comprehensive guide for the OGORUS X9 Wireless Charging Mouse, covering 2.4G wireless and Bluetooth connectivity, DPI adjustment, and power management.</p>  |

