

[Manuals.plus](#) /

> [Wenko](#) /

> [Wenko Clayton Kitchen Roll Holder Instruction Manual - Model 55015100](#)

## Wenko 55015100

# Wenko Clayton Kitchen Roll Holder

Model: 55015100

## PRODUCT OVERVIEW

---

The Wenko Clayton Kitchen Roll Holder is a freestanding accessory designed to keep your kitchen paper towels easily accessible. Constructed from durable powder-coated metal, it features a stable base and a unique ball mechanism to prevent unintentional unrolling of the paper.





Image: The Wenko Clayton Kitchen Roll Holder, featuring its black powder-coated metal design and a standard kitchen roll in place.

## KEY FEATURES

---

- **Freestanding Design:** Allows flexible placement on any countertop or surface.
- **Durable Material:** Made from robust powder-coated metal for longevity.
- **Stable Base:** Ensures secure positioning and prevents tipping.
- **Anti-Unrolling Mechanism:** A small ball on a rod gently holds the paper roll, preventing it from unrolling unintentionally.
- **Universal Compatibility:** Designed to accommodate all common kitchen paper towel rolls.



- ✓ Ball prevents unintentional unrolling of the paper towel
- ✓ Fixed base ensures secure hold
- ✓ Suitable for standard kitchen rolls
- ✓ Made of powder-coated metal
- ✓ *Kugel verhindert unbeabsichtigtes Abrollen der Tücher*
- ✓ *Fester Standfuß sorgt für sicheren Halt*
- ✓ *Passend für handelsübliche Küchenrollen*
- ✓ *Aus pulverbeschichtetem Metall*

Image: A detailed view of the kitchen roll holder, illustrating its key features such as the anti-unrolling ball, stable base, and material.

## SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts are present: the base, the central rod, and the anti-unrolling rod with the ball.
2. **Assemble the Rod:** The central rod typically screws into the base. Align the threaded end of the central rod with the hole in the center of the base and turn clockwise until securely tightened.
3. **Attach Anti-Unrolling Rod:** Insert the thinner anti-unrolling rod into the small hole located on the side of the base. Gently push it through until it is stable.
4. **Place Kitchen Roll:** Slide a standard kitchen paper towel roll onto the central rod.
5. **Position Anti-Unrolling Ball:** Adjust the anti-unrolling rod so that the ball gently rests against the side of the paper roll, providing slight tension to prevent it from spinning freely.
6. **Placement:** Place the assembled holder on a flat, stable surface in your kitchen or desired area.

## OPERATING INSTRUCTIONS

Using the Wenko Clayton Kitchen Roll Holder is straightforward:

1. **Dispensing Paper:** To tear off a sheet, simply pull the paper towel upwards and away from the roll. The tension from the anti-unrolling ball will help hold the roll in place, allowing for a clean tear.
2. **Replacing Roll:** When the roll is empty, lift the remaining cardboard core off the central rod. Slide a new standard kitchen paper towel roll onto the rod. Ensure the anti-unrolling rod is positioned correctly against the new roll.





Image: A close-up view of the small ball on the rod, which provides gentle pressure to prevent the paper towel roll from unrolling freely.

## MAINTENANCE

To ensure the longevity and appearance of your kitchen roll holder:

- **Cleaning:** Wipe the holder regularly with a soft, damp cloth. For stubborn marks, a mild soap solution can be used.
- **Drying:** Dry thoroughly with a clean, soft cloth immediately after cleaning to prevent water spots.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, scouring pads, or chemical solvents, as these can damage the powder-coated finish.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Paper tears unevenly or with difficulty.	Anti-unrolling ball too tight. Paper quality. Incorrect tearing technique.	Gently adjust the anti-unrolling rod to reduce pressure on the roll. Ensure you are pulling the paper upwards and away in a swift motion. Try a different brand of kitchen paper towel.
Holder feels unstable.	Not placed on a flat surface. Central rod not securely tightened.	Relocate the holder to a completely flat and stable surface. Check and tighten the central rod connection to the base.

## SPECIFICATIONS

- **Model Number:** 55015100
- **Material:** Powder-coated metal
- **Color:** Black
- **Dimensions (Diameter x Height):** 15 cm x 33 cm (approximately 5.90 inches x 12.99 inches)

- **Weight:** 547 g (approximately 1.21 lbs)
- **Mounting Type:** Freestanding / Countertop



Image: Technical drawing illustrating the dimensions of the kitchen roll holder, with a base diameter of 15 cm and a height of 33 cm.

## WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please refer to the retailer's policy where the product was purchased or visit the official Wenko website. Keep your proof of purchase for any warranty claims.

**Wenko Official Website:** [www.wenko.com](http://www.wenko.com)