

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Tamagotchi](#) /
- › [Tamagotchi Nano x TinyTAN - Red Electronic Pet Instruction Manual](#)

Tamagotchi 88867

Tamagotchi Nano x TinyTAN - Red Electronic Pet Instruction Manual

Model: 88867

INTRODUCTION

Welcome to the world of TinyTAN Tamagotchi! This mini electronic pet device allows you to interact with one of the seven TinyTAN characters, who will appear through the "Magic Door" based on your interactions. Develop a close bond with your chosen TinyTAN character by spending time together daily. This Tamagotchi Nano series device is designed for portability, allowing you to take your virtual companion everywhere.



© BIGHIT MUSIC. All Rights Reserved. ® & © 2022 BANDAI

Image: The red Tamagotchi Nano x TinyTAN device, featuring a digital screen displaying the TinyTAN logo and three control buttons below.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years. Adult supervision is recommended for younger users.

WHAT'S IN THE BOX

-
- TinyTAN x Tamagotchi Red Electronic Pet device
 - 1 LR44 battery (pre-installed or included separately)

**BAN
DAI** ^{MD}

BANDAI NAMCO

8+

#88865
#88867

TinyTAN TAMAGOTCHI



Image: Front view of the TinyTAN Tamagotchi packaging, showing the red device and various TinyTAN character illustrations.

SETUP

1. Battery Installation

Your Tamagotchi Nano requires one LR44 battery. If the battery is not pre-installed, carefully open the battery compartment on the back of the device using a small screwdriver. Insert the LR44 battery, ensuring correct polarity (+/-). Close the compartment securely.

2. Initial Activation and Time Setting

1. Pull the tab from the battery compartment (if present) or press the reset button on the back of the device with a pointed object (like a pen tip).
2. The device will display a setup screen. Use the buttons (A, B, C) to set the current time and date. Button A typically cycles through options, Button B confirms, and Button C cancels or returns.
3. After setting the time, you will interact with the "Magic Door" to welcome your first TinyTAN character. Follow the on-screen prompts, which may involve pressing buttons to "Clean" or "Knock" the door.



Image: Illustration showing the Tamagotchi screen with options to 'Clean' and 'Knock' the Magic Door to reveal a TinyTAN character.

OPERATING INSTRUCTIONS

Your TinyTAN Tamagotchi requires daily care and interaction to thrive. The character's outfit and hairstyle will change based on how you spend time with them and how often you play mini-games.

Basic Care

- **Feeding:** Your TinyTAN character will periodically request food. Use the control buttons to select and provide their favorite foods. All characters enjoy custard tarts.
- **Attention:** Respond to your character's calls for attention. Neglecting your character may cause them to become unhappy or even return to the "Magic Door."
- **Interaction:** Engage with your TinyTAN character through various activities.

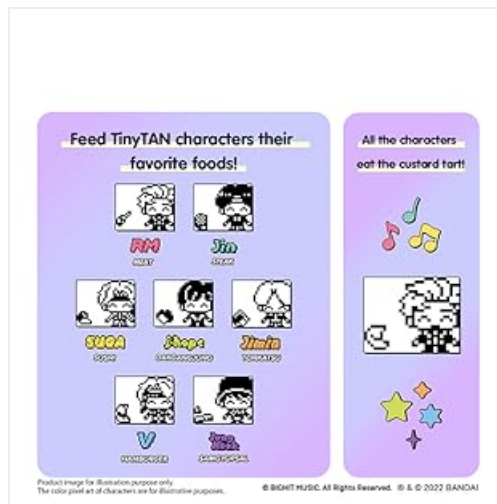


Image: Visual guide on feeding TinyTAN characters their favorite foods, including RM with meat, Jin with steak, Suga with sushi, J-Hope with Samgyeopsal, Jimin with Tonkatsu, V with hamburger, and Jung Kook with Samgyeopsal, plus a custard tart for all.

Mini-Games

Two mini-games are included to play with your TinyTAN characters:

- **Dance to "Dynamite":** Participate in a rhythm-based game.
- **Make Custard Tarts:** A game involving preparing treats for your character.

Playing these games regularly contributes to your character's happiness and development.



Image: Illustration showing the 'Let's Dance! Dynamite!' mini-game with pixelated TinyTAN characters and the 'Make the custard tarts!' game.

Character Evolution

The way you care for your TinyTAN will influence their appearance and activities. Different interactions can lead to changes in their outfits and hairstyles. Ensure consistent care to see various styles and prevent your character from leaving.



Image: Illustrations depicting various TinyTAN character activities such as waking up in pajamas, listening to music, dance practice, and sauna, emphasizing interaction to de-stress characters.

Official Product Video

Video: An official product video from Bandai America Inc. showcasing the features and gameplay of the TinyTAN x Tamagotchi device, including character interactions and mini-games.

MAINTENANCE

Cleaning

To clean your Tamagotchi Nano, gently wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the device or screen.

Battery Replacement

When the battery runs low, the screen display may dim or the device may stop functioning. Replace the LR44 battery by following the installation steps outlined in the "Setup" section. Ensure the device is turned off or reset before replacing the battery.

TROUBLESHOOTING

- **Device not turning on:** Check if the LR44 battery is correctly installed and has sufficient charge. Replace if necessary.
- **Screen is blank or unresponsive:** Try pressing the reset button on the back of the device with a pointed object. Note that this will reset your character's progress.
- **Character disappeared:** If your TinyTAN character is neglected for too long, they may return to the "Magic Door." You will need to restart the game to get a new character.
- **Buttons not responding:** Ensure there is no debris obstructing the buttons. If the issue persists, try resetting the device.

SPECIFICATIONS

Feature	Detail
Model Number	88867
UPC	045557888671
Screen Size	1.57 Inches
Display Type	LCD
Power Source	Battery Powered
Battery Type	1 LR44 (included)
Item Dimensions (L x W x H)	1.18" x 0.98" x 1.57"
Material Type	ABS, PC, SI
Age Range Description	8+ years
Manufacturer	Bandai

WARRANTY AND SUPPORT

This product is covered by the manufacturer's standard warranty. For detailed warranty information,

product support, or to inquire about replacement parts, please contact Bandai customer service directly. Refer to the product packaging or the official Bandai website for contact details.