

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AUNA](#) /

› [Auna CD-1000 DG Hifi CD Player User Manual](#)

AUNA CD-1000 DG

Auna CD-1000 DG Hifi CD Player User Manual

Model: CD-1000 DG | Brand: AUNA

1. INTRODUCTION

Thank you for purchasing the Auna CD-1000 DG Hifi CD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

The Auna CD-1000 DG is a versatile CD player designed for high-fidelity audio reproduction. It supports standard audio CDs, CD-R, CD-RW, and MP3 audio media. Featuring a convenient slot-loading mechanism, a clear LED display, a front USB port for MP3 playback, and multiple audio outputs, it integrates seamlessly into various home audio setups.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before operating the unit.
- Keep this manual for future reference.
- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation. Do not block any ventilation openings.
- Place the unit on a stable, flat surface.
- Do not place objects filled with liquids, such as vases, on the unit.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- 1 x Auna CD-1000 DG Hifi CD Player
- 1 x Remote Control
- 1 x User Manual (this document)

4. PRODUCT OVERVIEW

4.1 Front Panel



Image: Front view of the Auna CD-1000 DG Hifi CD Player, showing the silver and black aluminum finish, central LED display, CD slot, control buttons, and USB port.

- **STANDBY Button:** Powers the unit on or off.
- **OPEN/CLOSE Button:** Ejects or retracts the CD tray.
- **PLAY/PAUSE Button:** Starts or pauses CD/USB playback.
- **NEXT Button:** Skips to the next track or navigates menus.
- **PREV Button:** Skips to the previous track or navigates menus.
- **PRE.VOL Knob:** Adjusts the pre-output volume (e.g., for headphones or variable line out).
- **USB Port (5V 200mA):** Connects USB storage devices for MP3 playback.
- **LED Display:** Shows track number, time, and other playback information.

4.2 Rear Panel

The rear panel of the CD-1000 DG features various audio output connections for integration with your amplifier or receiver:

- **Stereo RCA Output:** Standard analog audio output for connecting to an amplifier's analog input.
- **Optical Audio Output:** Digital audio output for connecting to a receiver or DAC with an optical input.
- **Coaxial Audio Output:** Digital audio output for connecting to a receiver or DAC with a coaxial input.
- **Power Input:** For connecting the power cable.
- **Rear On/Off Switch:** Main power switch for the unit.

4.3 Remote Control

The included remote control provides convenient access to all functions of the CD-1000 DG, including power, playback controls, track selection, volume adjustment, and special playback modes.

5. SETUP

5.1 Placement

Place the CD player on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.

5.2 Connecting to Power

1. Ensure the rear ON/OFF switch is in the OFF position.
2. Connect the power cable to the power input on the rear panel of the CD player.
3. Plug the other end of the power cable into a standard 220-240 V ~ / 50/60 Hz wall outlet.
4. Flip the rear ON/OFF switch to the ON position. The unit is now in standby mode.

5.3 Audio Connections

Connect the CD player to your amplifier or receiver using one of the following methods:

- **RCA Connection:** Use an RCA stereo audio cable to connect the RCA outputs on the CD player to the corresponding analog audio inputs (e.g., 'CD' or 'AUX') on your amplifier.
- **Optical Connection:** Use an optical audio cable to connect the optical output on the CD player to an optical input on your amplifier or DAC.
- **Coaxial Connection:** Use a coaxial audio cable to connect the coaxial output on the CD player to a coaxial input on your amplifier or DAC.

6. OPERATION

6.1 Basic CD Playback

1. Press the **STANDBY** button on the front panel or remote control to power on the unit.
2. Press the **OPEN/CLOSE** button to open the CD slot.
3. Gently insert an audio CD (CD, CD-R, or CD-RW) into the slot. The player will automatically retract the disc.
4. The player will read the disc, and playback should begin automatically. If not, press the **PLAY/PAUSE** button.
5. Use the **NEXT** and **PREV** buttons to skip tracks.
6. Adjust the volume using the **PRE.VOL** knob on the front panel or the volume controls on the remote control.

6.2 USB Playback

1. Insert a USB storage device containing MP3 files into the front USB port.
2. The player should automatically switch to USB mode and begin playback of the MP3 files. If not, select USB mode using the remote control (if available) or cycle through sources.
3. Use the **NEXT** and **PREV** buttons to navigate between MP3 files.
4. Note: The player may not display song titles or folder structures for USB playback. Files are typically played sequentially.

6.3 Playback Functions

The CD-1000 DG offers several playback functions, typically accessible via the remote control:

- **Repeat Function:** Repeats the current track or the entire disc/USB content.
- **Random Playback:** Plays tracks in a random order.
- **A-B Sequence Repeat:** Repeats a specific section of a track defined by start (A) and end (B) points.
- **Mute:** Temporarily silences the audio output.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.

- **Disc Care:** Handle CDs by their edges. Keep them clean and free of scratches.
- **Ventilation:** Ensure ventilation openings are clear of dust and debris.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Rear ON/OFF switch off; Wall outlet faulty.	Check power cable connection; Ensure rear ON/OFF switch is ON; Try a different outlet.
No sound	Incorrect audio connection; Amplifier input not selected; Volume too low; Mute function active.	Verify audio cable connections; Select correct input on amplifier; Increase volume; Deactivate mute.
Disc not playing	Disc inserted incorrectly; Disc is dirty or scratched; Unsupported disc format.	Reinsert disc correctly; Clean or replace disc; Ensure disc is CD, CD-R, CD-RW, or MP3 CD.
USB not playing	USB device not recognized; Unsupported file format; USB device corrupted.	Ensure USB device is properly inserted; Only MP3 files are supported; Try a different USB device.
Remote control not working	Batteries depleted; Obstruction between remote and unit; Remote not pointed correctly.	Replace batteries; Remove obstructions; Point remote directly at the unit's sensor.

9. SPECIFICATIONS

Feature	Specification
Model	CD-1000 DG
Playable Formats	CD, CD-R, CD-RW, MP3
USB Input	Front USB (5V 200mA), supports MP3
Audio Outputs	1 x Stereo RCA, 1 x Optical, 1 x Coaxial
Power Supply	220-240 V ~ / 50/60 Hz
Dimensions (LxHxD)	Approx. 43 x 12.5 x 24.5 cm
Weight	Approx. 4 kg
Material	Aluminium front panel
Special Features	Slot charging mechanism, LED display, Remote control

10. WARRANTY AND SUPPORT

AUNA products are covered by a manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact your local AUNA distributor or customer service center. Please have your model number (CD-1000 DG) and purchase information ready when contacting support.

Related Documents - CD-1000 DG

	<p><u>Auna CD-1000 DG CD Player User Manual</u></p> <p>User manual for the Auna CD-1000 DG CD Player, detailing technical specifications, safety instructions, device description, remote control functions, and setup.</p>
	<p><u>auna AV2-CD509 HiFi CD-Player Bedienungsanleitung</u></p> <p>Umfassende Anleitung für den auna AV2-CD509 HiFi CD-Player. Enthält Sicherheitshinweise, Bedienung, Fehlerbehebung und Entsorgungsinformationen für optimale Leistung.</p>
	<p><u>Auna Stereo Components HiFi System User Manual</u></p> <p>Comprehensive user manual for the Auna Stereo Components HiFi system, covering amplifier and CD player functions, connections, remote control operation, MP3 playback, USB input, radio tuning, troubleshooting, and disposal information.</p>
	<p><u>Auna Roadie Boombox with CD User Manual</u></p> <p>User manual for the Auna Roadie Boombox with CD, detailing technical specifications, safety instructions, controls, operation, and warranty information.</p>
	<p><u>Auna AV2-CD509 HiFi CD-Player Bedienungsanleitung</u></p> <p>Umfassende Bedienungsanleitung für den Auna AV2-CD509 HiFi CD-Player, die Informationen zu Einrichtung, Funktionen, Sicherheit und Fehlerbehebung enthält.</p>
	<p><u>auna Stereosonic Flache Stereoanlage mit CD-Player Bedienungsanleitung</u></p> <p>Bedienungsanleitung für die auna Stereosonic Flache Stereoanlage mit CD-Player (Modelle 10032461, 10032462). Enthält technische Daten, Sicherheitshinweise, Bedienung und Fehlerbehebung.</p>

