

[Manuals.plus](#) /

› [doTERRA](#) /

› doTERRA Volo Marble Diffuser White User Manual

doTERRA 60210546

doTERRA Volo Marble Diffuser White User Manual

Model: 60210546 | Brand: doTERRA

INTRODUCTION

Welcome to the user manual for your doTERRA Volo Marble Diffuser in White. This ultrasonic diffuser is designed to enhance your environment with the aromatic benefits of essential oils. Its elegant marble-inspired design complements any home or office decor. Please read this manual carefully to ensure safe and optimal use of your diffuser.



Image: The doTERRA Volo Marble Diffuser in White, showcasing its elegant design.

IMPORTANT SAFETY INFORMATION

- For safe use, avoid direct skin contact with undiluted essential oils.
- Keep out of reach of children and pets.
- Ensure proper ventilation during use.
- Do not exceed the maximum water fill line.
- Always unplug the diffuser before cleaning or refilling.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the diffuser and all accessories from the packaging.
2. **Placement:** Place the diffuser on a flat, stable surface away from direct sunlight, heat sources, and electronic devices.
3. **Remove Cover:** Gently lift the decorative marble-patterned cover from the base.
4. **Fill Water Tank:** Remove the inner plastic lid. Fill the water tank with clean tap water up to the 'MAX' line indicated inside the tank. Do not overfill.
5. **Add Essential Oil:** Add 5-15 drops of your preferred doTERRA essential oil directly into the water tank. Adjust the number of drops based on desired aroma intensity.
6. **Replace Covers:** Place the inner plastic lid back securely, then position the decorative marble cover back onto the base.
7. **Connect Power:** Plug the power adapter into the diffuser's power port and then into a wall outlet.

OPERATING THE DIFFUSER

The doTERRA Volo Diffuser features intuitive controls for mist output, timer settings, and ambient lighting.

Power and Timer Settings

- Press the power button (usually the main button on the front) once to turn on the diffuser.
- The diffuser offers multiple timer settings: 1 hour, 3 hours, 6 hours, or continuous operation.
- Cycle through these settings by pressing the power button repeatedly until the desired indicator light illuminates.
- For continuous operation, the diffuser can run for up to 14 hours, automatically shutting off when the water level is low.

Mist Output Adjustment

- The mist output level can be adjusted using the mist level dial or button (refer to your specific model's controls).
- Turn the dial clockwise or press the button to increase the mist intensity, and counter-clockwise or press again to decrease it.

Light Settings

- Press the light button (often indicated by a sun or lightbulb icon) to activate the ambient light feature.
- The diffuser typically offers dim and brighter light options. Press the button once for dim light, and again for brighter light.
- Press a third time to turn the light off.

MAINTENANCE AND CLEANING

Regular cleaning is essential to maintain the performance and longevity of your diffuser.

1. **Unplug:** Always unplug the diffuser from the power outlet before cleaning.
2. **Empty Water:** Remove the covers and carefully empty any remaining water from the tank.
3. **Wipe Clean:** Wipe the water tank and the ultrasonic plate with a damp cloth. For stubborn residue, use a cotton swab dipped in rubbing alcohol or white vinegar.
4. **Air Dry:** Allow all parts to air dry completely before reassembling or storing the diffuser.
5. **Frequency:** Clean the diffuser regularly, ideally after every 3-5 uses or when changing essential oils.

TROUBLESHOOTING

If you encounter any issues with your diffuser, please refer to the following common solutions:

- **No Mist:** Ensure the water level is sufficient and below the MAX line. Check if the power adapter is securely plugged in.
- **Weak Mist:** Clean the ultrasonic plate as essential oil residue can affect mist output. Use clean tap water.
- **Diffuser Not Turning On:** Verify the power connection. Ensure the unit is properly assembled with both covers in place.
- **Unusual Noise:** Check for any foreign objects in the water tank or around the ultrasonic plate. Ensure the diffuser is on a stable surface.

If problems persist, please contact doTERRA customer support.

SPECIFICATIONS

Brand:

doTERRA

Model Name:

Volo Marble Diffuser

Item Model Number:

60210546

Color:

White

Material:

Marble

Product Dimensions:

4 x 4 x 6 inches

Item Weight:

2.88 pounds (1.31 Kilograms)

Power Source:

Corded Electric

Capacity:

700 Milliliters

Floor Area Coverage:

300 Square Feet (40 square meters)

Wattage:

12 watts

Auto Shutoff:

Yes

Light Source Type:

LED

Date First Available:

February 24, 2022

WARRANTY INFORMATION

For specific warranty details regarding your doTERRA Volo Marble Diffuser, please refer to the warranty card included in your product packaging or visit the official doTERRA website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you require further assistance, have questions about your diffuser, or need to report an issue, please contact doTERRA customer support through their official website or the contact information provided in your product documentation.

PRODUCT VIDEOS

No official seller videos were available for embedding in this manual.

© 2023 doTERRA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question