

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tineco](#) /

› [Tineco Pure ONE S15 Essentials Smart Cordless Vacuum Cleaner Instruction Manual](#)

Tineco Pure ONE Vacuum

Tineco Pure ONE S15 Essentials Smart Cordless Vacuum Cleaner Instruction Manual

Model: Pure ONE Vacuum

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe and efficient operation of your Tineco Pure ONE S15 Essentials Smart Cordless Vacuum Cleaner. Please read all instructions carefully before use and retain this manual for future reference.

Important Safety Instructions:

- Always operate the vacuum cleaner on dry surfaces. Do not use it to pick up liquids or wet debris.
- Do not pick up flammable or combustible materials, such as lighter fluid, gasoline, or kerosene, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Unplug from outlet when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.

2. PACKAGE CONTENTS

Verify that all components are present in your package:

- Tineco Pure ONE S15 Essentials Main Body

- ZeroTangle Brush (Power Brush Head)
- Dusting Brush
- Crevice Tool
- Charging Base (FreeStnd)
- Hair Cleaning Tool
- Dual-tube Assembly (Wand)

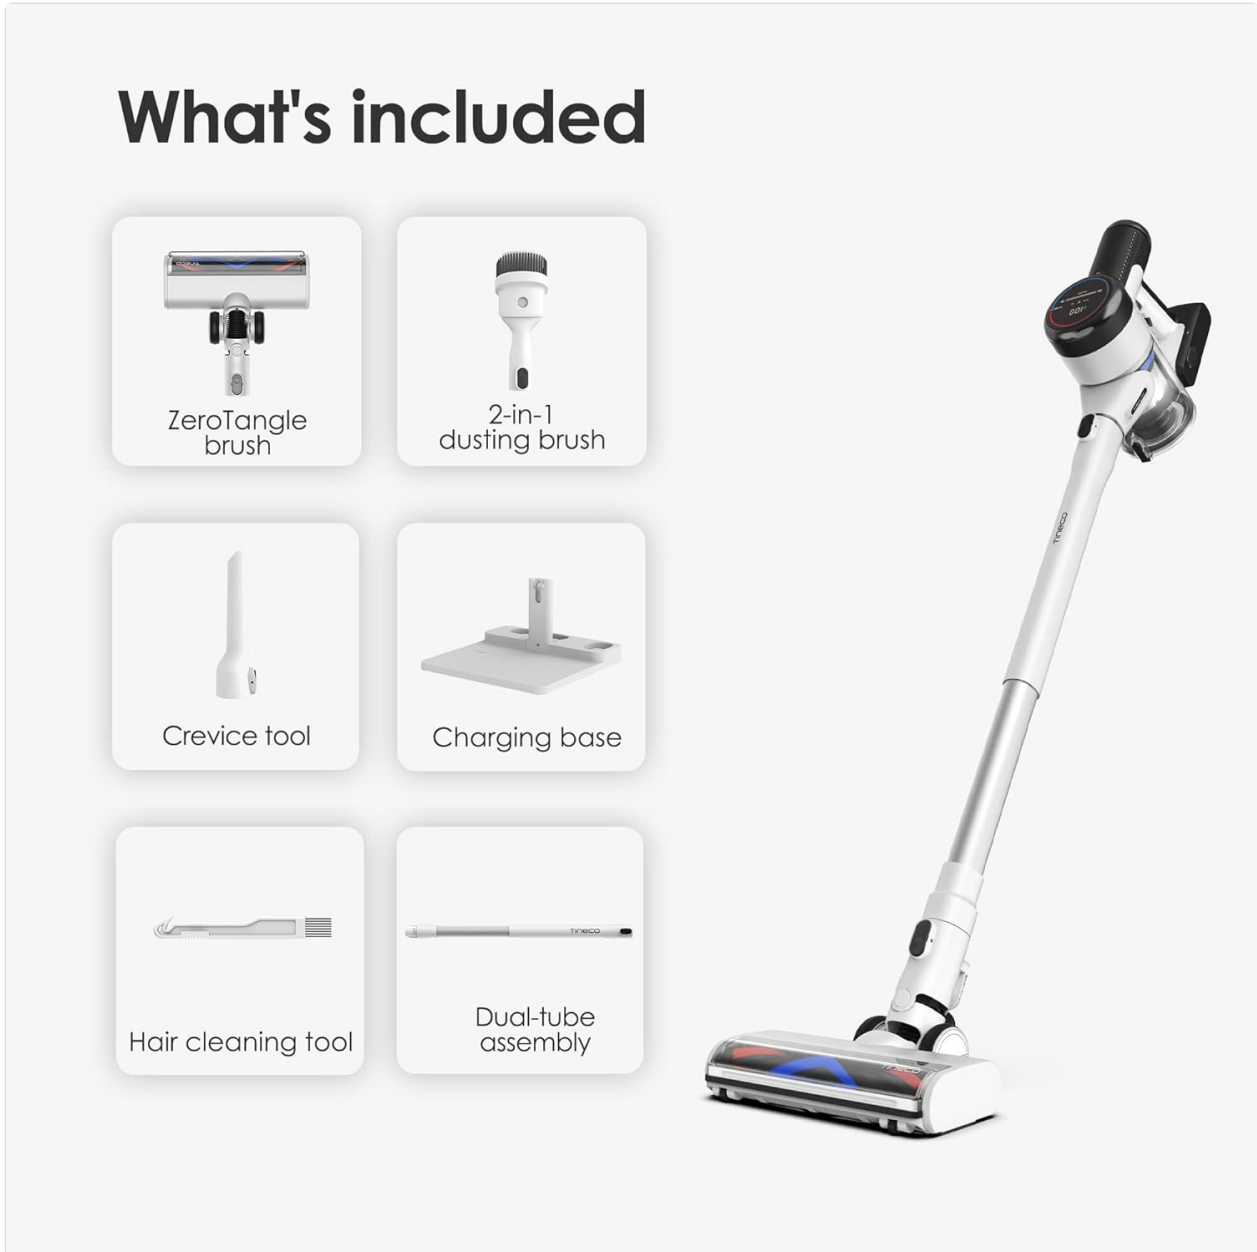


Figure 2.1: All included accessories and main unit.

3. PRODUCT FEATURES

- **ZeroTangle Technology:** The specially designed brush roller effectively vacuums hair without tangling, simplifying brush cleaning.
- **Tineco Pure Cyclone Technology:** This smart vacuum powerfully separates air and dust to prevent pre-filter clogging and suction loss, ensuring strong and fade-free suction power.
- **One-Touch Trigger Dustbin Clean:** With a simple press, a one-touch trigger scrapes dust and hair from the dustbin, pushing debris directly into the trash.

- **Tineco iLoop Smart Sensor:** The smart cordless vacuum cleaner automatically adjusts suction power based on the detected level of dirt and debris.
- **FreeStnd No-Install Charging Base:** Offers zero installation with no wall drilling required. Neatly store and charge the unit in the sleek FreeStnd base.
- **LED Headlights:** Integrated LED lights on the brush head illuminate dark areas, making hidden dust and debris visible.



TANGLED



ZEROTANGLE



Figure 3.1: Tineco iLoop Smart Sensor in action, indicating dirt levels.



Powerful, fade-free suction

Figure 3.2: ZeroTangle Technology preventing hair tangles on the brush roller.



One-touch trigger wipes dustbin clean

Figure 3.3: Illustration of Pure Cyclone Technology maintaining strong suction.

4. SETUP

4.1 Assembly

1. Unpack all components from the box.
2. Connect the Dual-tube Assembly (wand) to the Main Body until it clicks into place.
3. Attach the ZeroTangle Brush (power brush head) to the bottom of the Dual-tube Assembly until it clicks.
4. Place the assembled vacuum onto the FreeStnd Charging Base.

4.2 Charging

Before first use, fully charge the vacuum cleaner. Connect the charging adapter to the FreeStnd Charging Base and plug it into a power outlet. The LED display on the main body will indicate charging status.



Converts to a handheld vacuum

Figure 4.1: Vacuum docked in the FreeStnd charging base.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button on the main body to turn the vacuum on or off.

5.2 Cleaning Modes

The Tineco Pure ONE S15 Essentials features an iLoop Smart Sensor that automatically adjusts suction power. You can also manually select modes if desired.

- **Auto Mode:** The vacuum automatically detects dirt and adjusts suction power. The iLoop display changes from red (more dirt) to blue (less dirt).
- **Max Mode:** Provides maximum suction power for stubborn dirt.
- **ECO Mode:** Offers lower suction for lighter cleaning and extended battery life.

5.3 Using Attachments

The vacuum can be converted into a handheld unit for versatile cleaning. Simply detach the wand and attach

desired accessories directly to the main body.

- **Dusting Brush:** Ideal for cleaning delicate surfaces, furniture, and blinds.
- **Crevice Tool:** Perfect for reaching tight corners, gaps, and edges.



Figure 5.1: Versatile cleaning with stick and handheld modes.

Your browser does not support the video tag.

Video 5.1: Demonstrating the Tineco PURE ONE S15 Essentials cordless smart stick vacuum's features and usage.

6. MAINTENANCE

6.1 Emptying the Dustbin

To empty the dustbin, press the one-touch trigger button. This will scrape debris into your trash receptacle without direct contact.



No-install charging base

Figure 6.1: One-touch dustbin emptying mechanism.

6.2 Cleaning the Filter

Regularly clean the HEPA filter to maintain optimal suction performance. Refer to the visual indicators on the display or the mobile app for filter cleaning reminders.

6.3 Cleaning the Brush Roller

Thanks to ZeroTangle Technology, hair tangles are significantly reduced. However, occasional inspection and cleaning of the brush roller may be necessary. Use the provided hair cleaning tool if needed.

7. TROUBLESHOOTING

If you encounter any issues with your Tineco Pure ONE S15 Essentials, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
No Power	Battery is depleted.	Charge the vacuum fully.

Problem	Possible Cause	Solution
Reduced Suction	Dustbin is full or filter is clogged.	Empty the dustbin and clean the filter.
Brush Roller Not Spinning	Obstruction in the brush roller.	Remove any tangled hair or debris from the brush roller.
iLoop Sensor Always Red	Persistent heavy dirt or sensor malfunction.	Ensure the area is thoroughly cleaned. If issue persists, contact support.

For further assistance, please contact Tineco customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Tineco
Model Name	Pure ONE Vacuum
Filter Type	HEPA Filter
Is Cordless?	Yes
Capacity	0.47 Liters
Wattage	500 watts
Charging Time	5.5 Hours
Recommended Uses	Carpet, Hard Floor
Product Dimensions	11.14"L x 11"W x 45"H
Battery Type	Lithium-Ion
Noise Level	78 Decibels
Battery Life	Up to 40 minutes
Item Weight	6.8 pounds

9. WARRANTY AND SUPPORT

Your Tineco Pure ONE S15 Essentials comes with a **24-month limited warranty**. Tineco provides 24/7 customer service support via emails, messages, and free calls.

For warranty claims or technical support, please visit the official Tineco website or contact their customer service directly.

