

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SoBuy](#) /

› [SoBuy FKW41-ST Kitchen Cart Instruction Manual](#)

SoBuy FKW41-ST

SoBuy FKW41-ST Kitchen Cart with Stainless Steel Top and Extendable Worktop Instruction Manual

Model: FKW41-ST

INTRODUCTION

Thank you for choosing the SoBuy FKW41-ST Kitchen Cart. This manual provides essential information for the safe assembly, operation, and maintenance of your new kitchen cart. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: The SoBuy FKW41-ST Kitchen Cart positioned in a kitchen, showcasing its stainless steel top, white cabinet, and storage features.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Always assemble the product on a soft, clean surface to avoid scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of 90 kg for the cart.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Use caution when extending or retracting the worktop to avoid pinching fingers.
- Do not stand or climb on the kitchen cart.

PACKAGE CONTENTS

Your SoBuy FKW41-ST Kitchen Cart is delivered in two separate packages. Please ensure you have received both packages before beginning assembly. Each package contains numbered parts and illustrated instructions to guide you through the assembly process.

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please refer to the "Warranty and Support" section for assistance.

SETUP AND ASSEMBLY INSTRUCTIONS

The SoBuy FKW41-ST Kitchen Cart requires assembly. Follow the step-by-step illustrated instructions provided in your package. It is recommended to have two people for assembly to ensure stability and ease of handling.

- 1. Unpack Components:** Carefully remove all parts from both packages and lay them out on a clean, soft surface. Check against the parts list in the instruction manual.
- 2. Identify Numbered Parts:** All components are numbered to correspond with the assembly diagrams.
- 3. Follow Illustrated Steps:** Proceed through the assembly steps sequentially as shown in the diagrams. Pay close attention to the orientation of each piece.
- 4. Secure Fasteners:** Hand-tighten all screws initially. Once the structure is complete, go back and fully tighten all fasteners with the appropriate tools. Do not overtighten.
- 5. Attach Wheels:** The cart features 4 invisible wheels for mobility. Ensure they are securely attached to the base as per instructions.



Image: A diagram illustrating the overall dimensions of the kitchen cart, including height, width, and depth.



Image: Detail of the hidden wheels integrated into the base of the kitchen cart, allowing for easy movement.

OPERATING INSTRUCTIONS

The SoBuy FKW41-ST Kitchen Cart is designed for versatile use in your kitchen. Here's how to utilize its features:

- **Extendable Worktop:** The stainless steel worktop features an extensible section. To extend, gently pull the designated section outwards until it locks into place. To retract, push it back inwards. This provides additional preparation or serving space when needed.



Image: The kitchen cart with its stainless steel worktop extended, providing additional surface area for food preparation or dining.

- **Storage Cabinets:** The two doors open to reveal internal storage space, ideal for larger kitchen items, pots, or small appliances.



Image: An open cabinet door revealing internal shelving, suitable for storing dishes, baskets, or other kitchen essentials.

- **Drawers:** Three smooth-gliding drawers provide convenient storage for utensils, smaller gadgets, or linens.



Image: A drawer pulled open, displaying its capacity for storing various kitchen items like bowls, glasses, and small containers.

- **Side Shelf and Towel Rail:** Utilize the open shelf on the side for frequently accessed items or decorative pieces. The integrated towel rail is perfect for hanging kitchen towels.



Image: The side of the kitchen cart featuring an open shelf with a rail and hooks, suitable for holding bottles, glasses, and hanging small pots or utensils.



Image: A kitchen towel hanging neatly on the integrated towel rail of the cart, highlighting its practical design.

- **Mobility:** The four hidden wheels allow you to easily move the cart to different locations in your kitchen or dining area as needed.

MAINTENANCE

Proper care will ensure the longevity and appearance of your kitchen cart:

- **Stainless Steel Top:** Clean with a soft cloth and a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive pads that can scratch the surface. Wipe dry immediately to prevent water spots.



Image: A detailed view of the stainless steel worktop, reflecting light and showing its smooth, easy-to-clean surface.

- **MDF and Bamboo Structure:** Wipe with a damp cloth and mild soap if necessary. Dry thoroughly. Avoid excessive moisture.
- **General Cleaning:** Regularly dust the cart with a soft, dry cloth.
- **Hardware:** Periodically check all screws and fittings to ensure they remain tight. Re-tighten if loose.

TROUBLESHOOTING

- **Missing or Damaged Parts:** If you find any parts missing or damaged upon unpacking, do not proceed with assembly. Contact SoBuy customer support immediately for replacement parts. Refer to the "Warranty and Support" section.
- **Assembly Difficulties:** If you encounter difficulties during assembly, double-check the illustrated instructions. Ensure all parts are oriented correctly and that you are using the correct fasteners for each step. Sometimes, a slight adjustment or loosening of previously tightened screws can help align components.
- **Cart is Unstable:** Ensure all screws and bolts are fully tightened. Check that the cart is on a level surface.
- **Drawers or Doors Not Closing Properly:** Verify that the drawer slides are correctly installed and that there are no

obstructions. For doors, check hinge alignment and ensure nothing inside the cabinet is preventing closure.

SPECIFICATIONS

| | |
|---------------------------------------|--|
| Brand | SoBuy |
| Model Number | FKW41-ST |
| Color | White, light grey |
| Product Dimensions (L x W x H) | 130 x 46 x 91 cm (with handle) |
| Maximum Weight Capacity | 90 Kilograms |
| Material | Stainless steel (top), MDF, Bamboo (structure) |
| Item Weight | 52.6 Kilograms |
| Special Feature | Extendable worktop, Hidden wheels |

WARRANTY AND SUPPORT

SoBuy is committed to providing high-quality products. If you encounter any issues with your FKW41-ST Kitchen Cart, including missing parts, damage, or dissatisfaction with the product, please contact our customer support team.

Return Policy: If you are not satisfied with the product or if there is a problem, you can contact us for a free return voucher. Please refer to the retailer's return policy for specific details and procedures.

For further assistance, please visit the official SoBuy store or contact customer service through your purchase platform.

PRODUCT VIDEOS

No official product videos from the seller were found that meet the specified embedding criteria (m3u8 format, creator_type: Seller).