

BELLA 90165

Bella Pro Series 6-qt Digital Air Fryer Instruction Manual

Model: 90165

1. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or air fryer in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW

The Bella Pro Series 6-qt Digital Air Fryer is designed for versatile cooking, offering frying, baking, broiling, and roasting capabilities. It features a digital touchscreen for precise control.



This image shows the complete Bella Pro Series 6-quart Digital Air Fryer from the front, highlighting its sleek black and stainless steel design with the digital touchscreen display visible at the top.



The air fryer is shown with its cooking basket partially pulled out, revealing the interior space where food is placed for cooking. This demonstrates the pull-out drawer design.



A hand is shown lifting the crisper plate out of the air fryer's cooking basket. This

illustrates how the removable crisper plate can be detached for cleaning or food placement.



This image provides a top-down view of the crisper plate, showcasing its perforated design which allows for optimal air circulation during the air frying process.

Components:

- Main Unit with Digital Touchscreen Display
- 6-Quart Capacity Cooking Basket
- Removable Crisper Plate (Non-stick)

3. SETUP

Before First Use:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wash the cooking basket and crisper plate with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Ensure all parts are completely dry before use.

Placement:

- Place the air fryer on a stable, level, heat-resistant surface.
- Ensure there is at least 6 inches of clear space on all sides of the appliance to allow for proper air circulation.
- Do not place the air fryer directly against a wall or other appliances.

4. OPERATING INSTRUCTIONS

The Bella Pro Series Digital Air Fryer features a user-friendly digital touchscreen display for easy operation.

Basic Operation:

1. Plug the air fryer into a grounded electrical outlet.
2. Carefully pull the cooking basket out of the air fryer.
3. Place ingredients into the cooking basket, ensuring not to overfill.
4. Slide the cooking basket back into the air fryer.
5. Use the digital touchscreen to set the desired temperature (up to 400°F) and cooking time. The air fryer can be used for frying, baking, broiling, and roasting.
6. Press the Start/Pause button to begin cooking.
7. During cooking, some recipes may require shaking the basket halfway through to ensure even cooking. Carefully pull out the basket, shake, and reinsert.
8. Once cooking is complete, carefully pull out the basket and remove the food using tongs or other appropriate utensils.



The Bella Pro Series air fryer is depicted in a kitchen setting, actively cooking a batch of golden-brown french fries. The cooking basket is pulled out, showing the crispy results.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your air fryer.

Cleaning:

1. Always unplug the air fryer and allow it to cool completely before cleaning.

- 2. The cooking basket and crisper plate feature a non-stick coating and are dishwasher safe for quick and easy cleanup.
- 3. For stubborn food residue, soak the basket and crisper plate in warm, soapy water for about 10 minutes before cleaning.
- 4. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- 5. Never immerse the main unit of the air fryer in water or any other liquid.

6. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in.	Ensure the power cord is securely plugged into a grounded electrical outlet.
Food is not cooked evenly.	Basket is overfilled or food is not shaken.	Do not overfill the basket. Shake the basket halfway through cooking for even results.
White smoke coming from the appliance.	Grease residue from previous use or fatty ingredients.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, drain excess oil.
Food is not crispy.	Insufficient cooking time or temperature.	Increase cooking time or temperature as needed. Ensure food is not overcrowded in the basket.

7. SPECIFICATIONS

Feature	Detail
Brand	BELLA
Model Number	90165
Capacity	6 Quarts
Color	Black
Material	Plastic (BPA-free outer), Stainless Steel (inner)
Control Method	Digital Touchscreen
Max Temperature	400°F (204°C)
Output Wattage	1500 Watts

Feature	Detail
Item Weight	13.47 pounds (6.12 Kilograms)
Product Dimensions	8.07 x 5.31 x 2.76 inches
Dishwasher Safe Parts	Yes (Basket & Crisper Plate)
UPC	829486901317

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official BELLA website. Keep your proof of purchase for any warranty claims.

© 2025 BELLA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

