

## Lindby 9626254

# Lindby Chrissy Modern Ceiling Lamp Instruction Manual

Model: 9626254

## 1. SAFETY INFORMATION

Please read these instructions carefully before installation and use. Keep this manual for future reference.

- **Electrical Safety:** Installation must be performed by a qualified electrician in accordance with local wiring regulations. Ensure the main power supply is switched off at the circuit breaker before commencing any electrical work.
- **Handling:** Handle glass components with care to prevent breakage.
- **Bulb Type:** Use only LED bulbs as specified. Do not exceed the maximum wattage.
- **Environment:** This lamp is designed for indoor use only.

## 2. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Ceiling lamp fixture (main body with arms and bulb holders)
- Glass globes (5 pieces)
- Mounting bracket
- Screws and wall plugs
- Instruction manual

*Note: Bulbs are typically not included and must be purchased separately.*

## 3. SETUP AND INSTALLATION

Follow these steps for safe and correct installation:

1. **Turn off Power:** Ensure the electricity supply to the installation area is completely switched off at the main circuit breaker.
2. **Attach Mounting Bracket:** Secure the mounting bracket to the ceiling using the provided screws and wall plugs. Ensure it is firmly attached to a suitable structural support.
3. **Connect Wiring:** Connect the lamp's electrical wires to the household wiring. Typically, the brown wire (Live) connects to the Live (L) terminal, the blue wire (Neutral) connects to the Neutral (N) terminal, and the green/yellow wire (Earth) connects to the Earth terminal. Ensure all connections are

secure.

4. **Secure Fixture:** Carefully lift the lamp fixture and attach it to the mounting bracket, ensuring all wires are tucked safely inside the ceiling rose. Secure the fixture with the screws provided.
5. **Install Glass Globes:** Gently screw each of the five glass globes onto the bulb holders. Do not overtighten.
6. **Install Bulbs:** Insert the appropriate LED bulbs (not included) into each bulb holder.



**Figure 1:** View of the internal wiring and mounting bracket, showing how the lamp connects to the ceiling. This image illustrates the components involved in securing the fixture and making electrical connections.

#### 4. OPERATING INSTRUCTIONS

Once installed, the Lindby Chrissy ceiling lamp is operated via your standard wall switch. If connected to a compatible dimmer switch, the light intensity can be adjusted.

- **On/Off:** Flip the wall switch to turn the lamp on or off.
- **Dimming:** If a dimmer switch is installed, rotate or slide the dimmer control to adjust the brightness of the light. Ensure that the LED bulbs used are dimmable compatible.



**Figure 2:** The Lindby Chrissy ceiling lamp providing ambient light in a living space. This image demonstrates the lamp's appearance when fully operational.

## 5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lamp.

- **Cleaning:** Disconnect power before cleaning. Wipe the metal and glass surfaces with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- **Bulb Replacement:** Ensure the lamp is cool and the power is off before replacing bulbs. Unscrew the old bulb and screw in a new LED bulb of the correct type and wattage.

## 6. TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not light up	No power supply, faulty bulb, loose wiring	Check circuit breaker. Replace bulb. Check wiring connections (consult an electrician if unsure).

Problem	Possible Cause	Solution
Light flickers	Loose bulb, incompatible dimmer, faulty wiring	Tighten bulb. Ensure dimmer is compatible with LED bulbs. Check wiring connections.
Dimmer not working	Incompatible bulbs, faulty dimmer switch	Ensure LED bulbs are dimmable. Replace dimmer switch if necessary.

If the problem persists after trying these solutions, please contact customer support.

## 7. SPECIFICATIONS

Detailed technical specifications for the Lindby Chrissy Ceiling Lamp:

- **Brand:** Lindby
- **Model Number:** 9626254
- **Dimensions:** 27 x 27 x 33 cm (L x W x H)
- **Weight:** 1.29 kg
- **Material:** Metal, Glass
- **Finish:** Polished
- **Color:** Silver / Chrome (with yellow accents)
- **Number of Lights:** 5
- **Voltage:** 230 Volt
- **Bulb Type:** LED (bulbs not included)
- **Wattage (per bulb):** 8 watt (max)
- **Luminous Flux:** 2000 lumen
- **Switch Style:** Dimmer compatible
- **Installation Type:** Ceiling mounting (Semi-flush mount)
- **Power Source:** Corded Electric
- **Usage:** Indoor, Home (Living room, Dining room, Hallway, Kitchen, Bathroom)



**Figure 3:** Technical drawing illustrating the dimensions of the Lindby Chrissy ceiling lamp. The diameter is 250mm and the height is 330mm, with individual globes having a diameter of 80mm.

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's policy or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

- **Manufacturer:** Lindby
- **Seller:** Lampen24NL
- **ASIN:** B09X3S3DBY

