

[Manuals.plus](#) /

› [Candy](#) /

› Candy CMGA23TNDB/ST Microwave Oven with Grill User Manual

Candy CMGA23TNDB/ST

Candy CMGA23TNDB/ST Microwave Oven with Grill User Manual

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Candy CMGA23TNDB/ST Microwave Oven with Grill. Please read this manual thoroughly before using the appliance and retain it for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- The microwave oven is intended for heating food and beverages. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

3. PRODUCT OVERVIEW

The Candy CMGA23TNDB/ST is a 23-liter freestanding microwave oven with a powerful 900W microwave output and a 1000W grill function. It features a 25.5 cm rotating turntable, 6 power levels, and 10 automatic cooking menus for versatile meal preparation. The appliance is equipped with tactile controls and a rotary knob for easy operation.



Image Description: A front view of the Candy CMGA23TNDB/ST microwave oven, showcasing its black finish, control panel with tactile buttons and a rotary knob, and the door handle.

Components:

- Microwave Oven Unit
- Glass Turntable
- Turntable Ring
- Turntable Shaft
- Grill Rack (for grill function)

4. SETUP

4.1 Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged. Contact your retailer.

4.2 Placement

Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in the oven. Ensure there is adequate ventilation around the appliance. Maintain a minimum clearance of 20 cm (8 inches) above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on the sides for proper airflow.



Image Description: The Candy microwave oven positioned on a clean kitchen countertop, demonstrating appropriate placement with surrounding space.

4.3 Turntable Installation

1. Place the turntable shaft in the center of the oven cavity.
2. Place the turntable ring on the shaft.
3. Place the glass turntable on top of the turntable ring, ensuring it sits securely in the center.

4.4 Power Connection

Plug the power cord into a standard grounded electrical outlet. Ensure the voltage matches the specifications of the appliance (230V).

5. OPERATING INSTRUCTIONS

5.1 Setting the Clock

Upon first connection or after a power outage, the display will show '0:00'. Follow the instructions in your detailed manual to set the current time using the control panel and rotary knob.

5.2 Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Select the desired microwave power level (e.g., 900W for full power).
4. Set the cooking time using the rotary knob.
5. Press the 'Start' button to begin cooking.



Image Description: A person is shown opening the door of the Candy microwave oven and placing a yellow bowl inside, illustrating the preparation for cooking.

5.3 Grill Function

The grill function is ideal for browning and crisping food. Use the provided grill rack to elevate food closer to the heating element.

1. Place food on the grill rack within a heat-resistant dish.
2. Close the oven door.
3. Select the 'Grill' function.
4. Set the desired grilling time.
5. Press 'Start'.

5.4 Defrost Function

The defrost function allows you to defrost food by weight or time.

- **Defrost by Weight:** Select the defrost by weight option, input the food's weight, and the oven will automatically calculate the defrosting time.
- **Defrost by Time:** Select the defrost by time option and manually set the desired defrosting duration.

5.5 Automatic Menus

Your microwave oven includes 10 pre-programmed automatic menus for common dishes. Refer to the detailed manual for a list of these menus and their corresponding food types and weights.

1. Select the desired automatic menu.

- 2. Input the food weight if prompted.
- 3. Press 'Start'.

6. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

6.1 Interior Cleaning

- After each use, wipe the interior with a damp cloth to remove food splatters.
- For stubborn stains, place a bowl of water with lemon juice inside and microwave for 2-3 minutes. The steam will loosen the stains, making them easier to wipe away.
- Do not use abrasive cleaners or sharp objects that could scratch the interior surfaces.

6.2 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid using excessive water or harsh chemicals.

6.3 Turntable and Ring

The glass turntable and turntable ring can be removed and washed in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time/power level; Door not closed properly.	Adjust time/power; Close door securely.
Turntable not rotating	Turntable not properly seated; Obstruction under turntable.	Re-seat turntable and ring; Remove any obstructions.
Grill not working	Grill function not selected; Incorrect time set.	Ensure grill function is active; Set appropriate grilling time.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Candy
Model Number	CMGA23TNDB/ST

Feature	Specification
Color	Black
Capacity	23 Liters
Microwave Power	900 Watts
Grill Power	1000 Watts
Voltage	230 Volts
Material	Stainless Steel, Glass
Special Feature	Grill Function
Item Weight	15.7 Kilograms
Controller Type	Touch

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or contact your retailer. Information regarding the availability of spare parts for this model is currently unavailable. For technical support or service inquiries, please contact Candy customer service through their official website or the contact details provided in your purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09X5ZW5W7>

More documents and user manuals: <https://manuals.plus/>