

[Manuals.plus](#) /

› [Kidzlane](#) /

› Kidzlane Floor Piano Mat and Light-Up Dance Mat Instruction Manual

Kidzlane B09X652GVM

Kidzlane Floor Piano Mat and Light-Up Dance Mat Instruction Manual

Model: B09X652GVM

INTRODUCTION

Welcome to the world of musical fun and active play with your new Kidzlane Floor Piano Mat and Light-Up Dance Mat. This product combines two exciting activities into one durable and engaging toy, designed to inspire creativity and physical activity in children. This manual provides essential information for the safe and optimal use of your new mat.

The Floor Piano Mat features 24 touch-sensitive keys and 8 instrumental sounds, allowing users to compose and play music with their feet. The Light-Up Dance Mat offers an interactive experience with blinking arrows, built-in music, and connectivity options via AUX or Bluetooth for personalized soundtracks.

SAFETY INFORMATION

- Always supervise children during play to prevent accidents.
- Ensure the mat is placed on a flat, dry, and non-slip surface to avoid falls.
- Keep the mat away from water and excessive moisture to prevent electrical hazards.
- Do not use harsh chemicals or abrasive cleaners on the mat. Refer to the Maintenance section for cleaning instructions.
- This product contains small parts (e.g., batteries) that could be a choking hazard for young children. Keep batteries out of reach.
- Only use the specified battery type (4 x AA batteries). Do not mix old and new batteries or different types of batteries.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Kidzlane Floor Piano Mat and Light-Up Dance Mat
- 10 x Song Cards
- Instruction Manual (this document)



Image: The product box illustrating the mat, song cards, and key features like 24 color-coded keys and 10 programmed classic songs.

PRODUCT OVERVIEW

Floor Piano Mat Features:

- **24 Color-Coded and Numbered Keys:** For easy musical exploration.
- **8 Different Instrumental Sounds:** Select from various instrument tones.
- **10 Built-in Classic Songs:** Pre-programmed tunes for learning and enjoyment.
- **Record & Playback Function:** Compose and listen to your own melodies.
- **Adjustable Volume:** Control the sound level for different environments.
- **Soft, Padded Dance Surface:** Provides comfort and durability.

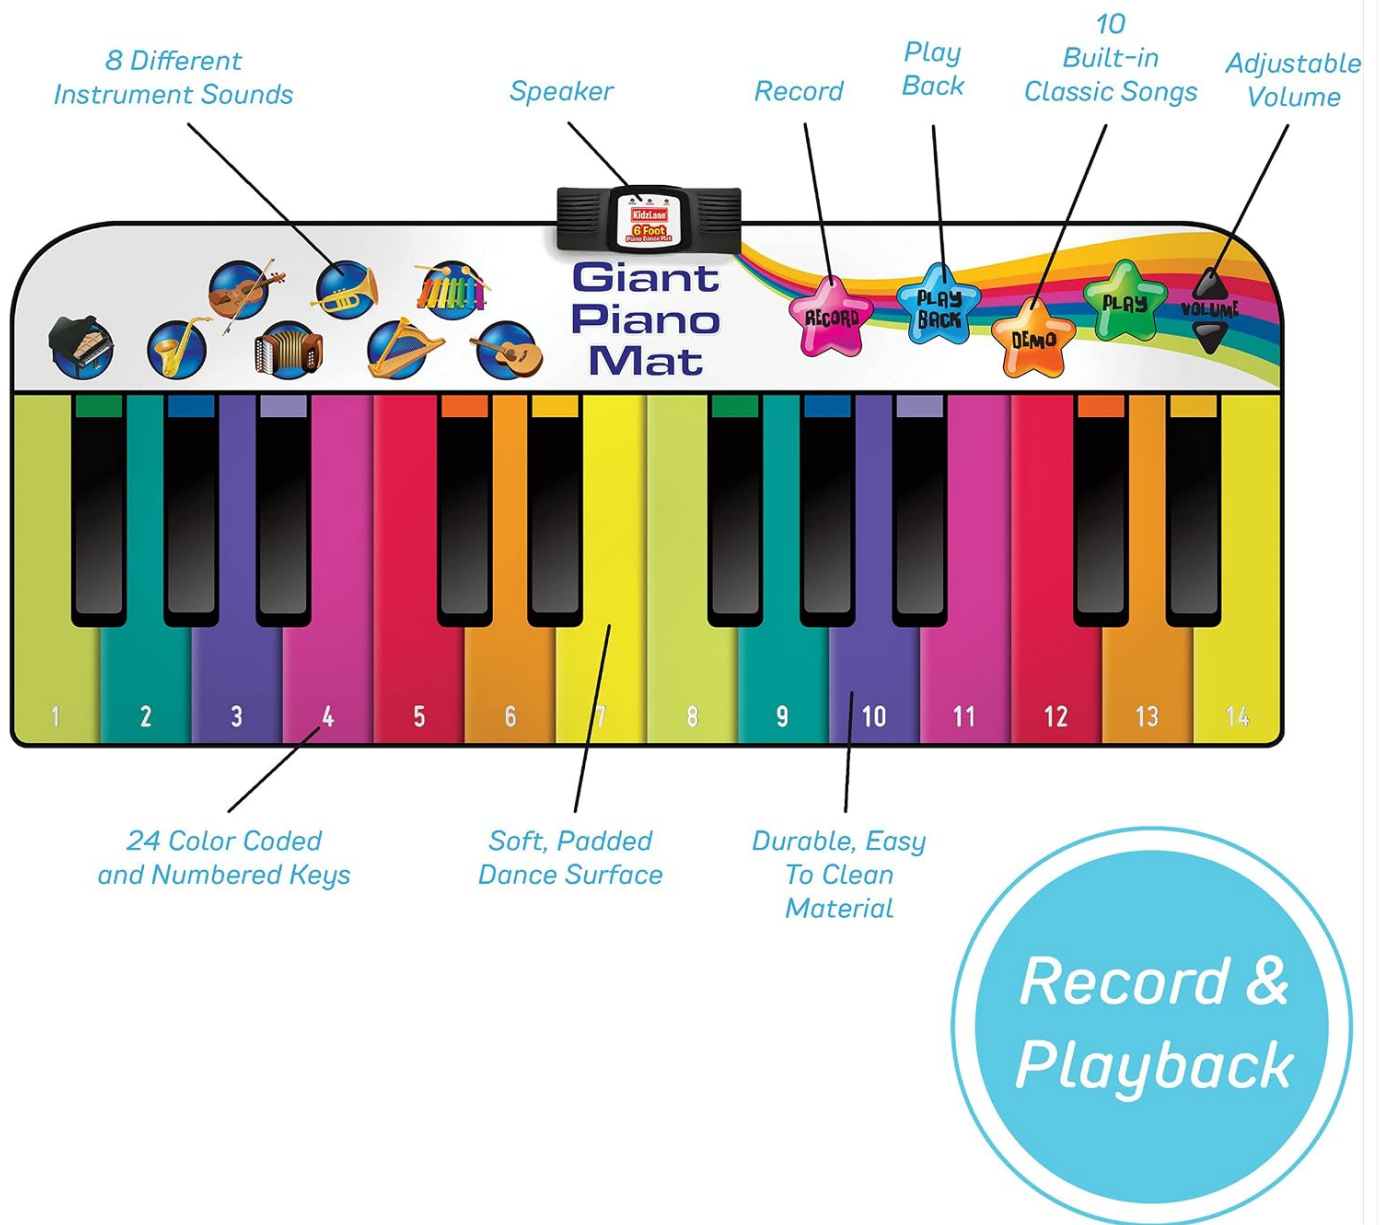


Image: A detailed diagram highlighting the various components and functions of the Kidzlane Giant Piano Mat.

Light-Up Dance Mat Features:

- **Light-Up Arrows:** Interactive cues for dance games.
- **Wireless Bluetooth/AUX Connectivity:** Play your own music.
- **3 Fun Arcade Games:** Flash Dance, Dance Game, and Memory Game.
- **5 Difficulty Levels:** Adaptable for various skill levels.
- **Non-Slip Surface:** Ensures stability during active play.

KidzLane®



 **Bluetooth®**

Image: An overhead view of the Light-Up Dance Mat, displaying its interactive arrows and central control unit.

4 FUN GAME MODES



Flash Dance (AGES 2+)

MAKE UP YOUR OWN RULES IN FREE DANCE MODE.
DANCE AND LET THE LIGHTS FOLLOW YOUR FOOTSTEPS.
PLAY INTERNAL MUSIC OR CONNECT YOUR OWN DEVICE



Dance Game (5 Levels) (AGES 6+)

DANCE TO THE CUES OF THE BLINKING ARROWS,
FOLLOWING THE BEATS OF THE BUILT-IN BEATS & RYTHMS.



Memory Game (AGES 5+)

TEST YOUR BRAIN TO A "SIMON SAYS" MEMORY GAME
LET'S SEE HOW LONG YOU CAN REMEMBER THE LIGHT PATTERN!



Music Game (5 Levels) (AGES 6+)

CONNECT YOUR OWN FAVE TRACK VIA AUX OR BLUETOOTH
AND DANCE YOUR WAY THROUGH ALL DIFFICULTY LEVELS.



REQUIRES 4 X AA BATTERIES (NOT INCLUDED)

Image: A visual guide to the four interactive game modes available on the dance mat, including age recommendations and a note on compact storage.

SETUP

1. Battery Installation

1. Locate the battery compartment on the control unit of the mat.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 4 x AA batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Important: Always use fresh batteries. Do not mix old and new batteries. Remove batteries if the mat will not be used for an extended period.

2. Mat Placement

- Unroll the mat completely on a flat, dry, and stable surface.
- Ensure there is enough clear space around the mat for safe movement during play.

OPERATING INSTRUCTIONS

Power On/Off

- Locate the Power button on the control unit.
- Press the Power button to turn the mat ON. An indicator light will illuminate.
- Press the Power button again to turn the mat OFF.

Using the Floor Piano Mat



Image: A child demonstrating active play on the Kidzlane Floor Piano Mat.

1. **Play Notes:** Step or press on any of the 24 color-coded keys to play musical notes.
2. **Change Instrument Sounds:** Use the instrument selection buttons (labeled with icons like guitar, saxophone, etc.) on the control panel to switch between the 8 available instrument sounds.
3. **Play Built-in Songs:** Press the 'DEMO' button to cycle through the 10 pre-programmed classic songs. Follow along with the included song cards.
4. **Record Your Own Music:** Press the 'RECORD' button to begin recording your foot-played melodies. Play your desired sequence of notes.
5. **Playback Recorded Music:** After recording, press the 'PLAYBACK' button to listen to your composition.
6. **Adjust Volume:** Use the 'VOLUME' dial or buttons on the control panel to increase or decrease the sound level.

Using the Light-Up Dance Mat



Image: A child engaging with the interactive light-up arrows of the dance mat.

1. **Select Game Mode:** Choose from the 3 interactive games: Flash Dance, Dance Game, or Memory Game, using the mode selection buttons on the control unit.

2. **Adjust Difficulty:** For games with multiple levels, use the level selection buttons (1-5) to choose your preferred difficulty.
3. **Start Game:** Press the 'START/PAUSE' button to begin the selected game.
4. **Follow the Lights:** Step on the corresponding light-up arrows as they illuminate on the mat.
5. **Connect External Audio (Bluetooth/AUX):**

◦ **Bluetooth:** Turn on Bluetooth on your external device (e.g., smartphone, tablet) and search for "Kidzlane Dance Mat". Pair the devices.

◦ **AUX:** Connect an audio cable (not included) from your external device's headphone jack to the AUX input port on the mat's control unit.

Play your favorite music through the mat's speakers.

6. **Adjust Volume:** Use the volume controls on the mat's control panel and/or your external device to set the desired sound level.
- ## MAINTENANCE
- **Cleaning:** The mat is made of durable, easy-to-clean material. Wipe the surface with a damp cloth and mild soap if necessary. Do not immerse the control unit in water. Allow to air dry completely before storage.

• **Storage:** When not in use, the mat can be folded up easily for compact storage. Store in a cool, dry place away from direct sunlight.

• **Battery Care:** Remove batteries if the product is not used for extended periods to prevent leakage. Dispose of used batteries responsibly according to local regulations.
- ## TROUBLESHOOTING
- | Problem | Possible Cause | Solution |
|---|---|--|
| Mat does not turn on. | Batteries are dead or incorrectly installed. | Replace with fresh AA batteries, ensuring correct polarity. |
| No sound from the mat. | Volume is too low or muted. | Increase the volume using the control dial/buttons. |
| Piano keys are unresponsive. | Mat surface is dirty or damaged. | Ensure the mat is clean and dry. Avoid excessive force on keys. |
| Bluetooth connection issues. | Device is too far, Bluetooth is off, or already paired. | Ensure device is within range, Bluetooth is enabled, and unpair from other devices if necessary. Restart both devices. |
| Dance mat lights are not working correctly. | Low battery or internal fault. | Replace batteries. If problem persists, contact customer support. |
- ## SPECIFICATIONS
- **Brand:** Kidzlane

• **Model:** B09X652GVM

• **Material:** Plastic

• **Number of Piano Keys:** 24

• **Instrument Sounds:** 8

- **Built-in Songs:** 10
- **Dance Mat Games:** 3 (Flash Dance, Dance Game, Memory Game)
- **Difficulty Levels:** 5
- **Connectivity:** Wireless Bluetooth, AUX input
- **Power Source:** 4 x AA Batteries (not included)
- **Dimensions:** Approximately 72 inches x 28 inches (6 feet x 2.3 feet)
- **Educational Objective:** Spatial Awareness, Music Appreciation, Coordination

WARRANTY

This Kidzlane product is covered by a **90-Day Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Kidzlane Floor Piano Mat and Light-Up Dance Mat, please contact Kidzlane customer support. Refer to the product packaging or the official Kidzlane website for the most current contact information. We are committed to ensuring your satisfaction and providing a positive experience with our products.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

