

[Manuals.plus](#) /

› [Denver](#) /

› DENVER TSP-353 Portable Stereo Speaker User Manual

Denver TSP-353

DENVER TSP-353 Portable Stereo Speaker User Manual

Model: TSP-353 (P/N: 111151120040)

1. INTRODUCTION

Thank you for purchasing the DENVER TSP-353 Portable Stereo Speaker. This manual provides important information regarding the setup, operation, and maintenance of your new speaker. Please read this manual thoroughly before using the device and keep it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Do not attempt to disassemble or modify the speaker. This will void the warranty.
- Use only the specified power adapter for charging.
- Keep the speaker away from heat sources such as radiators, stoves, or other heat-producing apparatus.
- Ensure proper ventilation around the speaker during operation.
- Clean only with a dry cloth.

3. PACKAGE CONTENTS

Please check the box for the following items:

- DENVER TSP-353 Portable Stereo Speaker
- Power Adapter (not explicitly listed but implied for rechargeable battery)
- User Manual
- Holster (as per specifications)

4. PRODUCT OVERVIEW







Figure 4.1: Front view of the DENVER TSP-353 Portable Stereo Speaker, showcasing its black finish and two large woofers with blue LED illumination. The Denver logo is visible between the woofers.

Key Features:

- Powerful 400 Watts Max Speaker Output Power.
- Portable design for easy transport.
- Bluetooth connectivity for wireless audio streaming.
- USB port for media playback.
- Integrated screen for display information.
- Rechargeable battery for extended use.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the speaker's internal battery. Connect the power adapter to the speaker's charging port and plug it into a standard wall outlet. The charging indicator (if available) will show the charging status. Charging time may vary.

5.2 Placement

Place the speaker on a stable, flat surface. For optimal sound performance, ensure there are no obstructions in front of the speaker's woofers. The speaker is designed for floor mounting.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press and hold the Power button (location typically on the top or rear panel) for a few seconds to turn the speaker ON or OFF.

6.2 Bluetooth Connection

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the screen or an audible prompt.
2. Enable Bluetooth on your smartphone, tablet, or other compatible device.
3. Search for "DENVER TSP-353" in the list of available devices and select it to pair.
4. Once connected, the speaker will confirm with an audible sound or a solid Bluetooth icon.

6.3 USB Playback

Insert a USB flash drive containing audio files into the USB port. The speaker will automatically detect the drive and begin playing music. Use the control buttons (Play/Pause, Next/Previous Track) to manage playback.

6.4 Volume Control

Adjust the volume using the dedicated volume knob or buttons on the speaker. You can also control the volume from your connected Bluetooth device.

7. MAINTENANCE

7.1 Cleaning

Wipe the exterior of the speaker with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or abrasive solvents, as these may damage the surface or internal components.

7.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery before storing and to recharge it every few months to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Connect the speaker to a power source and charge the battery.
No sound from speaker.	Volume is too low or muted. Device not connected.	Increase volume on speaker and connected device. Ensure Bluetooth or USB connection is active.
Bluetooth connection fails.	Speaker is not in pairing mode. Device is too far. Interference.	Ensure speaker is in pairing mode. Move device closer to speaker. Avoid obstacles and other wireless devices.
USB playback not working.	Unsupported file format. USB drive not properly inserted.	Ensure audio files are in a supported format (e.g., MP3). Reinsert the USB drive firmly.

9. SPECIFICATIONS

Model Name:	TSP-353
Part Number:	111151120040
Brand:	Denver
Color:	Black
Max Speaker Output Power:	400 Watts
Connectivity:	Bluetooth, USB
Special Features:	Portable, Rechargeable Battery, Integrated Screen
Speaker Type:	Woofer
Mounting Type:	Floor Mount
Material:	Faux Leather

Recommended Use:	For smartphone or tablet
Country of Origin:	China

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Denver website. Keep your purchase receipt as proof of purchase.
Manufacturer: DENVER

© 2024 Denver. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question