

## DIGITMON AC-2P-10FT

# User Manual: DIGITMON 10FT 2-Prong AC Power Cord

Model: AC-2P-10FT | Compatible with Magnavox MD6924 Portable Top Loading CD Boombox

## INTRODUCTION

---

This manual provides essential information for the safe and effective use of your DIGITMON 10FT 2-Prong AC Power Cord. This replacement power cable is designed to provide reliable power to compatible electronic devices, such as the Magnavox MD6924 Portable Top Loading CD Boombox. Please read this manual thoroughly before connecting and using the power cord.

## SETUP INSTRUCTIONS

---

Follow these steps to properly connect your DIGITMON AC Power Cord:

- 1. Identify the Device Port:** Locate the power input port on your electronic device (e.g., Magnavox MD6924 Boombox). This port typically has two small, parallel holes, often resembling a figure-8 shape.
- 2. Connect the Cable to the Device:** Take the end of the DIGITMON power cord with the two small, parallel holes (the C7 connector). Align it carefully with the device's power input port and push it firmly until it is fully seated. Ensure a snug fit to prevent loose connections.
- 3. Identify the Wall Outlet:** Locate a standard US 2-prong AC wall outlet. Ensure the outlet is easily accessible and in good condition.
- 4. Connect the Cable to the Outlet:** Take the other end of the DIGITMON power cord, which has the two flat prongs (the NEMA 1-15P plug). Align the prongs with the slots in the wall outlet. Note that this is a polarized plug, meaning one prong is wider than the other; ensure it aligns with the wider slot in the outlet. Insert the plug firmly into the wall outlet.
- 5. Verify Connection:** Once both ends are connected, ensure the cable is not strained, pinched, or obstructing walkways. Your device should now be ready to receive power.



Figure 1: The DIGITMON 2-Prong AC Power Cord, illustrating the US standard plug and the C7 connector for device input. This cable is designed for a secure and reliable power connection.

## OPERATION

---

The DIGITMON 10FT 2-Prong AC Power Cord functions as a direct power supply cable. Once properly connected to a compatible device and a live electrical outlet, it will transmit electrical power to the device. There are no user-operable controls on the cable itself. The operation of your electronic device will depend on its own power switch and functions.

## CARE AND MAINTENANCE

---

- **Handling:** Always grasp the plug head when connecting or disconnecting the cable from the device or wall outlet. Avoid pulling directly on the cord itself, as this can damage the internal wiring or the plug connections.
- **Storage:** When not in use, coil the cable loosely. Avoid tight coiling or kinking, which can stress the wires. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cleaning:** If the cable becomes dirty, wipe it gently with a dry, soft cloth. Do not use liquid cleaners or immerse the cable in water. Ensure the cable is unplugged from all power sources before cleaning.
- **Inspection:** Periodically inspect the cable for any signs of damage, such as frayed insulation, exposed wires, bent prongs, or unusual bulges. If any damage is observed, discontinue use immediately and replace the cable.
- **Environment:** Do not expose the cable to excessive moisture, heat sources, or sharp objects. Keep it away from pets and children to prevent accidental damage.

## TROUBLESHOOTING

---

If your device is not receiving power after connecting the DIGITMON AC Power Cord, consider the following:

- **No Power to Device:**

**Check Connections:** Ensure both ends of the power cord are fully and securely inserted into the device and the wall outlet. A loose connection is a common cause of power interruption.

**Test Wall Outlet:** Plug another known working appliance into the same wall outlet to confirm the outlet is functional. If the outlet is not working, check your circuit breaker or try a different outlet.

**Inspect Cable for Damage:** Visually inspect the entire length of the power cord for any cuts, kinks, or signs of burning. A damaged cable should not be used.

**Device Power Switch:** Ensure the power switch on your electronic device is in the "ON" position.

- **Loose Fit:**

If the cable feels loose in the device's power port, ensure it is the correct type of cable (2-prong, polarized C7 connector). While this cable is designed for the Magnavox MD6924, some devices may have slightly different port tolerances. If the fit is excessively loose, it may not make proper contact.

- **Overheating:**

If the cable or the device's power input area feels unusually warm, immediately unplug the cable from both the device and the wall outlet. This could indicate an issue with the device or the cable. Do not use the cable again until the cause of overheating is identified and resolved.

If troubleshooting steps do not resolve the issue, or if you suspect the cable is faulty, discontinue use and consider replacing the cable.

## PRODUCT SPECIFICATIONS

---

Feature	Detail
Product Type	Replacement AC Power Cord
Brand	DIGITMON
Length	10 Feet (approx. 3 meters / 120 inches)
Connector Type (Wall)	US 2-Prong (NEMA 1-15P), Polarized
Connector Type (Device)	2-Slot (IEC C7), Polarized
Wire Gauge	18 AWG (American Wire Gauge)
UL Certified	Yes
Color	Black
Compatibility	Most 2-port power adapters, specifically compatible with Magnavox MD6924 Portable Top Loading CD Boombox



Figure 2: The DIGITMON 10FT 2-Prong AC Power Cord, coiled to illustrate its substantial length, providing flexibility in device placement.

---

Specific warranty details for the DIGITMON 10FT 2-Prong AC Power Cord are not provided within this manual. For information regarding product warranty, please refer to the product packaging, the seller's return policy, or contact DIGITMON customer support directly.

## CUSTOMER SUPPORT

---

For any questions, concerns, or technical assistance regarding your DIGITMON 10FT 2-Prong AC Power Cord, please contact the seller or manufacturer through the platform where the product was purchased. Please have your order details and product information ready when contacting support.

You may also visit the official DIGITMON store on Amazon for more information: [DIGITMON Store](#)

