

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [saschedross](#) /

› [saschedross USB-C 5V AC/DC Adapter User Manual for Sonos Roam S27 527](#)

saschedross S27 527

saschedross USB-C 5V AC/DC Adapter User Manual

Model: S27 527

For Sonos Roam Portable Bluetooth Speaker

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your saschedross USB-C 5V AC/DC Adapter. This adapter is specifically designed to be compatible with the Sonos Roam Portable Bluetooth Speaker, models S27 and 527, and other compatible devices requiring a 5V USB-C power supply. Please read this manual thoroughly before using the product.

SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- Do not expose the adapter to water, moisture, or extreme temperatures.
- Do not disassemble or modify the adapter. This voids the warranty and may cause electric shock or fire.
- Ensure the adapter is connected to a power outlet within the specified voltage range (100-240VAC).
- Avoid using the adapter with damaged cables or if the adapter itself is damaged.
- Keep out of reach of children.
- Unplug the adapter from the power outlet when not in use for extended periods.

This adapter features Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP) to safeguard your devices.

SETUP

1. **Unpack the Adapter:** Carefully remove the USB-C 5V AC/DC Adapter from its packaging.
2. **Inspect for Damage:** Before use, visually inspect the adapter and its USB-C cable for any signs of damage. Do not use if damaged.
3. **Connect to Power Outlet:** Plug the adapter's 2-pin main power connector into a standard wall outlet (100-240VAC, 50/60Hz).
4. **Connect to Device:** Insert the USB-C connector of the adapter's cable into the USB-C charging port of your Sonos Roam speaker (Model S27 527).



Image: The saschedross USB-C 5V AC/DC Adapter. This image shows the compact design of the adapter, suitable for travel, with its USB-C output port. It is ready to be plugged into a wall socket and connected to a compatible device like the Sonos Roam speaker.

OPERATING INSTRUCTIONS

Once properly set up, the adapter will begin charging your Sonos Roam speaker.

- The Sonos Roam speaker's charging indicator will typically illuminate to show that it is receiving power. Refer to your Sonos Roam user manual for specific charging indicator behavior.
- The adapter provides a stable 5V output, suitable for the Sonos Roam and other devices requiring a 5V USB-C power input.
- Charging time may vary depending on the battery level of your device and its power management system.

MAINTENANCE

Proper care ensures the longevity of your adapter:

- **Cleaning:** Disconnect the adapter from the power outlet and your device before cleaning. Use a soft, dry cloth to wipe the

surface. Do not use liquid cleaners or aerosols.

- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Cable Care:** Avoid bending or crimping the USB-C cable excessively. Do not pull the cable to unplug the adapter; always grasp the plug itself.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not charging.	Adapter not properly plugged in. USB-C cable not fully inserted. Power outlet is not active. Device issue.	Ensure adapter is firmly plugged into the wall. Ensure USB-C cable is fully inserted into both adapter and device. Test the outlet with another device. Try charging your device with another known-good charger to rule out a device issue.
Adapter feels warm during use.	Normal operation.	It is normal for power adapters to generate some heat during operation. If it becomes excessively hot or emits smoke/smell, discontinue use immediately and contact support.
Loose connection.	Damaged cable or port.	Inspect the USB-C cable and the device's charging port for damage. Replace the cable if damaged.

SPECIFICATIONS

Brand: saschedross

Model: S27 527 (Compatible with Sonos Roam)

Connector Type: USB Type C

Input Voltage: 100-240VAC, 50/60Hz (World Wide Input)

Output Voltage: 5 Volts DC

Total USB Ports: 1

Power Source: Corded Electric

Main Power Connector Type: 2 Pin

Special Features: Travel-friendly, OVP, OCP, SCP Protection

Manufacturer: Shenzhen Waweis Technology Co., Ltd

WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The warranty period typically begins from the date of purchase. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact the seller directly.

SUPPORT

If you encounter any issues or have questions regarding your saschedross USB-C 5V AC/DC Adapter that are not addressed in this manual, please contact the seller or manufacturer for assistance. Provide your product model (S27 527) and a detailed

description of the issue when seeking support.

For further information, you may visit the [saschedross brand page](#) on Amazon.