

Brightup FK-8788T

Brightup Beard Trimmer User Manual

Model: FK-8788T

INTRODUCTION

Thank you for choosing the Brightup All-in-One Beard Trimmer for Men. This versatile grooming kit is designed to provide precise and comfortable trimming for your beard, hair, face, body, ear, and nose. Featuring multiple interchangeable heads, adjustable combs, two speed modes, and a waterproof design, this trimmer offers a comprehensive solution for your grooming needs. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

SAFETY INFORMATION

- Always ensure the trimmer is turned off before attaching or detaching any heads or combs.
- Keep the appliance dry when not in use.
- If using an external power adapter for charging, ensure it provides only 5V output. Using adapters with higher voltage may damage the device.
- Do not immerse the charging base in water. The trimmer itself is IPX7 waterproof and can be rinsed under water.
- Keep out of reach of children.
- Do not disassemble the unit. For repairs, contact customer service.
- Avoid using the trimmer on irritated or broken skin.

PACKAGE CONTENTS

Your Brightup Beard Trimmer kit includes the following components:

- Main Trimmer Unit
- Full-Size Trimmer Head
- Precision Trimmer Head
- Body Hair Trimmer Head
- Nose & Ear Trimmer Head

- Micro Shaver Head
- Design Trimmer Head
- 5 Fixed Hair Trimmer Combs (1mm, 3mm, 6mm, 9mm, 12mm)
- 1 Adjustable Precision Trimmer Comb (1/2/3/4mm)
- Storage Stand Base
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil
- Comb



Image: All components included in the Brightup Beard Trimmer kit, neatly arranged.

SETUP

Charging the Trimmer

Before first use, fully charge the trimmer. The built-in lithium-ion battery provides up to 90 minutes of run time on a full charge, which takes approximately 1.5 hours.

1. Connect the USB charging cable to the charging port on the trimmer.
2. Plug the other end of the USB cable into a 5V USB power source (e.g., laptop, USB wall adapter, power bank, car charger).
3. The LED display on the trimmer will show the battery percentage, indicating the charging status.
4. Once the display shows 100%, the trimmer is fully charged. Disconnect the cable.

LI-ION POWERD

CONVENIENT AND SAFE USB CHARGING



Laptop



USB Outlet



USB Charger



Car Charger



Power Bank



Image: Illustration of the USB charging process, compatible with various 5V USB power sources.

Attaching and Detaching Trimmer Heads

Ensure the trimmer is turned off before changing heads.

1. To attach a head: Align the desired trimmer head with the main unit and gently push it down until it clicks into place.
2. To detach a head: Hold the main unit firmly and gently pull the trimmer head upwards to remove it.

Attaching and Detaching Guide Combs

Guide combs are used with the Full-Size Trimmer Head and Precision Trimmer Head to control hair length.

- For the Full-Size Trimmer: Select one of the 5 fixed combs (1mm, 3mm, 6mm, 9mm, 12mm). Slide the comb onto the trimmer head until it securely locks.
- For the Precision Trimmer: Use the adjustable comb (1/2/3/4mm). Slide it onto the precision trimmer head and adjust the length setting as needed.
- To remove a comb: Gently pull it away from the trimmer head.



Image: Visual guide to the various fixed and adjustable combs and their intended use for different hair lengths.

OPERATING INSTRUCTIONS

Power On/Off and Speed Modes

- To turn on: Press and hold the power button for 3 seconds.

- To switch speed modes: Briefly press the power button. The trimmer has two speed modes: 7300 RPM for daily use and 8800 RPM for thicker hair.
- To turn off: Press and hold the power button for 3 seconds. The travel lock feature prevents accidental activation.

Grooming Applications

Select the appropriate trimmer head and comb for your desired grooming task:

- **Beard and Hair Trimming:** Use the Full-Size Trimmer Head with the desired guide comb (1mm, 3mm, 6mm, 9mm, or 12mm) for even trimming. For detailing, use the Precision Trimmer Head with its adjustable comb.
- **Body Hair Trimming:** Attach the Body Hair Trimmer Head for efficient and comfortable trimming of body hair.
- **Nose and Ear Hair Trimming:** Use the Nose & Ear Trimmer Head for safe and precise removal of unwanted hair in these sensitive areas.
- **Shaving and Detailing:** The Micro Shaver Head provides a close shave for small areas. The Design Trimmer Head is ideal for creating sharp lines and intricate designs.

MULTI GROOMING FOR BEARD BODY NOSE HAIR TRIMMER

Functionality + Durability + Ergonomic



Precision Trimmer




Body Hair Trimmer




Nose & Ear Trimmer



Micro Shaver

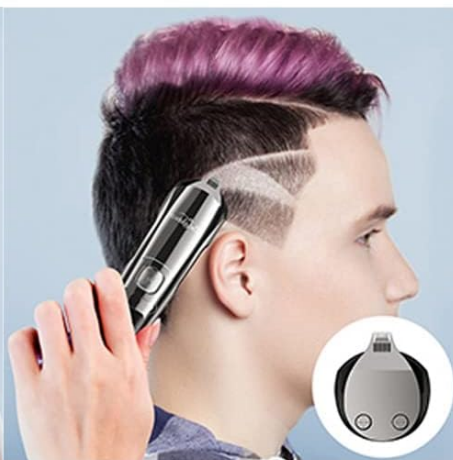

Design Trimmer

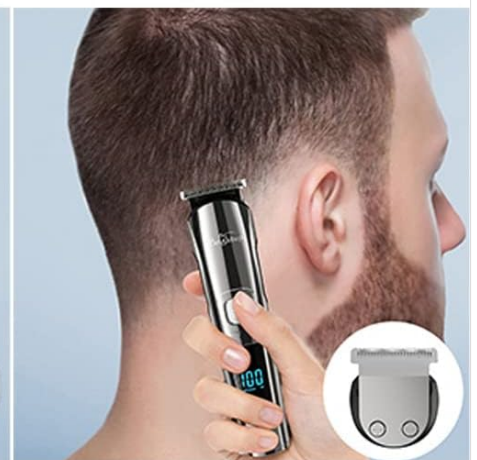

Full Size Trimmer

Image: Demonstrates the versatility of the Brightup grooming kit with various heads for different grooming needs.

MAINTENANCE

Cleaning the Trimmer

The Brightup trimmer is IPX7 waterproof, allowing for easy cleaning.

1. After each use, turn off the trimmer and detach the trimmer head.
2. Rinse the trimmer head and the main unit (excluding the charging base) under running water.
3. Use the included cleaning brush to remove any trapped hairs from the blades and inside the heads.
4. Allow all parts to air dry completely before reassembling or storing.



Image: The trimmer is shown being cleaned under water, demonstrating its full washability for hygienic maintenance.

Lubricating the Blades

Regular lubrication ensures optimal performance and extends the lifespan of the blades.

1. After cleaning and drying, apply a small drop of the included lubricating oil to the blades of the trimmer head.

- 2. Turn on the trimmer for a few seconds to distribute the oil evenly.
- 3. Wipe off any excess oil with a soft cloth.

Storage

Store the trimmer and all accessories in the provided stand base to keep them organized and protected.



Image: The trimmer and its various attachments are shown stored in the included stand, promoting organization and easy access.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or depleted.	Charge the trimmer fully.

Problem	Possible Cause	Solution
Trimmer pulls hair or cuts poorly.	Blades are dirty or not lubricated. / Hair is too long for the comb.	Clean and lubricate the blades. / Use a longer comb or pre-trim longer hair.
Trimmer makes unusual noise.	Blades may be misaligned or damaged.	Ensure heads are properly attached. If problem persists, contact customer service.

If you encounter any issues not listed here, please contact Brightup customer service for assistance.

SPECIFICATIONS

- **Model Number:** FK-8788T
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Run Time:** Up to 90 minutes
- **Charge Time:** Approximately 1.5 hours
- **Waterproof Rating:** IPX7 (Whole Body Washable)
- **Speed Modes:** 7300 RPM (Mode 1), 8800 RPM (Mode 2)
- **Color:** Black
- **Product Dimensions:** 9.6 x 7.2 x 3 inches
- **Item Weight:** 1.2 Pounds
- **Manufacturer:** Brightup

WARRANTY AND SUPPORT

Brightup provides a one-year warranty for this beard trimmer. For warranty claims or any product-related inquiries, please contact our customer service team.

Customer Service Contact:

- Phone:** 001 (848) 256-9372
- User Manual (PDF):** [Download Here](#)
- Safety Information (PDF):** [Download Here](#)

© 2024 Brightup. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question