

NEQUARE V230

NEQUARE V230 Cordless Stick Vacuum Cleaner Instruction Manual

Model: V230

1. INTRODUCTION

Thank you for choosing the NEQUARE V230 Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance.

Please read it thoroughly before first use and keep it for future reference.

The NEQUARE V230 is designed for versatile cleaning, offering powerful suction and multiple attachments to tackle various surfaces and cleaning needs in your home.

2. SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions before using this vacuum cleaner.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

3. PACKAGE CONTENTS

Your NEQUARE V230 Cordless Stick Vacuum Cleaner comes with the following components:



Image: All components of the NEQUARE V230 Cordless Stick Vacuum Cleaner, including the main motor, extension tube, floor brush, various attachments, charging adapter, and wall mount.



Image: Detachable 7-Cell Battery.



Image: Extension Tube.



Image: Dust Cup.



Image: Main Motor Unit.

- Main Motor Unit with Dust Cup
- Detachable 7-Cell Battery
- Extension Tube
- Motorized LED Floor Brush
- Crevice Tool
- 2-in-1 Brush Tool
- Flexible Hose
- Wall Mount & Screws
- Charging Adapter

- Instruction Manual
- Extra Filter

4. ASSEMBLY & SETUP

4.1 Assembling the Vacuum

1. **Attach the Extension Tube:** Insert the extension tube into the main motor unit until it clicks securely.
2. **Attach the Floor Brush:** Connect the motorized LED floor brush to the other end of the extension tube until it clicks into place.
3. **Install the Battery:** Slide the detachable 7-cell battery into the main motor unit until it locks.

Video: This video demonstrates the assembly of the NEQUARE V230 Cordless Stick Vacuum Cleaner, showing how to connect the main components and prepare it for use.

4.2 Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the vacuum or separately.

1. Connect the charging adapter to the battery charging port.
2. Plug the adapter into a power outlet.
3. The battery indicator lights will show charging status. A full charge typically takes 4 hours.



Image: The detachable battery unit, highlighting its charging port and indicating a 4-hour fast charge time for its 2200mAh capacity.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Suction Modes

1. **Power On:** Press the power button on the main motor unit to start the vacuum.
2. **Adjust Suction:** Use the mode button to switch between Standard Mode (up to 40 minutes runtime) and Strong Mode (up to 20 minutes runtime). The LED display will indicate the current mode and battery level.
3. **Power Off:** Press the power button again to turn off the vacuum.

5.2 Using Attachments

The NEQUARE V230 comes with multi-attachments for various cleaning tasks. They can be attached directly to the main motor unit or to the extension tube/flexible hose.



Image: The NEQUARE V230 Cordless Vacuum with various attachments, including a crevice tool, brush tool, and flexible hose, demonstrating its versatility for different cleaning needs.

- **Motorized LED Floor Brush:** Ideal for hard floors, short-haired carpets, and tiles. The LED lights illuminate dust and debris for thorough cleaning.
- **Crevice Tool:** Perfect for narrow gaps, corners, and hard-to-reach areas like between sofa cushions or along baseboards.
- **2-in-1 Brush Tool:** Use the brush for dusting delicate surfaces like keyboards or curtains, and the nozzle for upholstery or car interiors.
- **Flexible Hose:** Extends reach for cleaning high shelves, inside cars, or other awkward spaces when combined with other attachments.

Video: This video showcases the NEQUARE Cordless Vacuum in action, demonstrating its effectiveness on various surfaces and with different attachments for comprehensive cleaning.

5.3 Maneuverability

The motorized LED brush head features a flexible joint, allowing it to rotate 150° horizontally and 90° vertically. This design enables easy cleaning under furniture and around obstacles.



EASY TO MANEUVER

Rotable LED Brush Head & Flexible Joint Flexible

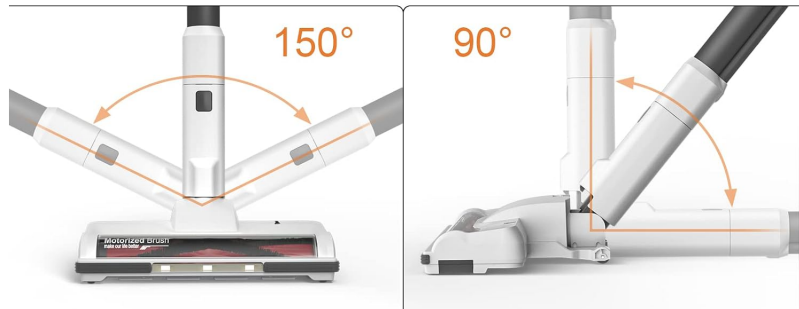


Image: The NEQUARE V230 Cordless Vacuum demonstrating its flexible joint and LED brush head to easily clean under low furniture, highlighting its maneuverability.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dust Cup

Empty the 1.2L large capacity dust cup after each use or when it reaches the MAX fill line.

1. Press the dust cup release button to detach it from the main motor unit.
2. Hold the dust cup over a trash bin and press the bottom release latch to open the lid and empty the contents.
3. Close the lid and reattach the dust cup to the main motor unit until it clicks.

Video: This video demonstrates the process of emptying the dust cup of the NEQUARE V230 Stick Vacuum Cleaner, showing how to detach and release collected debris.

6.2 Cleaning Filters

The NEQUARE V230 features a 5-stage filtration system including HEPA and metal mesh filters. Clean the filters regularly to maintain suction power.

1. Twist and pull to remove the filter assembly from the dust cup.
2. Separate the HEPA filter, high-density sponge, and metal mesh filter.
3. Rinse all filter components under running water until clean. Ensure they are completely dry before reassembling and placing back into the vacuum.

4. It is recommended to clean the filters after each use and replace them every 3-6 months depending on usage.



Our journey began in 2016.

For more than 6 years, NEQUARE has been focusing on product design, product development and technological innovation.

We continue to update and improve our products.

And to provide the world with the best household cleaning equipment has always been our constant goal.

Image: A diagram illustrating the NEQUARE V230's 5-stage high-efficiency filtration system, including HEPA filtration, high-density sponge, metal mesh filtration, multi-cone cyclone separation, and strong cyclone.

6.3 Cleaning the Brush Roll

Periodically check the motorized floor brush for tangled hair or debris. Use the included cleaning tool to cut and remove any wrapped hair from the brush roll.

7. TROUBLESHOOTING

If you encounter any issues with your NEQUARE V230, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely clicked into place.
Low suction power	Dust cup is full, filters are clogged, or brush roll is obstructed.	Empty dust cup, clean filters, and remove any obstructions from the brush roll.
Brush roll not spinning	Hair or debris tangled in the brush roll, or brush roll is not properly installed.	Remove obstructions and ensure brush roll is correctly inserted.
Short battery life	Using Strong Mode continuously, or battery needs replacement.	Use Standard Mode for longer runtime. If battery performance significantly degrades, consider replacing it.

8. SPECIFICATIONS

Feature	Specification
Brand	NEQUARE
Model Number	V230
Special Feature	Cordless
Filter Type	Cartridge (HEPA, Metal Mesh, High-density Sponge)
Included Components	Multi-attachments
Capacity	1.2 Liters
Recommended Uses	Hard Floor, Carpet
Form Factor	Handheld, Stick
Battery Type	Rechargeable 7-Cell Battery
Noise Level	70 Decibels
Number of Power Levels	2
Item Weight	10.19 pounds

9. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the contact details provided in your product packaging or visit the official NEQUARE website. Keep your purchase receipt as proof of purchase for any warranty claims.