

[Manuals.plus](#) /

› [PARTPHONER](#) /

› PARTPHONER 22.6" Touch Control Table Lamps Instruction Manual

PARTPHONER 22.6" Touch Lamp (Model: B09XB71MHD)

PARTPHONER 22.6" Touch Control Table Lamps

Model: B09XB71MHD

INTRODUCTION

Thank you for purchasing the PARTPHONER 22.6" Touch Control Table Lamps. This set of two elegant lamps is designed to provide versatile lighting and convenient charging solutions for your home. Featuring 3-way dimmable touch control and integrated USB C+A charging ports, these lamps are perfect for bedrooms, living rooms, or offices. Please read this manual thoroughly before assembly and operation to ensure safe and optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the lamp from the power outlet before cleaning, changing bulbs, or performing any maintenance.
- Do not use with a damaged cord or plug. If the cord or plug is damaged, contact customer support.
- Do not expose the lamp to water or moisture. Use only in dry indoor locations.
- Ensure the bulb wattage does not exceed the maximum specified for the lamp (9W LED included).
- Keep the lamp away from heat sources and direct sunlight.
- This lamp is not a toy. Keep out of reach of children and pets.

PACKAGE CONTENTS

Please check the package to ensure all components are present and undamaged:

- Lamp Base with USB C+A Ports (x2)
- Fabric Lamp Shade (x2)
- E26 LED Bulb (9W, 2700K) (x2)
- Finial (x2)
- Shade Ring (pre-attached to base) (x2)



Image: Overview of the PARTPHONER Table Lamps, highlighting key features like USB ports and included bulbs.

SETUP AND ASSEMBLY

Assembly is quick and easy, requiring no tools. Follow these steps:

1. Carefully unpack all components from the packaging.
2. Unscrew the shade ring from the lamp base.
3. Place the fabric lamp shade onto the lamp base, ensuring it rests securely on the saddle.
4. Screw the shade ring back onto the lamp base to secure the shade in place.
5. Screw the included E26 LED bulb into the lamp socket.
6. Screw the finial onto the top of the harp to complete the assembly.
7. Plug the lamp into a standard wall outlet.



Image: Breakdown of lamp components for assembly reference.

OPERATING INSTRUCTIONS

3-Way Dimmable Touch Control

The lamp features a sensitive touch control system. Simply touch any metal part of the lamp base to adjust the brightness:

- **First Touch:** Low brightness setting, ideal for soft ambient light or night light.
- **Second Touch:** Medium brightness setting, suitable for general illumination.
- **Third Touch:** High brightness setting, perfect for reading or task lighting.
- **Fourth Touch:** Turns the lamp OFF.

3-Way Dimmable & Control

Tap the metal part of the lamps to adjust brightness



Image: Visual guide to the 3-way dimmable touch control settings.

USB C+A Charging Ports

Each lamp is equipped with one USB-C port and one USB-A port on the base, allowing you to conveniently charge your electronic devices. The charging function operates independently of the lamp's light, meaning you can charge devices whether the lamp is on or off.

- Connect your device's charging cable to the appropriate USB-C or USB-A port on the lamp base.
- Ensure the lamp is plugged into a live power outlet for the charging ports to function.

Convenient to charge your electronics with dual USB ports no matter lamps are on or off



Image: Demonstration of using the integrated USB C and USB A charging ports.

MAINTENANCE

Cleaning

- Always unplug the lamp before cleaning.
- Wipe the lamp base with a soft, dry cloth. Do not use abrasive cleaners or polishes as they may damage the finish.
- For the fabric shade, use a lint roller or a soft, dry brush to remove dust. Do not wet the shade.

Bulb Replacement

- Ensure the lamp is unplugged and the bulb has cooled down before attempting to replace it.
- Unscrew the old bulb from the socket.
- Screw in a new E26 base LED bulb. For optimal performance and dimming compatibility, it is recommended to use LED bulbs with a maximum wattage of 9W.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Lamp not plugged in. Power outlet not working. Bulb is loose or burnt out. Touch sensor issue.	Ensure the lamp is securely plugged into a working outlet. Test the outlet with another device. Tighten or replace the bulb. Ensure hands are dry and clean when touching the lamp.
Touch control is unresponsive or erratic.	Loose bulb. Interference from other electronics. Dirty lamp surface.	Ensure the bulb is screwed in tightly. Move the lamp away from other electronic devices. Clean the lamp base with a dry cloth.
USB charging ports not working.	Lamp not plugged in. Device cable is faulty. Device requires more power than supplied.	Ensure the lamp is plugged into a live power outlet. Try a different charging cable or device. Note that high-power devices (e.g., some tablets) may charge slower or not at all.

SPECIFICATIONS

Feature	Detail
Brand	PARTPHONER
Model	B09XB71MHD
Lamp Type	Table Lamp
Dimensions (D x W x H)	12.1" x 12.1" x 22.6"
Base Material	Polyresin
Shade Material	Fabric
Finish Type	Distressed
Switch Type	Touch Control (3-Way Dimmable)
Light Source Type	LED
Bulb Base	E26
Max Wattage	9W LED (Bulbs Included)
Color Temperature	2700 Kelvin (Warm White)
Brightness	850 Lumen
Connectivity	USB C, USB A Charging Ports
Power Source	Corded Electric

Feature	Detail
Number of Items	2 (Set of 2 Lamps)



Image: Detailed dimensions of the lamp.

WARRANTY AND SUPPORT

PARTPHONER products are designed for quality and durability. For any questions, concerns, or warranty claims, please contact our customer support team. Refer to your purchase documentation for specific warranty terms and contact information. You can also visit the official PARTPHONER store on Amazon for more information and support:[PARTPHONER Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09XB71MHD>

More documents and user manuals: **<https://manuals.plus/>**