

[Manuals.plus](#) /

› [Landmann](#) /

› LANDMANN Rexion cook PTS 6.1 Gas Grill User Manual

Landmann Rexion cook PTS 6.1 (Model 01955)

LANDMANN Rexion cook PTS 6.1 Gas Grill User Manual

Model: Rexion cook PTS 6.1 (01955)

1. INTRODUCTION

Thank you for choosing the LANDMANN Rexion cook PTS 6.1 Gas Grill. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new gas grill. Please read all instructions carefully before use to ensure optimal performance and safety.



The LANDMANN Rexon cook PTS 6.1 Gas Grill, a robust outdoor cooking appliance.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these instructions could result in fire, explosion, or burn hazard, which could cause property damage, personal injury, or death.

- **Outdoor Use Only:** This grill is designed for outdoor use only. Do not operate indoors or in enclosed spaces.
- **Gas Leak Check:** Always perform a leak test on all gas connections before initial use and after any gas cylinder change. Use a soapy water solution; never use an open flame.
- **Ventilation:** Ensure adequate ventilation around the grill. Do not obstruct ventilation openings.
- **Clearance:** Maintain a minimum distance of 1 meter (3 feet) from combustible materials to the sides and rear of the grill.
- **Children and Pets:** Keep children and pets away from the grill at all times, especially during operation.
- **Hot Surfaces:** Grill surfaces become extremely hot during use. Use heat-resistant gloves and appropriate tools.
- **Gas Cylinder:** Use only approved LP gas cylinders. Ensure the cylinder is upright and securely fastened.

Disconnect the gas cylinder when the grill is not in use.

- **Never leave a lit grill unattended.**

3. PRODUCT OVERVIEW AND FEATURES

The LANDMANN Raxon cook PTS 6.1 Gas Grill is equipped with advanced features for a versatile grilling experience. Key components include:

- **6 Main Stainless Steel Burners:** Individually adjustable for precise temperature control across different cooking zones, providing 21 kW total power.
- **1 Side Burner (Cookzone):** An integrated 3 kW side burner, perfect for preparing sauces, side dishes, or using a wok.
- **Double-Walled Lid:** Enhances heat retention and features an integrated thermometer for monitoring internal cooking temperature.
- **Enameled Cast Iron Grill Grates:** Durable and provide excellent heat distribution for consistent cooking.
- **Large Grilling Surface:** Approximately 94 x 43 cm, suitable for cooking for up to 12 people.
- **Enameled Warming Rack:** Keeps cooked food warm without overcooking.
- **Foldable Side Table:** Provides convenient extra workspace and storage for accessories.
- **Battery-Free Piezo Ignition:** For quick and reliable startup of burners.
- **LED Control Knobs:** For enhanced visibility and control.
- **Removable Timer:** Assists with optimal cooking control.
- **Removable Fat Collection Tray:** Simplifies cleaning and maintenance.



A collage showing the six main burners, the side burner (Cookzone), the 94x43 cm grill surface, and the foldable side table.



The Modulus system grill grate with a removable circular insert, allowing for various cooking accessories.

4. SETUP AND ASSEMBLY

Assembly of the LANDMANN Rexon cook PTS 6.1 Gas Grill is required. Please follow the detailed assembly instructions provided in the separate assembly guide included with your product. Ensure all components are present and undamaged before beginning assembly.

4.1 Gas Cylinder Connection

1. Ensure the gas cylinder valve is closed.
2. Connect the regulator hose to the gas cylinder valve. Tighten securely by hand, then use a wrench to ensure a snug fit. Do not overtighten.
3. Connect the other end of the regulator hose to the grill's gas inlet.
4. Perform a leak test on all connections before opening the gas supply.

4.2 Initial Burn-Off

Before cooking food for the first time, perform an initial burn-off to remove any manufacturing residues. Light all burners on high for 10-15 minutes with the lid closed. Allow the grill to cool completely afterward.

5. OPERATING INSTRUCTIONS

5.1 Lighting the Main Burners

1. Open the grill lid.
2. Ensure all burner control knobs are in the 'OFF' position.
3. Open the gas supply valve on the LP cylinder.
4. Push in and turn one main burner control knob counter-clockwise to the 'HIGH' position.
5. Press the piezo ignition button (if applicable) or use a long-stem lighter to ignite the burner. You should hear a click and see a flame.
6. Once the first burner is lit, you can light adjacent burners by turning their control knobs to 'HIGH'.
7. Close the lid and preheat the grill to the desired temperature.

5.2 Using the Side Burner (Cookzone)

1. Open the side burner lid.
2. Push in and turn the side burner control knob counter-clockwise to the 'HIGH' position.
3. Press the piezo ignition button or use a long-stem lighter to ignite.
4. Adjust the flame as needed.



A cast iron wok filled with shrimp and vegetables cooking on the integrated side burner (Cookzone).



A close-up of the high-heat sizzle zone, ideal for searing meats.

5.3 Temperature Control

The integrated lid thermometer displays the internal temperature of the grill. Adjust burner control knobs to achieve and maintain your desired cooking temperature. For lower temperatures, use fewer burners or set them to a lower setting.



The gas grill in operation on a patio, with various foods cooking on the main grates and a wok on the side burner.



An overhead view showcasing different foods, including meat, vegetables, and sausages, cooking on the grill's main grates and a solid plate.



A pizza stone with a pizza being placed onto the grill, demonstrating accessory compatibility.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your grill and ensure safe operation.

6.1 Grill Grates

After each use, once the grill has cooled slightly but is still warm, use a grill brush to remove food residue from the enameled cast iron grates. For deeper cleaning, remove the grates and wash with warm soapy water, then rinse and dry thoroughly.

6.2 Fat Collection Tray

The removable fat collection tray should be emptied and cleaned regularly to prevent grease fires. Allow the tray to cool completely before removing and cleaning with warm soapy water.

6.3 Exterior Surfaces

Clean stainless steel and painted surfaces with a mild detergent and a soft cloth. Avoid abrasive cleaners or scouring pads, which can scratch the finish. For stainless steel, wipe in the direction of the grain.

6.4 Burners

Periodically inspect burner ports for blockages (e.g., from insects). Use a wire brush or paper clip to clear any obstructions. Ensure gas flow is unobstructed.

6.5 Winter Storage

If storing the grill for an extended period, especially during winter, disconnect the gas cylinder, clean the grill thoroughly, and cover it with a weather-resistant grill cover. Store the LP cylinder in a well-ventilated outdoor area, away from direct sunlight and heat sources.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner does not light	No gas flow, clogged burner port, faulty igniter	Check gas cylinder, ensure valve is open. Clear burner ports. Check igniter electrode and wire connection.
Uneven heat	Clogged burner ports, low gas pressure	Clean burner ports. Check gas regulator for proper function.
Gas smell	Gas leak	IMMEDIATELY turn off gas supply. Perform a leak test. If leak persists, do not use the grill and contact a qualified service technician.
Yellow or orange flames	Improper air/gas mixture, clogged burner	Clean burner ports. Ensure air shutters (if adjustable) are correctly set.

8. SPECIFICATIONS

Feature	Detail
Brand	Landmann
Model Name	Rexon 6.1 cook
Model Number	01955
Product Dimensions (D x W x H)	55D x 162W x 120H cm
Fuel Type	Gas (LP)
Total Heat Output	24 Kilowatts (21 kW main burners + 3 kW side burner)
Main Burners	6 (Stainless Steel, infinitely adjustable)
Side Burners	1 (Cookzone)
Cooking Surface Width	Approximately 94 x 43 cm (4022 cm²)
Material	Stainless Steel, Cast Iron (grates)
Finish Type	Stainless
Ignition Type	Battery-free Piezo
Special Features	Foldable side table, Integrated lid thermometer, LED control knobs, Removable timer, Removable fat collection tray
Recommended Use	Outdoor grilling of various foods, preparing side dishes, serving large groups
Assembly Required	Yes



Diagram showing the dimensions of the gas grill: 163 cm width, 56 cm depth, 121 cm height.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Landmann website. If you require technical support or have questions not covered in this manual, please contact Landmann customer service through their official channels.

© 2023 Landmann. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question