

Manuals.plus /

› Generico /

› Generico Metal Bobbins for Seiko Special Sewing Machines (Models 610-86000) - Instruction Manual

Generico Seiko Special 610, 620, 630, 650, 690, 691, 801, 808, 809N, 860, 6300, 8120, 8500, 8600

Generico Metal Bobbins for Seiko Special Sewing Machines (Models 610-86000) - Instruction Manual

INTRODUCTION

This instruction manual provides essential information for the proper use and maintenance of your Generico Metal Bobbins. These bobbins are designed for compatibility with a range of Seiko Special domestic sewing machines. Please read this manual thoroughly before installation and operation to ensure optimal performance and longevity of your bobbins and sewing machine.

PRODUCT OVERVIEW

The Generico Metal Bobbins are high-quality, durable components essential for the lower threading mechanism of your sewing machine. Each bobbin is constructed from metal and features perforations, which can aid in consistent thread winding and tension.

This product includes a set of 10 metal bobbins.



Image: A single metal bobbin. This image displays a single metal bobbin, featuring a central spindle and two flat, circular

flanges. Both flanges are perforated with multiple small, oval-shaped holes. The bobbin is made of a shiny, silver-colored metal, indicating its durable construction. This design allows for smooth thread winding and consistent tension during sewing operations.

Compatible Sewing Machine Models:

- Seiko Special 610
- Seiko Special 620
- Seiko Special 630
- Seiko Special 650
- Seiko Special 690
- Seiko Special 691
- Seiko Special 801
- Seiko Special 808
- Seiko Special 809N
- Seiko Special 860
- Seiko Special 6300
- Seiko Special 8120
- Seiko Special 8500
- Seiko Special 8600

SETUP AND INSTALLATION

Proper bobbin setup is crucial for smooth sewing. Refer to your sewing machine's specific instruction manual for detailed steps on bobbin winding and insertion, as procedures can vary between models. The following are general guidelines:

1. Winding the Bobbin:

- Place a spool of thread on the spool pin of your sewing machine.
- Guide the thread through the machine's tension disc for bobbin winding.
- Insert the end of the thread into one of the holes on the bobbin and wind it a few times manually to secure it.
- Place the bobbin onto the bobbin winder spindle.
- Engage the bobbin winder and gently press the foot pedal to wind the thread evenly onto the bobbin. Stop when the bobbin is full but not overfilled.
- Cut the thread and remove the wound bobbin from the spindle.

2. Inserting the Bobbin:

- Open the bobbin case or bobbin compartment of your sewing machine.
- Insert the wound bobbin into the bobbin case or compartment, ensuring the thread unwinds in the correct direction (usually counter-clockwise for drop-in bobbins, or as indicated by your machine).
- Guide the bobbin thread through the tension spring or slot in the bobbin case.
- Close the bobbin compartment.
- Bring the bobbin thread up through the needle plate by turning the handwheel to lower and raise the needle once.

OPERATING INSTRUCTIONS

Once the bobbin is correctly installed and threaded, your sewing machine is ready for operation. Ensure that the upper thread is also correctly installed and threaded through the needle.

- Always perform a test stitch on a scrap piece of fabric to check thread tension and stitch quality before beginning your project.
- Adjust the upper thread tension as needed to balance with the bobbin thread tension, aiming for even stitches on both sides of the fabric.
- Monitor the bobbin thread level periodically to avoid running out of thread mid-seam.

MAINTENANCE

Proper maintenance of your bobbins can extend their lifespan and contribute to consistent sewing performance.

- **Cleaning:** Periodically inspect bobbins for any lint, dust, or thread residue. Clean them with a soft brush or cloth.
- **Storage:** Store unused bobbins in a bobbin box or organizer to prevent tangling of thread and to keep them free from dust and damage.
- **Inspection:** Before each use, check bobbins for any signs of damage, such as bends or burrs, which could snag thread or affect tension. Replace damaged bobbins.

TROUBLESHOOTING

If you encounter issues during sewing, the bobbin can sometimes be a contributing factor. Here are common problems and potential solutions:

Problem	Possible Cause	Solution
Thread tangling or nesting on the underside of fabric	Incorrect bobbin insertion, improper bobbin thread tension, or upper thread tension too loose.	Re-insert bobbin correctly, ensuring thread unwinds in the right direction. Check bobbin case tension. Adjust upper thread tension.
Uneven stitches	Inconsistent bobbin winding or incorrect bobbin tension.	Re-wind bobbin evenly. Check and adjust bobbin case tension if adjustable.
Bobbin thread breaking	Bobbin overfilled, damaged bobbin, or excessive bobbin tension.	Ensure bobbin is not overfilled. Inspect bobbin for burrs or damage and replace if necessary. Reduce bobbin tension if possible.

For persistent issues, consult your sewing machine's specific manual or contact a qualified sewing machine technician.

SPECIFICATIONS

- **Brand:** Generico
- **Type:** Metal Bobbins, Perforated
- **Quantity:** 10 pieces per pack
- **Compatibility:** Seiko Special Sewing Machine Models (610, 620, 630, 650, 690, 691, 801, 808, 809N, 860, 6300, 8120, 8500, 8600)

- **ASIN:** B09XBPCZQX
- **Manufacturer:** Singer Catania

WARRANTY AND SUPPORT

This product is offered by **Centro Singer Catania**. For any product-related inquiries or support, please contact the seller directly through the platform where the purchase was made.

Return Policy: A return policy of 30 days is typically available for refund or replacement, subject to the terms and conditions of the retailer and seller.

For specific details regarding your purchase, please refer to your order information or contact the seller.