

[Manuals.plus](#) /

› [Pantone](#) /

› Pantone Wireless Bluetooth Speaker User Manual

Pantone PT-BS001R1

Pantone Wireless Bluetooth Speaker User Manual

Model: PT-BS001R1

1. INTRODUCTION

Thank you for choosing the Pantone Wireless Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

The Pantone speaker is designed for both indoor and outdoor use, featuring a durable fabric cover and Bluetooth 5.0 technology for high-quality audio playback. Its compact design and long battery life make it an ideal portable audio solution.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Pantone Wireless Bluetooth Speaker (Model: PT-BS001R1)
- USB Charging Cable
- 3.5mm Audio Cable (AUX)
- User Manual



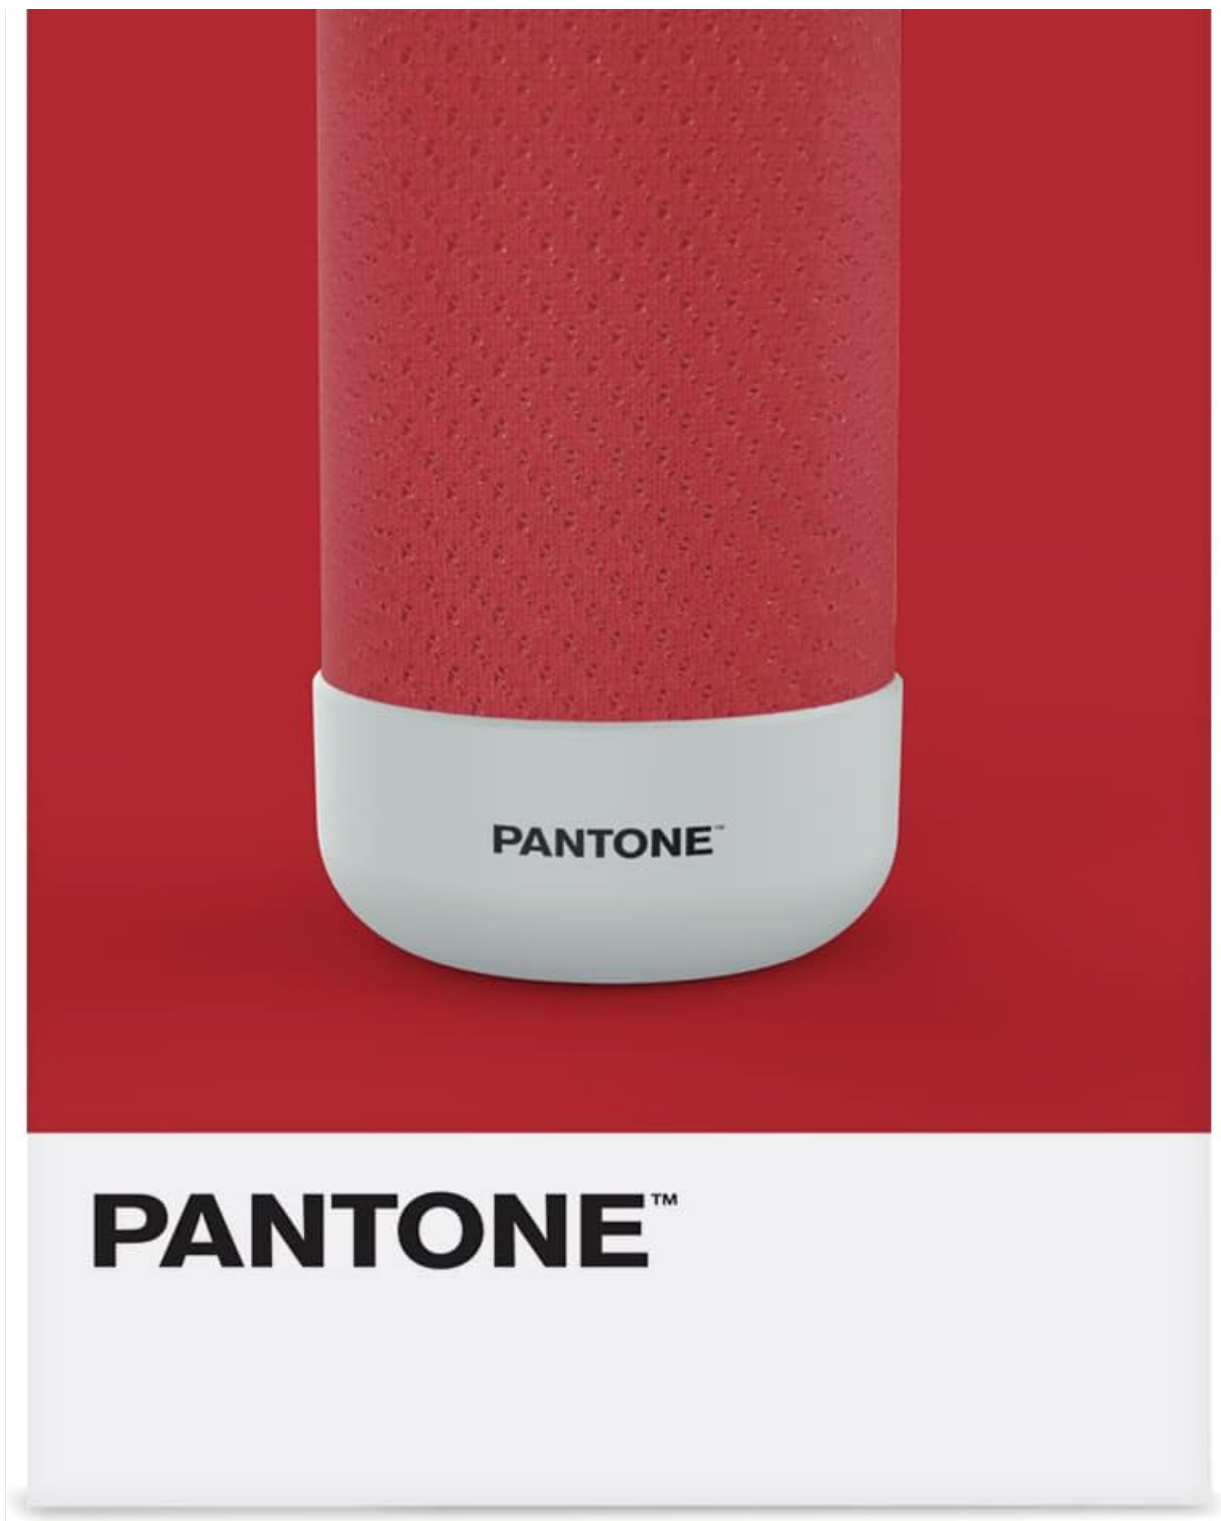


Image: The Pantone Wireless Bluetooth Speaker shown in its retail packaging, indicating the product and its accessories are included.

3. PRODUCT FEATURES

- **Bluetooth 5.0 Technology:** Ensures stable and efficient wireless connection up to 10 meters.
- **5W Audio Output:** Delivers clear and powerful sound.
- **Long Playback Time:** Up to 8-10 hours of music playback on a single charge.
- **Dual Connectivity:** Supports Bluetooth wireless connection and 3.5mm AUX jack for wired audio.
- **Integrated Controls:** Easily manage volume, track skipping, and playback directly from the speaker.
- **Portable Design:** Compact and lightweight with a durable fabric cover, suitable for indoor and outdoor use.



Image: Left, a front view of the red Pantone Wireless Bluetooth Speaker. Right, a rear view showing the control buttons and input ports (AUX, MIC, USB charging).

4. SETUP

4.1 Charging the Speaker

1. Connect the small end of the USB charging cable to the Micro USB port on the speaker.
2. Connect the larger end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate (color may vary) to show that the speaker is charging.
4. Once fully charged (approximately 2 hours), the indicator light will change or turn off.

Note: For optimal battery life, fully charge the speaker before first use.

4.2 Powering On/Off

- To power on, press and hold the **Power button** (located on the rear panel) for approximately 3 seconds until you hear an audible prompt.
- To power off, press and hold the **Power button** again for approximately 3 seconds until you hear an audible prompt.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED light and/or an audible prompt).
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "Pantone Speaker" from the list of found devices.
4. Once successfully paired, the speaker will provide an audible confirmation, and the LED light will stop flashing.
5. The speaker will automatically connect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

***Tip:** If pairing fails, turn off the speaker and your device's Bluetooth, then repeat the steps.*

5.2 Audio Playback

- **Play/Pause:** Press the **Play/Pause button** (often integrated with the Power button or a dedicated button) once to play or pause music.
- **Volume Control:** Press the **'+' button** to increase volume, and the **'-' button** to decrease volume.
- **Next Track:** Press and hold the **'+' button** (or a dedicated next track button) to skip to the next song.
- **Previous Track:** Press and hold the **'-' button** (or a dedicated previous track button) to go to the previous song.

5.3 AUX Mode

1. Connect one end of the 3.5mm audio cable to the AUX port on the speaker.
2. Connect the other end of the 3.5mm audio cable to the headphone jack or audio output port of your device.
3. The speaker will automatically switch to AUX mode.
4. Control playback and volume directly from your connected device.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.
- **Water Resistance:** While the product description mentions "Is waterproof: True", it is generally recommended to avoid submerging the speaker or exposing it to heavy rain to prevent damage. Refer to specific IP ratings if available for detailed water resistance capabilities.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or depleted.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; Device's Bluetooth is off; Speaker is too far from device.	Ensure speaker is in pairing mode. Turn on Bluetooth on your device. Move speaker closer to device (within 10m). Try restarting both devices.
No sound from speaker.	Volume is too low; Incorrect input mode; Device is not playing audio.	Increase speaker volume and device volume. Ensure correct mode (Bluetooth/AUX). Check if audio is playing on your device.
Sound distortion.	Volume too high; Device too far; Interference.	Reduce volume. Move speaker closer to device. Avoid strong electromagnetic interference.

8. SPECIFICATIONS

Model Name	Pantone Speaker
Model Number	PT-BS001R1
Bluetooth Version	5.0
Output Power	5 Watts
Wireless Range	Up to 10 meters (33 feet)
Battery Life	Up to 8-10 Hours
Charging Time	Approximately 2 Hours
Connectivity	Bluetooth, 3.5mm AUX
Dimensions (L x W x H)	7D x 7W x 15H centimetres
Weight	350 Grams
Material	Plastic, Fabric
Color	Red
Waterproof	True (as per product specifications)

9. WARRANTY AND SUPPORT

The Pantone Wireless Bluetooth Speaker comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the manufacturer's customer service.

Manufacturer: Pantone

Model: PT-BS001R1

Date First Available: 26 November 2022

For further assistance, please visit the official Pantone website or contact their support channels.

© 2024 Pantone. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B09XBQFDJM>
More documents and user manuals: <https://manuals.plus/>