

[Manuals.plus](#) /

› [Singing Machine](#) /

› Move Mic by Singing Machine – Bluetooth Karaoke Microphone & Speaker with LED Lights, 22 Voice FX & Rechargeable Battery – Portable Mic for Dorm Parties, Family Fun, Kids, and Teens User Manual

Singing Machine SMM575

Move Mic by Singing Machine – User Manual

Model: SMM575 | Brand: Singing Machine

1. INTRODUCTION

The Singing Machine Move Mic is a portable Bluetooth karaoke microphone and speaker designed for on-the-go entertainment. Featuring built-in LED lights, 22 voice effects, and a rechargeable battery, it allows users to sing along to their favorite music from any compatible device.

2. PACKAGE CONTENTS

- SMM575 Microphone
- Micro-USB charging cable
- Tie-cord


3. PRODUCT OVERVIEW

Familiarize yourself with the components and features of your Move Mic.



Figure 3.1: Singing Machine Move Mic. This image shows the overall design of the microphone, highlighting its compact and portable nature.

MOVIE MIC

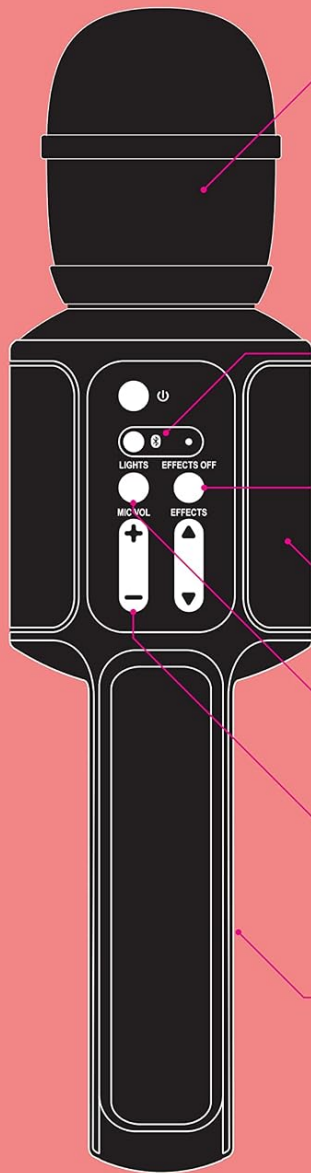

Microphone

Bluetooth®

22 Voice effects

Speaker

Lights

Mic Volume

Rechargeable
battery

Figure 3.2: Control Panel Layout. This image details the various buttons and indicators on the microphone, including power, Bluetooth pairing, LED light control, voice effect selection, and microphone volume adjustments.



Figure 3.3: Voice Effects. This graphic highlights some of the 22 voice effects, such as male, female, echo, robot, chipmunk, and radio, that can be applied to your vocals.

4. SETUP

4.1 Charging the Microphone

Before first use, fully charge the Move Mic. Connect the supplied Micro-USB charging cable to the microphone's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show charging status and turn off when fully charged. A full charge provides over 4 hours of playtime.

4.2 Powering On/Off

Press and hold the **Power button**  located on the control panel to turn the microphone on or off.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Pairing

To connect your Move Mic to a Bluetooth-enabled device (e.g., smartphone, tablet):

1. Ensure the Move Mic is powered on. The Bluetooth indicator light will flash, indicating it's in pairing mode.
2. On your device, enable Bluetooth and search for "SMM575".
3. Select "SMM575" from the list of available devices to pair. Once connected, the Bluetooth indicator light will turn solid blue.
4. You can now stream music from your device through the Move Mic's integrated speaker.

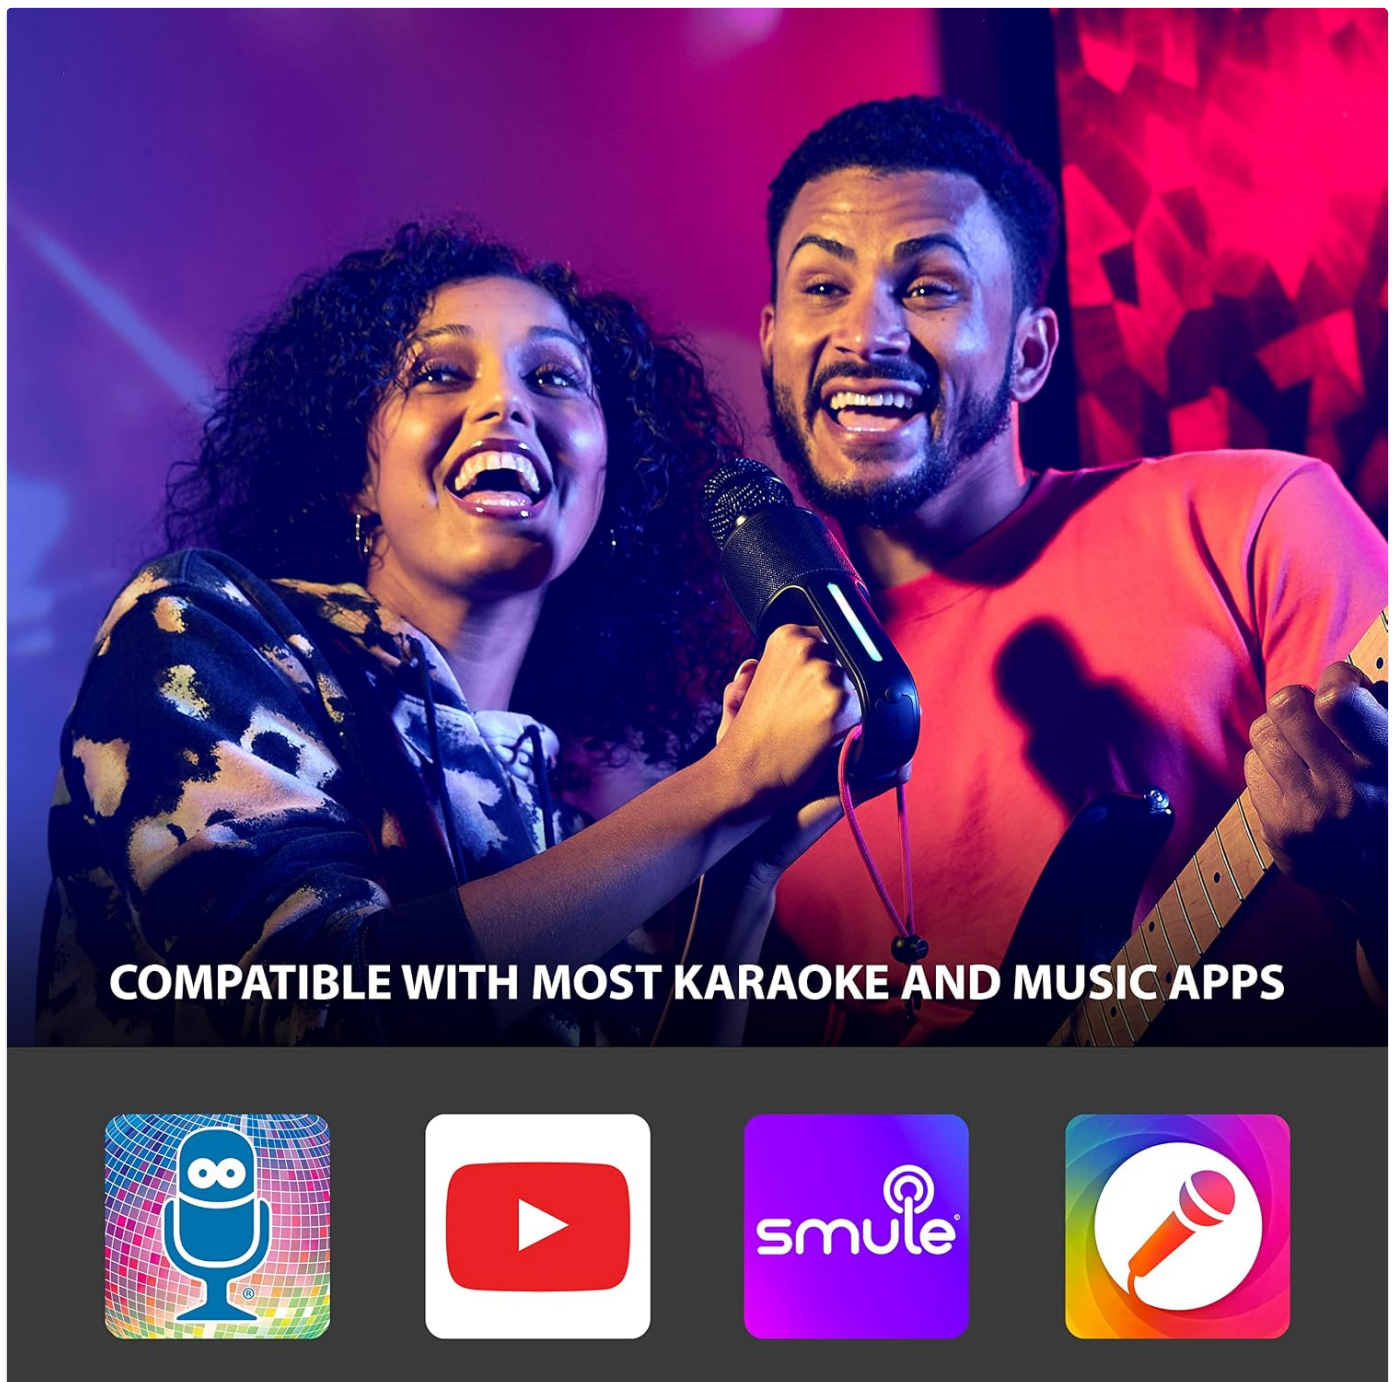


Figure 5.1: Microphone in Use. This image shows individuals enjoying the Move Mic, highlighting its portability and ease of use for karaoke sessions.

5.2 Playing Music

Once paired, open your favorite music or karaoke app (e.g., Spotify, YouTube, Apple Music) on your connected device and start playing a song. The audio will play through the Move Mic's integrated speaker.





Figure 5.2: App Compatibility. The Move Mic is compatible with most popular music and karaoke applications, allowing for versatile use.

5.3 Using Voice Effects

The Move Mic features 22 preset voice effects. Press the **Voice FX button**  repeatedly to cycle through the available effects, such as robot, echo, chipmunk, and more. Experiment to find your favorite!

5.4 LED Lights

The built-in LED ring light flashes and reacts to your voice, enhancing the karaoke experience. Press the **Lights button**  to turn the lights on or off.

5.5 Vocal Cancel Feature

For the first time ever, cancel out a song's lead vocals with the touch of a button! Press the **Vocal Cancel button**  to reduce or remove the original singer's voice from a track, allowing you to sing lead.

6. MAINTENANCE

- Clean the microphone with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.
- To preserve battery life, fully charge the device before storing it for extended periods.

7. TROUBLESHOOTING

Problem	Solution
Microphone does not power on.	Ensure the battery is charged. Connect the microphone to a power source using the USB-C cable.
No sound from the speaker.	Check if the microphone is paired correctly via Bluetooth. Increase the volume on both the microphone and your connected device. Ensure music is playing on your device.
Bluetooth connection fails.	Make sure the microphone is in pairing mode (flashing Bluetooth light). Turn off and on Bluetooth on your device. Try unpairing and re-pairing the device. Ensure no other devices are connected to the microphone.
Voice effects are not working.	Press the Voice FX button to cycle through effects. Ensure the microphone is picking up your voice clearly.

8. SPECIFICATIONS

Feature	Detail
Model Number	SMM575
Item Weight	10.8 ounces
Product Dimensions	3.5 x 1 x 1 inches
Battery Type	1 Lithium Ion (included)

Feature	Detail
Connectivity	Bluetooth, USB Type C
Special Features	3.5mm jack, Portable, LED Lights, 22 Voice FX
Color	Black
Power Source	Battery Powered

9. WARRANTY AND SUPPORT

For warranty information and customer support, please visit the official Singing Machine website or refer to the product packaging. You can also visit the [Singing Machine Store on Amazon](#) for more details and product registration.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question