

[Manuals.plus](#) /

› [Singing Machine](#) /

› Singing Machine SingCast K-Box Video Casting Karaoke Machine with Bluetooth, Party Speaker with Lights with Microphone for Adults and Kids User Manual

Singing Machine SMC273

SingCast K-Box Video Casting Karaoke Machine

Model: SMC273

Brand: Singing Machine

INTRODUCTION

Welcome to the world of interactive entertainment with your new Singing Machine SingCast K-Box. This versatile karaoke machine combines video casting technology, Bluetooth audio streaming, and vibrant LED lights to create an immersive karaoke experience. Designed for ease of use, the SingCast K-Box allows you to project content from the SMC Karaoke App wirelessly to your TV, ensuring everyone can follow along and join the fun. Please read this manual carefully to ensure proper setup and operation of your device.



The Singing Machine SingCast K-Box, showcasing its front panel, display, controls, and integrated microphone holder.

WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- SMC273 SingCast K-Box System
- One wired microphone
- AC adapter
- 1 free month access to Singing Machine karaoke app (details inside)

SETUP GUIDE

1. Power Connection

1. Connect the AC adapter to the DC IN jack on the back of the SingCast K-Box.
2. Plug the AC adapter into a standard wall outlet.
3. Press the **ON/STANDBY** button on the unit to power it on.

2. Microphone Connection

- Insert the plug of the wired microphone into either the MIC 1 or MIC 2 jack on the front of the unit.
- Adjust the **MIC VOLUME** knob to control the microphone's output level.

3. Bluetooth Audio Streaming

1. Press the **FUNCTION** button repeatedly until "BT" appears on the display.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for "SINGING MACHINE".
3. Select "SINGING MACHINE" from the list of available devices to pair. A confirmation tone will sound when connected.
4. You can now stream audio wirelessly from your device to the SingCast K-Box.

4. HDMI Connection & Video Casting

The SingCast K-Box features video casting technology to display content from the SMC Karaoke App on your TV.





The SingCast K-Box can hold a tablet for easy viewing of lyrics, while casting the content to a larger screen.

1. Connect your Singing Machine to your TV via an HDMI cable (not included) to the HDMI port on the back of the unit.
2. Ensure your TV input is set to the corresponding HDMI port.
3. Download and open the SMC Karaoke App on your smartphone or tablet.
4. Scan the QR code displayed on your TV screen (from the SingCast K-Box HDMI output) to connect your app to the machine.
5. Connect your SingCast K-Box to your home Wi-Fi network through the app's instructions.
6. Once connected, you can cast your favorite karaoke videos from the app to your TV.



singing machine®


creating **Joy** through music

singcast technology




CAST KARAOKE VIDEOS TO YOUR TV

HOW TO CAST VIDEOS

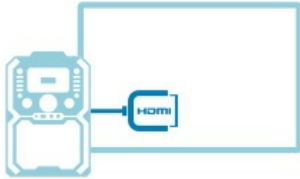

1. Connect your Singing Machine to your TV via HDMI cable

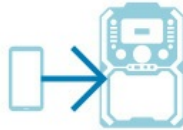

2. Scan QR code on the TV screen to connect to your Singing Machine



3. Connect to your Home WiFi



4. Cast your favorite Karaoke videos to your large screen TV*

Visual guide for connecting and casting karaoke videos to your television.

OPERATING YOUR SINGCAST K-BOX

Controls Overview

- **FUNCTION:** Cycles through input modes (Bluetooth, Line In, USB, HDMI).
- **MASTER VOLUME:** Adjusts the overall sound output level.
- **MIC VOLUME:** Controls the microphone's volume.
- **VOICE EFFECTS:** Applies various vocal effects to your singing.
- **LIGHTS:** Toggles the multi-colored LED lights on/off or changes light modes.
- **VOCALS OFF:** Reduces or removes lead vocals from compatible tracks.
- **RECORD:** Records your performance to a connected USB device.
- **PLAY/PAUSE, STOP, SKIP:** Standard playback controls for USB or app content.

Adjusting Volume and Effects

Use the **MASTER VOLUME** knob to set the desired music volume. Adjust the **MIC VOLUME** knob to balance your voice with the music. Experiment with the **VOICE EFFECTS** knob to add echo or other vocal enhancements.

Using Vocal Off

Press the **VOCALS OFF** button to reduce or eliminate the lead vocals from a song. This feature works best with tracks specifically designed for karaoke or with clear vocal separation.

Recording Your Performance

To record your singing, insert a USB flash drive into the USB port. Press the **RECORD** button to start recording. Press it again to stop. Your performance will be saved to the USB drive.

Light Modes

The SingCast K-Box features multi-colored LED lights that synchronize to the music. Press the **LIGHTS** button to cycle through different light modes or to turn the lights off.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure proper ventilation around the unit to prevent overheating. Do not block any ventilation openings.
- **Water Exposure:** Keep the unit away from water and moisture. Do not operate with wet hands.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC adapter not connected properly; Power outlet not active.	Ensure AC adapter is securely plugged into the unit and a working wall outlet.
No sound	Volume too low; Incorrect input mode selected; Microphone not connected.	Increase MASTER VOLUME and MIC VOLUME. Press FUNCTION to select correct input. Ensure microphone is plugged in.
Bluetooth not connecting	Unit not in Bluetooth mode; Device too far; Already paired to another device.	Press FUNCTION until "BT" appears. Move device closer. Disconnect from other devices and try pairing again.
No video on TV	HDMI cable not connected; TV input incorrect; App not connected to machine.	Ensure HDMI cable is securely connected. Select correct HDMI input on TV. Follow app instructions to connect to the SingCast K-Box.

SPECIFICATIONS

Feature	Detail
Product Dimensions	13.8 x 9.1 x 14.9 inches
Item Weight	6.25 pounds
Model Number	SMC273

Feature	Detail
ASIN	B09XBW3YDM
Color	Black
Special Feature	Echo Effect, Video Casting, Bluetooth Audio Streaming, Multi-colored LED lights, Lead Vocal Off
Connectivity	Bluetooth, HDMI, LINE IN, USB
Microphone Jacks	2 (one microphone included)



Product dimensions for the SingCast K-Box.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official Singing Machine website. You can also visit the [Singing Machine Store on Amazon](#) for more product details and support options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question