

[Manuals.plus](#) /

› [Xtrasaver](#) /

› Xtrasaver XRT136 VIZIO Remote Control User Manual

Xtrasaver XRT136

Xtrasaver XRT136 VIZIO Remote Control User Manual

Model: XRT136

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Xtrasaver XRT136 VIZIO Remote Control. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your remote control.

PRODUCT OVERVIEW

The XRT136 remote control is designed for seamless operation with compatible VIZIO Smart TVs. It features dedicated buttons for popular streaming services and essential TV functions.



Image 1: Front view of the Xtrasaver XRT136 VIZIO Remote Control, showing all buttons including power, input, navigation, volume, channel, and dedicated streaming service keys.

Key Features:

- **Power Button:** Turns the TV on or off.
- **Input Button:** Cycles through available input sources.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **Volume Up/Down:** Adjusts the TV's volume.
- **Channel Up/Down:** Changes TV channels.
- **Back Button:** Returns to the previous screen or menu.
- **Info Button:** Displays program information.
- **Menu Button:** Accesses the TV's main menu.
- **Dedicated Streaming Buttons:** Quick access to VUDU, Netflix, Prime Video, Xumo, Hulu, and iHeart Radio.
- **WatchFree Key:** Direct access to VIZIO's WatchFree+ service.
- **Numeric Keypad:** For direct channel entry and other functions.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

The remote control is ready for use immediately after battery installation; no programming is required for compatible VIZIO TVs.



Image 2: Back view of the XRT136 remote control, illustrating the open battery compartment for AAA battery insertion.

OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control towards your VIZIO Smart TV and press the desired button. The remote operates using infrared (IR) technology, so ensure there are no obstructions between the remote and the TV's IR receiver.

Basic Functions:

- **Power On/Off:** Press the **Power** button once.
- **Changing Inputs:** Press the **Input** button repeatedly to cycle through available video sources (HDMI 1, HDMI 2, etc.).
- **Volume Control:** Use the **VOL +** and **VOL -** buttons.
- **Channel Selection:** Use the **CH +** and **CH -** buttons for sequential channel changes, or the numeric keypad for direct entry.
- **Navigation:** Use the directional arrows (Up, Down, Left, Right) to move through menus and the **OK** button to confirm selections.
- **Accessing Streaming Services:** Press the dedicated buttons for VUDU, Netflix, Prime Video, Xumo, Hulu, or iHeart Radio to launch these applications directly.
- **WatchFree+:** Press the **WatchFree** button to access VIZIO's free streaming service.

COMPATIBILITY

The Xtrasaver XRT136 remote control is compatible with a wide range of VIZIO Smart LED LCD TVs. Below is a list of some compatible models:

- D50x-G9, D65x-G4, D55x-G1, D40f-G9, D43f-F1, D70-F3, V505-G9, D32h-F1, D24h-G9, E70-F3, D43-F1, V705-G3, P75-F1, D55x-G1, V405-G9, E75-F2, D32f-F1, D24f-F1, D43fx-F4, V655-G9, PQ65-F1, V605-G3, V555-G1
- M658-G1, M657-G0f, M557-G0, V435-G0, D50f-F1, M55-F0, M70-F3, M558-G1, P659-G1, M507-G1, D32h-G9, PX65-G1, V556-G1, V436-G1, D55-F2f, D50-F1, PX75-G1, D40f-F1, M65-F0, D55-F2, P759-G1
- V755-G4, D24f-G1, D32f-G1, V585-G1, M656-G4, M556-G4

This list is not exhaustive. If your VIZIO Smart TV model is not listed, the remote may still be compatible. Refer to your TV's user manual or contact VIZIO support for confirmation.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environmental Conditions:** Avoid exposing the remote to extreme temperatures, direct sunlight, or high humidity.

TROUBLESHOOTING

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"> • Ensure batteries are inserted correctly with correct polarity. • Replace old batteries with new AAA batteries. • Check for any obstructions between the remote and the TV's IR sensor. • Ensure you are within the effective range of the TV's IR sensor.
Specific buttons are not working.	<ul style="list-style-type: none"> • Clean the remote control, especially around the unresponsive buttons, to remove any debris. • Ensure the remote is compatible with your specific VIZIO TV model.
TV is not responding to streaming service buttons.	<ul style="list-style-type: none"> • Ensure your VIZIO Smart TV is connected to the internet. • Verify that the streaming applications are installed and updated on your TV.

SPECIFICATIONS

- **Model:** XRT136
- **Brand:** Xtrasaver
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** VIZIO Televisions
- **Power Source:** 2 x AAA Batteries (not included)
- **Item Weight:** 2.08 ounces (approximately 59 grams)
- **Dimensions:** 6.69 x 1.77 x 0.67 inches (approximately 17 x 4.5 x 1.7 cm)
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the seller directly. Specific warranty terms may vary.

For additional assistance with your VIZIO TV, please visit the official VIZIO support website or consult your TV's user manual.