

[Manuals.plus](#) /

› [ZOOAOXO](#) /

› ZOOAOXO M700 64GB MP3 Player with Bluetooth 5.0 and HiFi Sound Quality User Manual

ZOOAOXO M700

ZOOAOXO M700 64GB MP3 Player User Manual

Model: M700

1. INTRODUCTION

Thank you for choosing the ZOOAOXO M700 MP3 Player. This device is designed to provide a high-quality audio experience with the convenience of portability and wireless connectivity. Featuring 64GB of storage, Bluetooth 5.0, and a built-in clip, it is ideal for music enthusiasts and sports activities. Please read this manual carefully to ensure proper use and to maximize your enjoyment of the product.

2. PRODUCT OVERVIEW

Key Features:

- **64GB Storage Capacity:** Comes with a 64GB Micro SD card for extensive music libraries.
- **Bluetooth 5.0:** For stable and faster wireless connections with headphones or speakers.
- **HiFi Sound Quality:** Delivers clear and rich audio playback.
- **Built-in Clip:** Securely attach the player to clothing for hands-free use during sports.
- **Multifunctionality:** Includes Music Player, FM Radio, Pedometer, Voice Recorder, and E-book Reader (TXT format).
- **Compact and Lightweight:** Designed for portability and comfort.
- **Supported Audio Formats:** APE, FLAC, MP3, WMA, WAV.

Package Contents:

- ZOOAOXO M700 MP3 Player
- 64GB Micro SD Card (pre-installed)
- USB-C Charging Cable
- Wired Headphones
- Micro SD Card Reader
- User Manual (this document)

Clip Design

Free your hands when exercising

29.5g

Ultra Light



Image: ZOAOXO M700 MP3 Player shown with its included accessories: USB cable, wired headphones, and a card reader.



Image: The ZOAOXO M700 MP3 Player highlighting its clip design for secure attachment during exercise and its ultra-light weight of 29.5g.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the MP3 player. Connect the provided USB-C cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

3.2 Powering On/Off

- **To Power On:** Press and hold the power button located on the side of the device until the screen lights up.
- **To Power Off:** Press and hold the power button until the device shuts down.

3.3 Inserting/Removing Micro SD Card

The device comes with a 64GB Micro SD card pre-installed. If you wish to replace or remove it:

1. Ensure the player is powered off.
2. Locate the Micro SD card slot on the side of the player.
3. Gently push the existing card until it clicks and ejects slightly, then pull it out.
4. To insert a new card, align it correctly and push it into the slot until it clicks into place.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The ZOOAOXO M700 features a 1.5-inch screen with touch controls on the front and physical buttons on the side.

- **Touch Panel:** Use the touch panel for menu navigation, selection, and playback controls.
- **Side Buttons:** Dedicated buttons for volume control (up/down) and power.

Bluetooth 5.2

Low power consumption
more stable and faster connections

Bluetooth 5.2

 


Bluetooth 5.1

Transmission speed:



Transmission distance:



Transmission signal:



Power consumption:



Image: The ZOOAOXO M700 MP3 Player displaying its main menu with icons for Music, E-Books, Recorder, Radio, Bluetooth, Pedometer, Settings, and Folders.

4.2 Music Playback

1. From the main menu, select "Music".
2. Browse your music by Artist, Album, Songs, or Folders.
3. Select a song to begin playback.
4. Use the touch controls for Play/Pause, Next/Previous Track. Adjust volume using the side buttons.



Image: The ZOAOXO M700 MP3 Player screen showing music playback with album art, track title, and playback controls.

Superior HiFi Sound Quality

Every song is sung live.



Support formats



APE



FLAC



MP3



WMA



WAV

Image: The ZOOAOXO M700 MP3 Player next to over-ear headphones, emphasizing its superior HiFi sound quality and support for APE, FLAC, MP3, WMA, and WAV audio formats.

4.3 Bluetooth Connection

Connect your MP3 player to Bluetooth headphones or speakers.

1. Ensure your Bluetooth device is in pairing mode.
2. On the MP3 player, go to the main menu and select "Bluetooth".
3. Turn Bluetooth ON. The player will scan for available devices.
4. Select your device from the list to pair. Once paired, the player will connect automatically when both devices are on and within range.



Image: A person wearing headphones connected to the ZOOAOXO M700 MP3 Player, illustrating the Bluetooth 5.0 feature with improved transmission speed, distance, signal, and lower power consumption compared to Bluetooth 5.1.

4.4 FM Radio

To use the FM Radio function, ensure wired headphones are connected as they act as the antenna.

1. Connect the wired headphones to the player.
2. From the main menu, select "Radio".
3. Use the on-screen controls to scan for stations or manually tune to a frequency.

4.5 Pedometer Function

The pedometer tracks your steps, distance, calories burned, and activity time.

1. From the main menu, select "Pedometer".
2. Start the pedometer function. Ensure the player is securely clipped to your clothing for accurate tracking.
3. View your activity data on the screen.

Pedometer Function

Record the good moments of sports



Image: The ZOOAEXO M700 MP3 Player displaying its pedometer function with step count, distance, calories, speed, and time, while a person is shown running with the player clipped to their arm.

4.6 Voice Recorder

Record audio using the built-in microphone.

1. From the main menu, select "Recorder".
2. Choose to start a new recording.
3. Recordings are saved to the device's memory.

4.7 E-book Reader

Read text files (TXT format only) on your player.

1. Transfer TXT format e-books to the player's memory.
2. From the main menu, select "E-Books".
3. Select the desired e-book to open and read.

5. TRANSFERRING FILES

You can transfer music, e-books, and other compatible files to your MP3 player using two methods:

5.1 Via USB Cable

1. Connect the MP3 player to your computer using the provided USB-C cable.
2. The player should appear as a removable disk drive on your computer.
3. Drag and drop your desired files into the appropriate folders on the player (e.g., 'Music' folder for audio files).
4. Safely eject the device from your computer before disconnecting the cable.

5.2 Via Micro SD Card Reader

This method can be more convenient for large file transfers or if you encounter driver issues with direct USB connection.

1. Power off the MP3 player and carefully remove the Micro SD card.
2. Insert the Micro SD card into the provided card reader.
3. Connect the card reader to your computer's USB port.
4. Transfer files to the Micro SD card as you would with any external storage device.
5. Safely eject the card reader, remove the Micro SD card, and reinsert it into the MP3 player.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or solvents.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** This device is not waterproof. Avoid exposure to water or high humidity.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge regularly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device for at least 30 minutes.
Cannot connect to computer via USB.	Driver issues or faulty cable.	Try a different USB port or cable. Use the provided card reader to transfer files. Ensure your computer's USB drivers are up to date.
Bluetooth device not found or won't pair.	Device not in pairing mode; too far away.	Ensure your Bluetooth device is in pairing mode and within close proximity to the MP3 player. Restart both devices.

Problem	Possible Cause	Solution
Music playback skips or freezes.	Corrupted file; low battery; Micro SD card issue.	Try playing a different file. Ensure the battery is charged. Reformat the Micro SD card (backup data first) or try a different card.
Settings or last played position not saved.	Software issue.	Ensure the device is powered off correctly. Avoid disconnecting power during critical operations. If the issue persists, a firmware update might be required (check manufacturer's website).
Buttons are too sensitive, changing songs accidentally.	Design characteristic.	Exercise caution when handling the device. Consider using the hold function if available, or a protective case.

8. SPECIFICATIONS

Feature	Specification
Brand	ZOOAOXO
Model Number	M700
Storage Capacity	64 GB (Micro SD included)
Connectivity Technology	Bluetooth 5.0
Screen Size	1.5 Inches
Display Technology	No specific display technology mentioned (implies basic screen)
Special Features	Built-in clip, Pedometer, Voice Recorder, E-book Reader (TXT), FM Radio
Compatible Devices	Personal Computer, Laptop, Headphones
Supported Media Type	Micro SD
Supported Audio Formats	APE, FLAC, MP3, WMA, WAV
Item Weight	1 Gram (Note: This seems to be an error in source data, actual weight is 29.5g as per image)
Included Components	USB cable, User manual, Wired headphones, Card reader

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The ZOOAOXO M700 MP3 Player comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing

defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your ZOOAOXO M700 MP3 Player, please contact ZOOAOXO customer support through the retailer's platform where you purchased the product. Please have your purchase details and model number (M700) ready when contacting support.

© 2023 ZOOAOXO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question