



Manuals.plus /

- › Rodzon /
- › Rodzon Interactive Dance Mat for Kids - Instruction Manual

Rodzon AML9886

Rodzon Interactive Dance Mat for Kids - Instruction Manual

Model: AML9886

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Rodzon Interactive Dance Mat. Please read this manual thoroughly before operating the product and retain it for future reference.



Image: The Rodzon Interactive Dance Mat in use, showing a child dancing on the purple mat with musical notes and fairy motifs. The product box is visible in the background.

IMPORTANT SAFETY INFORMATION

- Ensure the dance mat is placed on a flat, non-slip surface to prevent falls.
- Adult supervision is recommended, especially for younger children.
- Do not expose the mat to direct sunlight or extreme temperatures.
- Keep away from water and moisture. The mat is waterproof but the control unit is not.
- Use only the specified battery type (3x AA batteries, not included).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product will not be used for an extended period.
- This product is suitable for children aged 3 years and above.

PACKAGE CONTENTS

Verify that all components are present in the package:

- 1x Rodzon Interactive Dance Mat (Model AML9886)
- Instruction Manual (this document)

SETUP

1. Battery Installation


1. Locate the battery compartment on the control unit.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3x AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover and secure it with the screw.



Image: Close-up of the Rodzon Dance Mat's control unit, highlighting the battery compartment which requires 3x AA batteries (not included).

2. Mat Placement

Unfold the dance mat and place it on a flat, dry, and stable surface. Ensure there is enough clear space around the mat for safe movement.

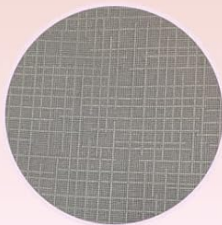

Anti-slip



Score & level display



9 Demos & 9 Built-in Music

Image: A family playing on the Rodzon Dance Mat in a living room, demonstrating proper mat placement and usage.

OPERATING INSTRUCTIONS

Control Unit Overview



Image: Detailed diagram of the dance mat's control panel, indicating the location of the speaker, LED rhythm light, ON/OFF switch, volume controls, level/score display, and the Start/Mode button.

- **ON/OFF Switch:** Located on the control unit to power the mat on or off.
- **Volume Controls (+/-):** Adjust the sound level.

- **Level/Score Display:** Shows current level or score.
- **LED Rhythm Light:** Illuminates according to the music or game mode.
- **Start/Mode Button:** Press to start a game or switch between modes.

Game Modes

The Rodzon Dance Mat features three distinct game modes:

1. Challenge Mode (Mode 1):

This mode includes five levels. Indicators will light up on the mat, and the user must touch or press the corresponding pattern. The LED counter displays the score. Round 1: 1 light; Round 2: 1 light flashes quickly; Round 3: 1 to 2 lights; Round 4: 1 to 3 lights; Round 5: 1 to 4 lights.

2. Piano Mode (Mode 2):

Press the START button for 3 seconds to enter this mode. The nine patterns on the mat correspond to nine different musical notes. Children can create their own songs by stepping on the patterns.

3. Free Dance Mode (Mode 3):

Press the START button to access this mode. It features nine built-in songs. Children can dance freely to the rhythm of the music.



Tapis de danse amélioré

Avec Multifonction - vous en achetez un, vous avez tous les avantages 



1 Tapis Pinao amélioré
9 Notes



2 Tapis de défi amélioré
5 Niveaux



3 Tapis de danse libre amélioré
9 Chansons





Image: Visual representation of the three interactive game modes available on the Rodzon Dance Mat, detailing how each mode functions.

MAINTENANCE

- **Cleaning:** The dance mat is waterproof and easy to clean. Wipe the surface with a damp cloth. Do not immerse the control unit in water.
- **Storage:** The mat is foldable for easy storage. Fold it neatly and store it in a dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the product is not used for extended periods to prevent leakage.

Rodzon Dance Mat

Enjoy parent-child time



Image: The Rodzon Dance Mat shown folded, demonstrating its compact design for easy storage and portability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mat does not turn on.	No batteries or incorrect battery installation.	Ensure 3x AA batteries are correctly inserted with proper polarity. Replace old batteries.
No sound or low sound.	Volume is too low or muted.	Adjust the volume using the '+' button on the control unit.
Mat not responding to touch.	Mat is not flat or connection issue.	Ensure the mat is completely flat. Check for any visible damage to the mat surface.

SPECIFICATIONS

Model: AML9886

Dimensions: 93 x 89 x 0.2 cm (approximately 36.6 x 35 x 0.08 inches)

Weight: 721 grams (approximately 1.59 lbs)

Recommended Age: 3 years and up

Educational Value: Hand-foot coordination

Power Source: 3x AA batteries (not included)

Main Material: Acrylonitrile Butadiene Styrene (ABS)

Color: Purple



Image: Diagram showing the physical dimensions of the Rodzon Dance Mat and its packaging.

For warranty information or technical support, please refer to the retailer where the product was purchased or visit the official Rodzon website. Please have your model number (AML9886) and purchase date available when contacting support.

Note: Information regarding spare parts availability is not provided by the manufacturer.

