



[Manuals.plus](#) /

> [Corbero](#) /

> Corberó CLVV8622INVW Dishwasher Instruction Manual

Corbero CLVV8622INVW

Corberó CLVV8622INVW Dishwasher Instruction Manual

Model: CLVV8622INVW | Brand: Corberó

1. INTRODUCTION

Thank you for choosing the Corberó CLVV8622INVW Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before using the dishwasher and keep them for future reference.

The Corberó CLVV8622INVW is a freestanding dishwasher designed for modern households, offering a capacity of 15 place settings, 8 wash programs, and 6 temperature options. Key features include an LED display, Turbo Fan Drying, Delayed Start, Half Load function, and an Auto Door opening system for enhanced drying.

2. SAFETY INFORMATION

General Safety:

- Ensure the dishwasher is properly grounded before use.
- Do not operate the dishwasher if it is damaged or malfunctioning. Contact qualified service personnel.
- Keep children and pets away from the dishwasher, especially when it is operating or when the door is open.
- Sharp items should be loaded with points and handles down to prevent injury.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Never open the door during a wash cycle, as hot water and steam may escape.

Electrical Safety:

- The appliance must be connected to a power supply that matches the specifications on the rating plate.
- Do not use extension cords or multiple adapters.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. PRODUCT OVERVIEW

The Corberó CLVV8622INVW dishwasher is designed for efficiency and convenience. It features a durable stainless

steel interior and a white lacquered exterior.

Key Features:

- **Capacity:** 15 Place Settings
- **Programs:** 8 wash programs
- **Temperatures:** 6 temperature settings
- **Drying System:** Turbo Fan Drying and Auto Door opening
- **Control:** Push-button controls with LED Display
- **Special Functions:** Delayed Start, Half Load
- **Noise Level:** 42 Decibels
- **Material:** Stainless steel interior, Lacquered exterior

Components:

The dishwasher includes upper and lower racks, a third cutlery tray, spray arms, a detergent dispenser, and a rinse aid dispenser.

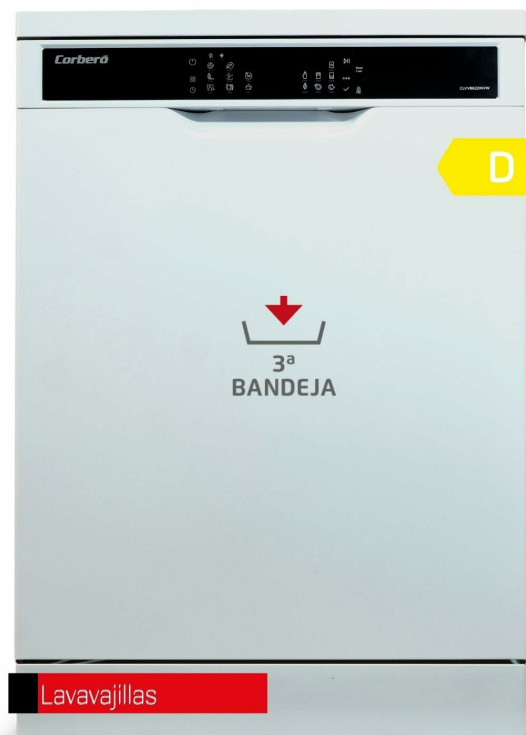


Figure 3.1: Front view of the Corberó CLVV8622INVW white dishwasher.




3^a
BANDEJA

Corberó

Figure 3.2: Interior view of the dishwasher, illustrating the arrangement of the racks and the cutlery basket.



- 3ª bandeja
- Cesta regulable en altura con carga
- Turbo secado

Corberó

Figure 3.3: Detailed view of the third cutlery tray, designed for additional utensil capacity.

4. SETUP AND INSTALLATION

The Corberó CLVV8622INVW is a freestanding dishwasher. Proper installation is crucial for its performance and safety.

Unpacking:

- Carefully remove all packaging materials.
- Inspect the dishwasher for any transport damage. Report any damage immediately to your retailer.

Placement:

- Place the dishwasher on a level, stable floor surface.
- Ensure there is adequate space for ventilation around the appliance.
- Dimensions: 60cm (depth) x 60cm (width) x 84.5cm (height).

Water Connection:

- Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa.
- Connect the drain hose to a suitable drain pipe, ensuring it is securely fastened and free from kinks.

Electrical Connection:

- Connect the dishwasher to a dedicated 220 Volt, 50 Hz power outlet.
- Ensure the electrical connection is made by a qualified electrician if necessary.




ENERG



CORBERO

CLVV8622INVW




86 kWh /  100



15 x



9,0 L

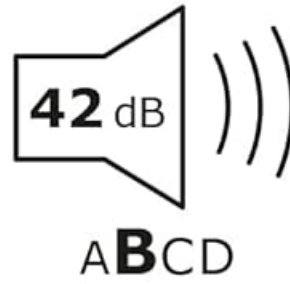

2019/2017

Figure 4.1: The Corberó CLVV8622INVW dishwasher seamlessly integrated into a kitchen environment.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and available programs for optimal washing results.



Figure 5.1: The control panel of the dishwasher, featuring an LED display and various program selection buttons.

Loading the Dishwasher:

- Scrape off large food particles from dishes.
- Load dishes securely to prevent movement during the wash cycle.
- Place glasses and delicate items in the upper rack.
- Place larger and heavily soiled items in the lower rack.
- Utilize the third cutlery tray for forks, knives, and spoons.

Adding Detergent and Rinse Aid:



Figure 5.2: The combined detergent and rinse aid dispenser located on the inner door of the dishwasher.

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid indicator and refill the rinse aid dispenser as needed.

Selecting a Program:

The dishwasher offers 8 programs and 6 temperature settings. Refer to the control panel for program selection. Common programs include:

- **Intensive:** For heavily soiled dishes and pots.

- **Eco:** Energy-efficient program for normally soiled dishes.
- **Quick:** For lightly soiled dishes that need a fast wash.
- **Glass:** Gentle wash for delicate glassware.

Special Functions:

- **Delayed Start:** Allows you to postpone the start of a wash cycle.
- **Half Load:** Reduces water and energy consumption when washing fewer dishes.
- **Auto Door:** The dishwasher door automatically opens at the end of the cycle to facilitate drying and save energy.
- **Turbo Fan Drying:** Enhances drying performance, especially for plastic items.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

Cleaning the Filters:

- The filter system should be cleaned regularly to prevent blockages and ensure efficient washing.
- Remove the coarse filter, fine filter, and microfilter. Rinse them under running water to remove food particles.
- Reassemble the filters correctly after cleaning.

Cleaning the Spray Arms:

- Periodically check the spray arm nozzles for blockages.
- Remove any debris using a thin object like a toothpick.

Exterior and Interior Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- Clean the interior with a dishwasher cleaner or a mixture of vinegar and water to remove limescale and odors.
- Inspect racks for wear and tear, especially for signs of rust or damage to the coating.

7. TROUBLESHOOTING

Before contacting customer service, try these simple troubleshooting steps for common issues:

- **Dishwasher does not start:** Check if the power cord is plugged in, the door is fully closed, and the circuit breaker has not tripped.
- **Dishes are not clean:** Ensure spray arms are not blocked, filters are clean, and detergent dispenser is filled correctly. Check water pressure.
- **Water not draining:** Check if the drain hose is kinked or blocked. Clean the filters.
- **Excessive noise:** Ensure dishes are loaded correctly and not obstructing spray arms. Check for foreign objects in the pump area.
- **White spots on dishes:** This may indicate hard water. Check rinse aid level and consider using dishwasher salt if your model supports it.

If the problem persists after performing these checks, please contact Corberó customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	CLVV8622INVW
Type	Freestanding Dishwasher
Capacity	15 Place Settings
Number of Programs	8
Number of Temperatures	6
Drying System	Turbo Fan Drying, Auto Door
Control Type	Push Button with LED Display
Noise Level	42 dB
Dimensions (D x W x H)	60 cm x 60 cm x 84.5 cm
Weight	48 kg
Voltage	220 Volts
Frequency	50 Hz
Material (Interior)	Stainless Steel
Color	White
Special Features	Automatic Temperature Control, Half Load

Energy Label Information:



Figure 8.1: Energy efficiency label for the Corberó CLVV8622INVW dishwasher, indicating its energy class and consumption details. For detailed energy information, please refer to the official EU EPREL database: <https://eprel.ec.europa.eu/qr/1075142>

9. WARRANTY AND SUPPORT

Warranty:

This Corberó dishwasher comes with a **three-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims.

Spare Parts Availability:

Spare parts for this model are available for a duration of **10 years** within the EU, ensuring long-term support for your appliance.

Customer Support:

For technical assistance, service requests, or further information, please contact Corberó customer support or visit the official Corberó website. You can also visit the Corberó brand store on Amazon for product information: [Corberó Brand Store](#).