

Corbero CMICM5020GW

Corbero CMICM5020GW Microwave Oven User Manual

Model: CMICM5020GW | Brand: Corbero

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your Corbero CMICM5020GW Microwave Oven. Please read this manual thoroughly before using the appliance and retain it for future reference.



Figure 1: Corbero CMICM5020GW Microwave Oven, showcasing its compact white design.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.

- Do not operate the oven if the cord or plug is damaged, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- This appliance is designed for heating food and beverages. Drying of clothes and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- The microwave oven is intended for freestanding installation.

SETUP AND INSTALLATION

The Corbero CMICM5020GW microwave oven is designed for freestanding use. Follow these steps for proper setup:

1. **Unpacking:** Carefully remove all packaging materials and accessories. Inspect the oven for any damage such as dents or a broken door. Do not install if damaged.
2. **Placement:** Place the microwave on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in it. Ensure adequate ventilation space around the unit (at least 10 cm at the back, 5 cm on each side, and 20 cm above).
3. **Power Connection:** Plug the power cord into a standard grounded electrical outlet. Ensure the voltage and frequency match the specifications of the appliance.
4. **Turntable Assembly:** Place the turntable ring inside the oven cavity. Position the glass turntable plate securely on top of the turntable ring. Ensure it rotates freely.



Corbero

- Plato giratorio de 255 mm Ø
- Color Blanco
- Alarma fin de cocción

Figure 2: Proper placement of the 255mm turntable inside the microwave cavity.

OPERATING INSTRUCTIONS

Your Corbero CMICM5020GW microwave features mechanical controls for easy operation. It offers various functions including microwave cooking, grilling, and defrosting.



Figure 3: Mechanical control panel for setting time and defrost weight.

Microwave Cooking

The microwave operates at 700W power. Use the upper dial to select the desired power level (Low, Medium-Low, Medium, Medium-High, High). Use the lower dial to set the cooking time, up to 35 minutes.

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door securely.
3. Turn the upper dial to select the desired power level.
4. Turn the lower dial to set the cooking time. The oven will start automatically.
5. A cooking alarm will sound when the set time has elapsed.



- 20 litros de capacidad
- 700 W de potencia máxima
- 1000 W de potencia de grill

Figure 4: Placing food inside the 20-liter capacity microwave.

Grill Function

The grill function allows you to brown and crisp food. The superior electric resistance provides golden and crispy results.

1. Place food on the grill rack (if included) or a suitable heat-resistant dish.
2. Close the oven door.
3. Turn the upper dial to the "Grill" setting.
4. Turn the lower dial to set the grilling time.
5. Monitor food closely to prevent over-browning.



Figure 5: The microwave in a kitchen setting, indicating the grill function.

Defrost Function

The quick defrost function allows for even and fast thawing while preserving the original taste of your food.

1. Place the frozen food directly on the glass turntable.
2. Close the oven door.
3. Turn the upper dial to the "Defrost" setting.
4. Turn the lower dial to select the defrost time or weight (e.g., 0.2kg, 0.4kg, 0.6kg, 0.8kg, 1.0kg).
5. The oven will automatically adjust the power for defrosting.



Figure 6: The microwave on a countertop, indicating the defrost function.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Cleaning the Exterior:** Wipe the exterior with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Cleaning the Interior:** For spills and splatters, wipe the interior with a damp cloth immediately. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue, then wipe clean.
- **Turntable:** The glass turntable and turntable ring can be removed and washed in warm soapy water or a dishwasher.
- **Odor Removal:** To remove odors from the oven, combine a cup of water with the juice and skin of one lemon in a deep microwaveable bowl. Microwave for 5 minutes. Wipe the interior thoroughly with a soft cloth.
- Always unplug the appliance before cleaning.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse/circuit breaker.
Food not cooking evenly	Food not stirred or turned; Incorrect power level or cooking time.	Stir or turn food halfway through cooking; Adjust power level and time as needed.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Turntable not rotating	Turntable not properly seated; Debris under turntable.	Ensure turntable is correctly placed on the ring; Clean under the turntable.

SPECIFICATIONS

Detailed technical specifications for the Corbero CMICM5020GW Microwave Oven:

Feature	Detail
Brand	Corbero
Model Number	CMICM5020GW
Capacity	20 Liters
Microwave Power	700 Watts
Grill Power	1000 Watts
Control Type	Mechanical
Max Timer	35 Minutes
Turntable Diameter	255 mm
Color	White/Inox
Product Dimensions (D x W x H)	35 x 44 x 25.9 cm
Weight	10.8 kg
Installation Type	Freestanding



Figure 7: Product dimensions for installation planning.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Corbero website. Keep your proof of purchase for any warranty claims.

Manufacturer: Corbero

Model: CMICM5020GW

ASIN: B09XDY2T5B

For further assistance, please contact Corbero customer service.

Corbero CMICM5020GW Microwave Oven User Manual | © 2024 Corbero. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question