

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LIVINGTON](#) /

› [LIVINGTON MagiCut 6-in-1 Food Chopper Instruction Manual Model M28935](#)

LIVINGTON M28935

LIVINGTON MagiCut 6-in-1 Food Chopper Instruction Manual

Model: M28935

INTRODUCTION

Thank you for choosing the LIVINGTON MagiCut 6-in-1 Food Chopper. This versatile kitchen appliance is designed to simplify your food preparation tasks, offering functions such as chopping, mixing, slicing, grating, beating, and blending. With its powerful motor and sharp blades, you can achieve perfect results in seconds. Please read this instruction manual carefully before first use to ensure safe operation and optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before use.
- Keep the appliance and its cord out of reach of children.
- Do not immerse the motor unit in water or other liquids.
- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- Avoid contact with moving parts, especially the sharp blades. Always handle blades with extreme care.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments and accessories recommended by the manufacturer.
- Ensure the lid is securely locked in place before operating the chopper.
- Do not process hot liquids to avoid splashing and scalding.
- Never use your fingers or other utensils to push food into the processing bowl while the appliance is operating. Always use the provided pusher if necessary.
- This appliance is for household use only.

PACKAGE CONTENTS

Upon unpacking, please ensure all items listed below are present and in good condition:

- 1 x LIVINGTON MagiCut Motor Unit
- 1 x Collection Container (1000 ml capacity)
- 1 x Storage Lid
- 1 x 4-Blade Insert for 1000 ml container
- 1 x Extra Knife for the blade insert (likely referring to an additional blade layer or type)
- 1 x Beater Insert
- 1 x Blender Attachment

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Before first use, wash the collection container, storage lid, blade inserts, beater insert, and blender attachment in warm soapy water. Rinse thoroughly and dry. The motor unit should only be wiped with a damp cloth.
3. **Assemble:**
 - Place the collection container on a stable, flat surface.
 - Carefully place the desired blade insert or beater/blender attachment onto the central pin inside the container. Ensure it sits firmly.
 - Add your ingredients to the container. Do not overfill.
 - Place the motor unit onto the container, aligning the tabs and twisting gently until it locks securely into place.
4. **Connect:** Plug the power cord into a suitable electrical outlet.



Image: The LIVINGTON MagiCut 6-in-1 Food Chopper ready for use with various ingredients like parsley, onion, cream, and walnuts, demonstrating its versatility.

OPERATING INSTRUCTIONS

The LIVINGTON MagiCut is designed for simple one-hand operation. Follow these steps for various food preparation tasks:

- Preparation:** Ensure the appliance is correctly assembled with the appropriate attachment for your task (blade for chopping/grating, beater for whipping, blender for smoothies).
- Add Ingredients:** Place your ingredients into the collection container. For best results, cut larger items into smaller pieces before processing. Do not exceed the maximum fill line.
- Secure Lid:** Ensure the motor unit is securely attached and locked onto the container.
- Operate:** Press down on the top of the motor unit to activate the blades. The processing speed and fineness depend on the duration and number of presses. For coarse chopping, use 1-3 short pulses. For finer results, hold down for a longer duration or use more pulses. The powerful 300-watt motor and 4200 RPM ensure quick processing.

5. **Monitor:** Observe the consistency of your ingredients through the transparent container. Release pressure on the motor unit to stop operation.
6. **Unplug and Disassemble:** Once finished, unplug the appliance. Carefully remove the motor unit, then the blade or attachment, and finally the processed food.

Specific Functions:

- **Chopping/Grating:** Use the 4-blade insert for nuts, fruits, vegetables, meats, herbs, or ice cubes. The sharp Quattro Cut blades ensure efficient processing.
- **Whipping:** Attach the beater insert to prepare whipped cream or stiff egg whites for desserts and baking.
- **Blending:** Use the blender attachment for creamy frappes, juices, velvety sauces, dressings, and milkshakes.



Image: A hand pressing down on the top of the LIVINGTON MagiCut motor unit, demonstrating the simple one-hand operation for chopping ingredients.



Image: The LIVINGTON MagiCut in action, processing nuts into a fine consistency, alongside a finished dish garnished with the chopped nuts.



Image: The LIVINGTON MagiCut containing whipped cream, illustrating its capability to prepare aerated cream for various recipes.



Image: The LIVINGTON MagiCut blending fruit into a smooth mixture, shown next to a dessert topped with blended fruit and blueberries.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your LIVINGTON MagiCut Food Chopper.

- **Always Unplug:** Before cleaning, ensure the appliance is unplugged from the power outlet.
- **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Do not immerse it in water or any other liquid.
- **Removable Parts:** The collection container, storage lid, blade inserts, beater insert, and blender attachment are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water.
- **Blades:** Handle the blades with extreme care during cleaning as they are very sharp. Use a brush to remove food residue if necessary.
- **Drying:** Ensure all parts are completely dry before reassembling or storing the appliance.
- **Storage:** Store the appliance in a cool, dry place, out of reach of children.

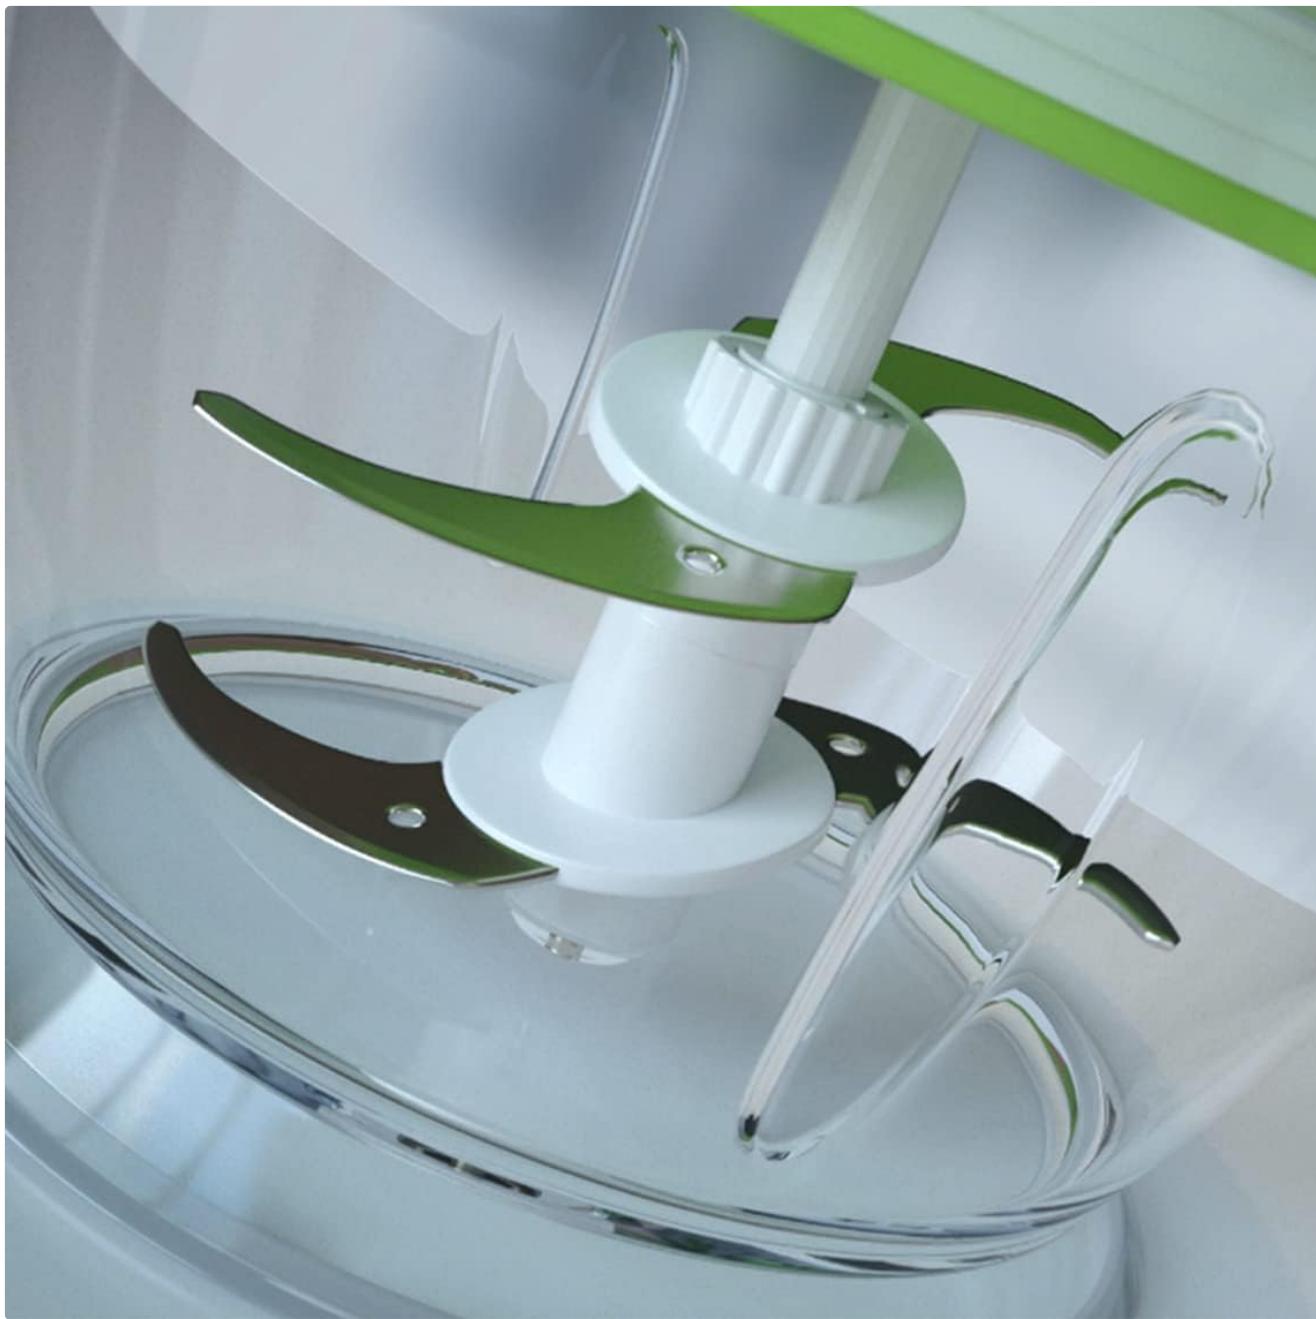


Image: A close-up view of the sharp Quattro Cut blades inside the LIVINGTON MagiCut container, highlighting the cutting mechanism.

TROUBLESHOOTING

If you encounter any issues with your LIVINGTON MagiCut, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|--------------------------------------|---|---|
| Appliance does not turn on. | Not plugged in; lid not properly secured; power outage. | Ensure the power cord is securely plugged into a working outlet. Check that the motor unit is correctly locked onto the container. Verify power supply. |
| Blades are not chopping effectively. | Container overfilled; ingredients too large; blades dull or obstructed. | Reduce the amount of ingredients. Cut larger ingredients into smaller pieces. Check for any obstructions around the blades. If blades are dull, consider replacement. |

| Problem | Possible Cause | Solution |
|---|---|---|
| Lid does not fit properly. | Misalignment; food obstruction. | Ensure the container rim and motor unit base are clean and free of food particles. Align the motor unit carefully with the container tabs before twisting to lock. |
| Unusual noise or odor during operation. | Overloading; foreign object; motor issue. | Immediately stop operation and unplug the appliance. Reduce the load. Check for any foreign objects. If the issue persists, discontinue use and contact customer support. |

SPECIFICATIONS

| Feature | Detail |
|---------------------|---|
| Brand | LIVINGTON |
| Model Number | M28935 |
| Color | White |
| Product Dimensions | 18 x 18 x 21.5 cm |
| Item Weight | 1.02 Kilograms |
| Power / Wattage | 300 Watts |
| Material | Plastic |
| Number of Speeds | 1 |
| Special Features | Ice Crushing |
| Recommended Uses | Mincer, Grater, Chopper |
| Care Instructions | Easy to clean - container and all removable parts are dishwasher safe |
| Included Components | Lid |

WARRANTY AND SUPPORT

Your LIVINGTON MagiCut 6-in-1 Food Chopper is manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included in your product packaging or contact the retailer where you purchased the product.

For technical support, troubleshooting assistance beyond this manual, or inquiries about replacement parts, please contact LIVINGTON customer service through their official website or the contact information provided with your purchase documentation.

