



[Manuals.plus](#) /

> [Generico](#) /

> Generico Metal Bobbins Instruction Manual for Singer and Seiko Sewing Machines

Generico Singer 306M, 306, 319, 20U; Seiko 691R, 809R, 829R, 850R, 3800 Compatible Bobbins

Generico Metal Bobbins Instruction Manual

For Singer 306M, 306, 319, 20U and Seiko 691R, 809R, 829R, 850R, 3800 Sewing Machines

1. INTRODUCTION

This manual provides essential instructions for the proper use, installation, and maintenance of your Generico metal bobbins. These bobbins are designed for compatibility with specific Singer and Seiko sewing machine models, ensuring smooth and consistent stitching performance. Please read this manual thoroughly before use to ensure optimal results and prolong the life of your bobbins and sewing machine.

2. PRODUCT OVERVIEW

The Generico metal bobbins are precision-engineered accessories for your sewing machine. Each pack contains 10 durable metal bobbins, crafted to meet the specifications required for the listed compatible models. Using the correct bobbin type is crucial for maintaining proper thread tension and preventing machine damage.



Figure 1: Generico Metal Bobbins (10 pieces)

This image displays the set of ten metal bobbins, highlighting their metallic finish and uniform size, ready for use in compatible sewing machines.

3. COMPATIBILITY

These Generico metal bobbins are specifically designed for the following sewing machine models:

- **Singer:** 306M, 306, 319, 20U
- **Seiko:** 691R, 809R, 829R, 850R, 3800

Using these bobbins with non-listed models may result in improper function, thread jams, or damage to your sewing machine. Always verify your machine's model number before use.

4. SETUP AND INSTALLATION

4.1 Winding the Bobbin

1. Place an empty Generico metal bobbin onto the bobbin winder spindle of your sewing machine.
2. Follow your sewing machine's specific instructions for threading the bobbin winder. This typically involves guiding the thread through a tension disc and then around the bobbin.

3. Engage the bobbin winder and press the foot pedal or start button to begin winding. Ensure the thread winds evenly.
4. Stop winding when the bobbin is full, but not overfilled. Cut the thread.

4.2 Inserting the Bobbin

The method for inserting the bobbin varies by machine type (top-loading or front-loading). Refer to your sewing machine's instruction manual for precise steps.

- **For Top-Loading Bobbins:** Open the bobbin cover plate. Insert the wound bobbin into the bobbin case, ensuring the thread unwinds in the correct direction (usually counter-clockwise). Guide the thread through the tension spring and pull it out a few inches. Replace the bobbin cover.
- **For Front-Loading Bobbins:** Remove the bobbin case from the machine. Insert the wound bobbin into the bobbin case, ensuring the thread unwinds in the correct direction. Guide the thread through the tension spring. Reinsert the bobbin case into the shuttle hook assembly, ensuring it clicks into place.

5. OPERATING GUIDELINES

Once the bobbin is correctly installed and the machine is threaded, you can begin sewing. Proper bobbin tension is critical for balanced stitches.

- **Thread Matching:** For best results, use the same type and weight of thread in both the needle and the bobbin.
- **Bobbin Tension:** If your stitches are uneven (loops on the top or bottom fabric), adjust the bobbin tension. For front-loading bobbins, this is usually done via a small screw on the bobbin case. For top-loading bobbins, tension is often adjusted through the upper thread tension dial. Refer to your machine's manual for specific tension adjustment procedures.
- **Test Stitching:** Always perform a test stitch on a scrap piece of fabric before starting your project to ensure proper tension and stitch quality.

6. MAINTENANCE

Proper care of your Generico metal bobbins will ensure their longevity and consistent performance.

- **Cleaning:** Periodically inspect bobbins for lint or thread residue. Clean them with a soft brush or cloth.
- **Storage:** Store bobbins in a clean, dry bobbin case or storage box to prevent dust accumulation and tangling.
- **Inspection:** Before each use, check bobbins for any deformities, burrs, or damage that could snag thread or harm your machine. Replace damaged bobbins immediately.

7. TROUBLESHOOTING COMMON ISSUES

If you encounter problems while sewing, consider the following bobbin-related troubleshooting steps:

Issue	Possible Cause	Solution
Uneven Stitches / Looping	Incorrect bobbin tension or upper thread tension.	Adjust bobbin tension (if applicable) or upper thread tension. Ensure bobbin is correctly inserted and threaded.
Thread Jams / Breakage	Bobbin incorrectly wound or inserted. Damaged bobbin. Lint in bobbin area.	Rewind bobbin evenly. Reinsert bobbin correctly. Clean bobbin case and shuttle area. Replace damaged bobbins.

Issue	Possible Cause	Solution
No Bobbin Thread Pick-up	Bobbin not inserted correctly. Upper thread not correctly lowered to pick up bobbin thread.	Ensure bobbin is fully seated and threaded through tension. Manually lower needle to pick up bobbin thread.

8. SPECIFICATIONS

- **Product Type:** Metal Bobbins
- **Quantity:** 10 pieces per pack
- **Material:** Metal
- **Compatibility:** Singer 306M, 306, 319, 20U; Seiko 691R, 809R, 829R, 850R, 3800
- **Manufacturer:** Singer Catania (as per product data)
- **ASIN:** B09XFTQ8VG

9. WARRANTY AND SUPPORT

For any questions regarding the Generico metal bobbins, or if you experience issues not covered in this manual, please contact the seller directly through the platform where the purchase was made. Please retain your proof of purchase for any warranty claims or support inquiries. Specific warranty details may vary by seller and region.
Seller: [Centro Singer Catania](#)