

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Disney Minnie Mouse Kids Smart Watch (Model MN4325AZ) Instruction Manual

Accutime MN4325AZ

Accutime Disney Minnie Mouse Kids Smart Watch Instruction Manual

Model: MN4325AZ

INTRODUCTION

Welcome to the world of interactive fun with your new Accutime Disney Minnie Mouse Kids Smart Watch. This device is designed to provide entertainment and practical tools for children, featuring an interactive touchscreen, games, a camera, a step counter, a timer, and a voice recorder. This manual will guide you through the setup, operation, and maintenance of your smartwatch to ensure a safe and enjoyable experience.

KEY FEATURES

- **10 Changeable Watch Faces:** Personalize the watch display with various Minnie Mouse themes.
- **6 Interactive Games:** Engage in fun and skill-building activities.
- **Built-in Selfie and Video Camera:** Capture photos and record short videos.
- **Step Tracker and Calorie Counter:** Monitor physical activity.
- **Practical Tools:** Includes a timer, alarm, calculator, and voice recorder.
- **Adjustable Silicone Strap:** Designed for comfortable wear on wrists from 5.5" to 8.0".

SETUP

1. Charging the Smart Watch

Before initial use, fully charge the smartwatch. A Lithium Polymer battery is included and required for operation.

- Connect the provided USB cable to the watch's USB port.
- Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer's USB port.

- The watch will display a charging indicator. A full charge typically takes approximately 4 hours.
- The average battery life is 12 hours, depending on usage.

2. Powering On/Off

- **To Power On:** Press and hold the power button (usually located on the side of the watch) until the screen illuminates.
- **To Power Off:** Press and hold the power button until a power-off option appears on the screen, then confirm your selection.

3. Setting Time and Date

Upon first use or after a full discharge, you may need to set the correct time and date. Navigate to the 'Settings' menu on the watch's touchscreen and follow the on-screen prompts to adjust these parameters.

OPERATING INSTRUCTIONS

The Minnie Mouse Kids Smart Watch features a touchscreen interface and physical buttons for navigation and interaction.

1. Navigating the Interface

- **Touchscreen:** Swipe left/right or up/down to browse through applications and menus. Tap an icon to select it.
- **Buttons:** Use the physical buttons for specific functions like power on/off, back, or home, as indicated by the watch's interface.

2. Changing Watch Faces

The watch comes with 10 pre-installed Minnie Mouse themed watch faces. To change the watch face, tap and hold on the current watch face, then swipe left or right to preview available options. Tap to select your desired watch face.



The smartwatch offers 10 different Minnie Mouse themed watch faces for personalization.

3. Playing Games

Access the 'Games' icon from the main menu. Select from the 6 interactive games available and follow the on-screen instructions to play.

4. Using the Camera and Video Recorder

Tap the 'Camera' icon to open the camera application. You can switch between photo and video modes. Tap the shutter button to take a picture or start/stop video recording. Captured media can be viewed in the 'Photo Gallery' application.



The watch features a camera, video recorder, and interactive games.

5. Activity Tracking (Pedometer)

The built-in pedometer tracks steps and estimates calories burned. Access the 'Activity Tracker' or 'Pedometer' application to view your daily activity data. Ensure the watch is worn snugly on the wrist for

accurate tracking.

6. Using Timer, Alarm, Calculator, and Voice Recorder

These utility applications can be accessed from the main menu:

- **Timer:** Set countdown timers for various activities.
- **Alarm:** Configure multiple alarms for reminders.
- **Calculator:** Perform basic arithmetic calculations.
- **Voice Recorder:** Record short audio clips. Access recordings from the 'Audio Recording' or 'Voice Record' application.

Your browser does not support the video tag.

Official product video from Accutime Watch Corp. demonstrating the Minnie Mouse Kids Smart Watch features.

MAINTENANCE

1. Cleaning

To clean your smartwatch, gently wipe the screen and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the device.

2. Water Resistance

The watch is rated as 'Water Resistant'. This means it can withstand splashes or brief exposure to water, such as handwashing. It is **not** suitable for swimming, showering, or submersion in water. Avoid exposing the USB port to moisture.

3. Battery Care

To prolong battery life, avoid extreme temperatures. Charge the watch regularly and avoid letting the battery completely drain for extended periods.

TROUBLESHOOTING

- **Watch will not turn on:** Ensure the watch is fully charged. Connect it to the USB charger for at least 10 minutes before attempting to power on again.
- **Screen is unresponsive:** Try restarting the watch by holding down the power button. If the issue persists, ensure the screen is clean and dry.
- **Battery drains quickly:** Reduce screen brightness, close unused applications, and limit frequent use of power-intensive features like the camera. Ensure the watch is fully charged before use.
- **Cannot record video/take photos:** Check if the watch's memory storage capacity (512 MB) is full. Delete old photos or videos to free up space.

SPECIFICATIONS

Feature	Detail
Model Number	MN4325AZ
Brand	Accutime

Operating System	Accutime OS
Display Type	Digital
Screen Size	40 Millimeters
Resolution	240 x 240 or 320 x 320 (estimated)
Human Interface Input	Buttons, Touchscreen
Memory Storage Capacity	512 MB
Battery Type	1 Lithium Polymer (included)
Battery Capacity	400 mAh
Battery Average Life	12 Hours
Battery Charge Time	4 Hours
Connectivity Technology	USB
Water Resistance Level	Water Resistant
Band Material Type	Silicone
Case Material Type	Plastic
Item Weight	1.4 Ounces
Package Dimensions	5.83 x 3.62 x 3.31 inches
Color	Light Pink (as per product images)
Band Length	8.25 Inches (fits wrists 5.5" to 8.0")

WARRANTY AND SUPPORT

This Accutime Disney Minnie Mouse Kids Smart Watch comes with a**Limited Warranty** from Accutime Watch Corp. For specific details regarding warranty coverage, duration, and how to obtain service, please refer to the warranty information included in the product packaging or contact Accutime Watch Corp. directly.

Manufacturer: Accutime Watch Corp.