

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TechniSat](#) /

› [TechniSat HD-S 261 Satellite Receiver User Manual](#)

## TechniSat HD-S 261

# TechniSat HD-S 261 Satellite Receiver User Manual

Model: HD-S 261 (0000/4814) | Brand: TechniSat

## 1. INTRODUCTION

The TechniSat HD-S 261 is a compact digital satellite receiver designed for the reception of unencrypted (Free-to-Air) television and radio programs via satellite (DVB-S/S2). This device provides a high-definition viewing experience and includes a range of features to enhance your media consumption.



Front view of the TechniSat HD-S 261 compact satellite receiver, showcasing its sleek black design and front display.

## 2. SETUP

### 2.1 Physical Connections

Before operating the device, ensure all necessary cables are securely connected. Refer to the diagram below for proper connection points.



Diagram of the rear panel of the TechniSat HD-S 261, clearly labeling all connection ports:

- **LNB IN (F-connector):** For connecting to your satellite dish installation.
- **LOOP OUT:** For passing the satellite signal to another receiver (inactive in standby mode).
- **LAN:** Network connection, primarily for software updates (does not support internet browsing).
- **USB:** For connecting USB mass storage devices (e.g., USB flash drives, external hard drives) for media playback.
- **HDMI:** For connecting to a television with an HDMI input for high-definition video and audio.
- **TV SCART:** For connecting to older televisions or video equipment using a SCART cable.
- **S/PDIF (Coaxial):** For connecting to an audio amplifier or home theater system for digital audio output.

## 2.2 Initial Setup

Upon first power-on, the receiver will guide you through an initial setup process. The device comes with a pre-installed channel list for Astra 19.2 degrees, simplifying the setup for many users. The user interface is designed for ease of use, allowing for quick configuration.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Basic Operation

The TechniSat HD-S 261 can be controlled using the included remote control or the local control buttons located on the top front panel of the device.



## Commande rapprochée

### Contrôlable même sans télécommande

Detailed view of the control buttons located on the top front panel of the TechniSat HD-S 261, including Menu, OK, Channel Up/Down, and Volume Up/Down, allowing for local operation without the remote control.

### 3.2 Electronic Program Guide (EPG)

The integrated EPG provides a comprehensive overview of TV and radio programs. You can access program information for up to seven days in advance, allowing you to plan your viewing schedule effectively.



#### Bien informé grâce à l'EPG



Le guide électronique des programmes intégré dans le récepteur offre un aperçu rapide du programme en cours – jusqu'à sept jours à l'avance.

An illustration demonstrating the Electronic Program Guide (EPG) feature, which provides a quick overview of current and upcoming programs for up to seven days in advance.

### 3.3 USB Media Playback

The HD-S 261 features a built-in USB media player. Connect a USB storage device to the USB port to play various media files, including videos, MP3 audio files, and JPEG image files directly on your television.

## 4. MAINTENANCE

To ensure optimal performance and longevity of your TechniSat HD-S 261, follow these general maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the receiver. Avoid using liquid cleaners or abrasive materials.
- **Ventilation:** Ensure the ventilation slots on the device are not blocked to prevent overheating.
- **Software Updates:** The device supports software updates via the LAN connection. Periodically check the manufacturer's website for available updates to ensure your receiver has the latest features and bug fixes.

## 5. TROUBLESHOOTING

If you encounter issues with your TechniSat HD-S 261, consider the following basic troubleshooting steps:

- **No Power:** Check if the power cable is securely connected to the receiver and the power outlet. Ensure the outlet is functional.
- **No Signal:** Verify that the LNB IN cable from your satellite dish is correctly connected. Check your satellite dish alignment if necessary.
- **No Picture/Sound:** Ensure the HDMI or SCART cable connecting the receiver to your TV is properly connected. Confirm your TV input is set to the correct source (e.g., HDMI 1, AV).
- **Remote Control Not Working:** Check the batteries in the remote control and replace them if necessary. Ensure there are no obstructions between the remote and the receiver's IR sensor.
- **Frozen Picture/Unresponsive:** Try restarting the receiver by unplugging it from the power outlet for a few seconds and then plugging it back in.

For persistent issues, consult the comprehensive troubleshooting section in the full user manual or contact TechniSat customer support.

## 6. SPECIFICATIONS

Below are the key technical specifications for the TechniSat HD-S 261 receiver:

Model Number	0000/4814
Dimensions (L x W x H)	18 cm x 13 cm x 4.4 cm
Weight	516 Grams
Color	Black
Connectivity	HDMI, USB (1 port), SCART, LAN, LNB IN, LOOP OUT, S/PDIF (Coaxial)
Supported Audio Formats	MP3
Power Supply	100-240V~ 50-60 Hz, 18W max

**Battery (Remote)**

2 x AAA (included)



Diagram illustrating the compact dimensions of the TechniSat HD-S 261 receiver: 18 cm (width), 4.4 cm (height), and 13 cm (depth), highlighting its suitability for limited spaces.

## 7. WARRANTY AND SUPPORT

The TechniSat HD-S 261 comes with a **2-year manufacturer's warranty**. For warranty claims or technical support, please contact TechniSat customer service directly. Ensure you have your product model number and proof of purchase available when seeking support.