

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Liene](#) /
- › [Liene M100 4x6" Photo Printer User Manual](#)

Liene DHP513

Liene M100 4x6" Photo Printer Instruction Manual

Model: DHP513 | Brand: Liene

INTRODUCTION

The Liene M100 4x6" Photo Printer is a portable instant photo printer designed for use with iPhone, Android, and PC. Utilizing thermal dye sublimation technology, it produces full-color, high-quality prints that are resistant to water, scratches, fingerprints, and fading. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your printer to ensure optimal performance.

WHAT'S IN THE BOX

- Liene M100 4x6" Photo Printer
- Power Adapter
- Paper Cassette
- 3 Color Cartridges
- 100 Sheets of Photo Paper (20 sheets pre-loaded, 80 sheets in additional box)

Exquisite Packaging Ideal for Gift



Figure 1: Components included in the Liene M100 Photo Printer package.

SETUP GUIDE

Follow these steps to set up your Liene M100 Photo Printer for the first time.

1. Install Ink Cartridge

1. Open the ink cartridge compartment on the side of the printer.
2. Insert a color cartridge, ensuring it clicks firmly into place.
3. Close the compartment door.



Figure 2: Proper insertion of the ink cartridge.

2. Install Paper Cassette

1. Open the paper cassette.
2. Load up to 20 sheets of 4x6" photo paper into the cassette with the glossy side facing up.
3. Close the paper cassette.
4. Insert the loaded paper cassette into the front slot of the printer until it clicks into place. The magnetic suction design ensures secure storage.

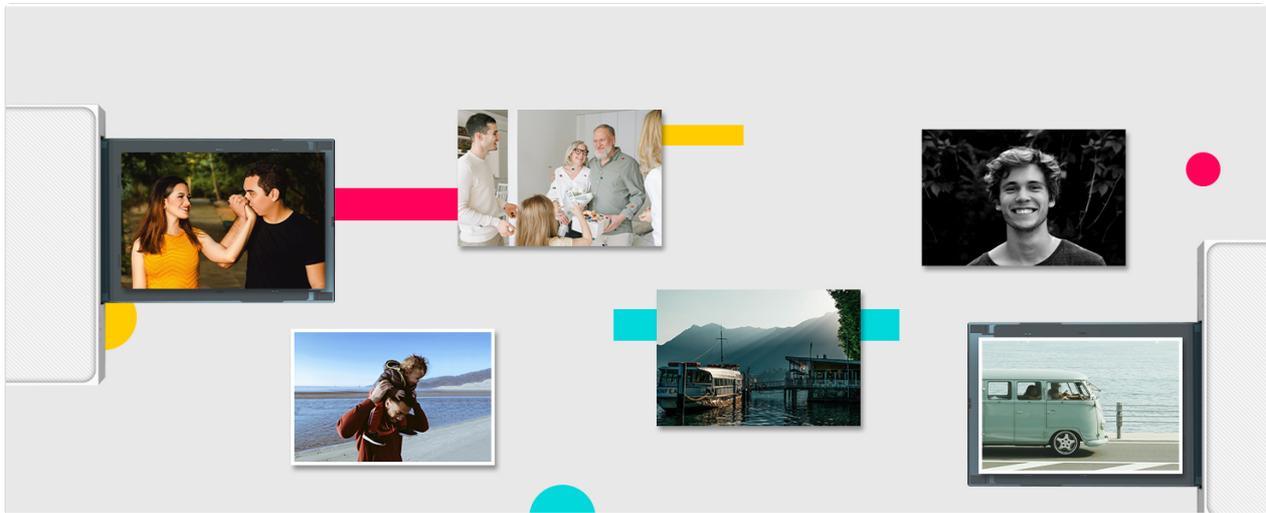


Figure 3: Steps for loading paper and inserting the cassette.

3. Connect to Wi-Fi

The printer features a built-in Wi-Fi hotspot for direct connection, eliminating interference from other networks.

1. Power on the printer by pressing the power button. The Wi-Fi indicator light will flash.
2. On your smartphone or PC, go to Wi-Fi settings.
3. Select the Liene Photo Printer's Wi-Fi hotspot (e.g., "Liene Photo Printer [XXXX]"). No password is required.
4. Once connected, the Wi-Fi indicator light on the printer will turn solid blue.

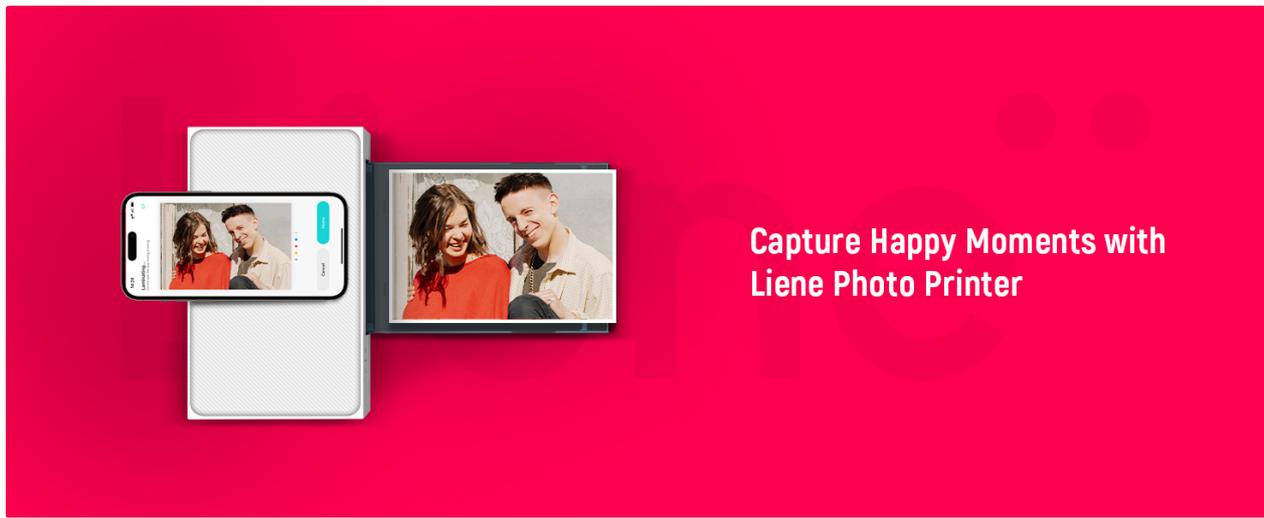


Figure 4: Connecting your device to the printer's Wi-Fi hotspot.

4. Download the Liene App

For full functionality and customization options, download the official Liene App from your device's app store (available for iOS and Android).

OPERATING INSTRUCTIONS

Printing Photos

1. Ensure your device is connected to the printer's Wi-Fi hotspot.
2. Open the Liene App.
3. Select the photo(s) you wish to print from your device's gallery.
4. Use the app's features to customize your photo (e.g., add borders, filters, adjust brightness/contrast).
5. Confirm print settings (e.g., number of copies, paper size).
6. Tap the 'Print' button. The printer will begin processing and printing your photo.

Easy to Print Photos



Figure 5: Easy steps to print photos with the Liene M100.

Photo Quality and Printing Process

The Liene M100 uses thermal dye sublimation technology, which applies color dyes in four layers (Yellow, Magenta, Cyan, and a protective overcoat) to deeply penetrate the paper. This process ensures vibrant, full-color prints with excellent durability.

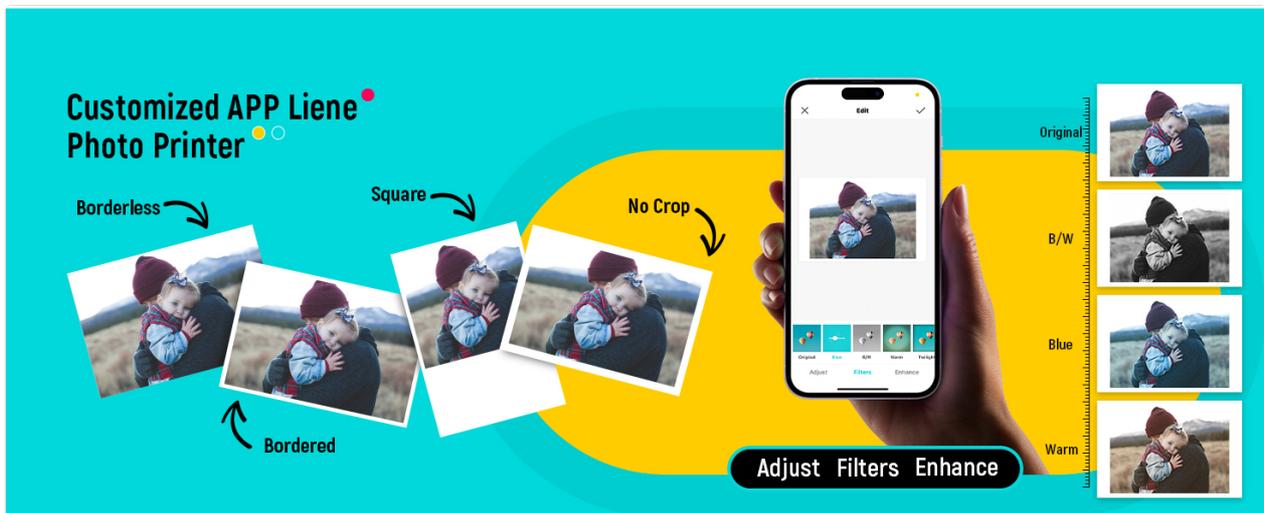


Figure 6: Thermal Dye Sublimation process for superior photo quality.

Each 4x6" photo print takes less than 1 minute to complete, from sending the picture to receiving the finished print.

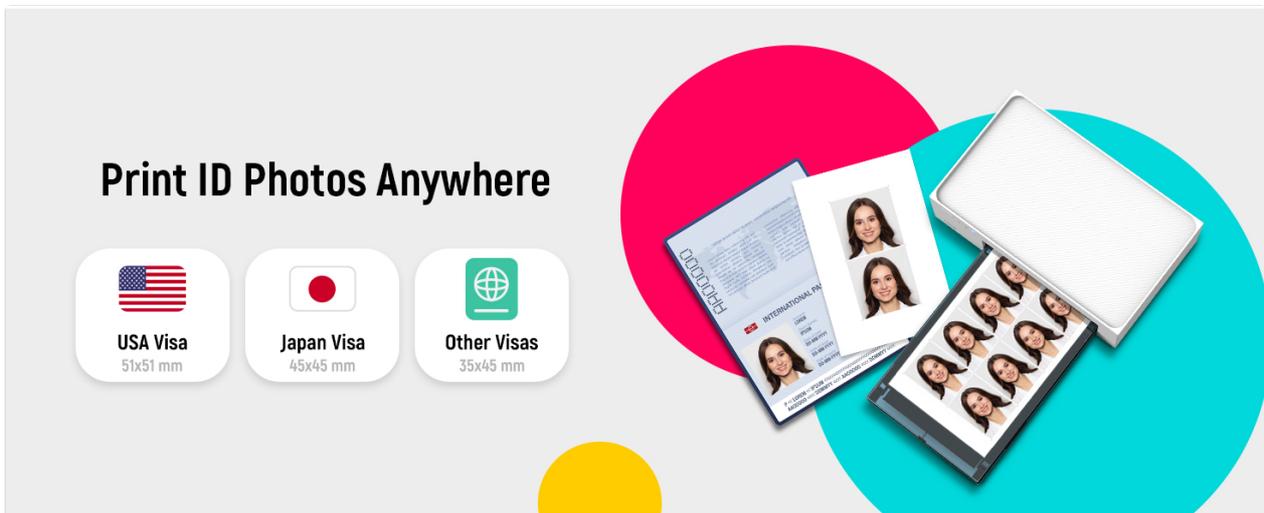


Figure 7: Fast printing speed of the Liene M100.

Customizing Prints with the Liene App

The Liene App offers various tools to enhance your printing experience:

- **Borders:** Add square or custom borders to your photos.
- **Filters:** Apply artistic filters to change the look and feel of your images.
- **Adjustments:** Enhance contrast, brightness, and other photo properties.
- **ID/Visa Photos:** Print standard ID and Visa photos directly from home.

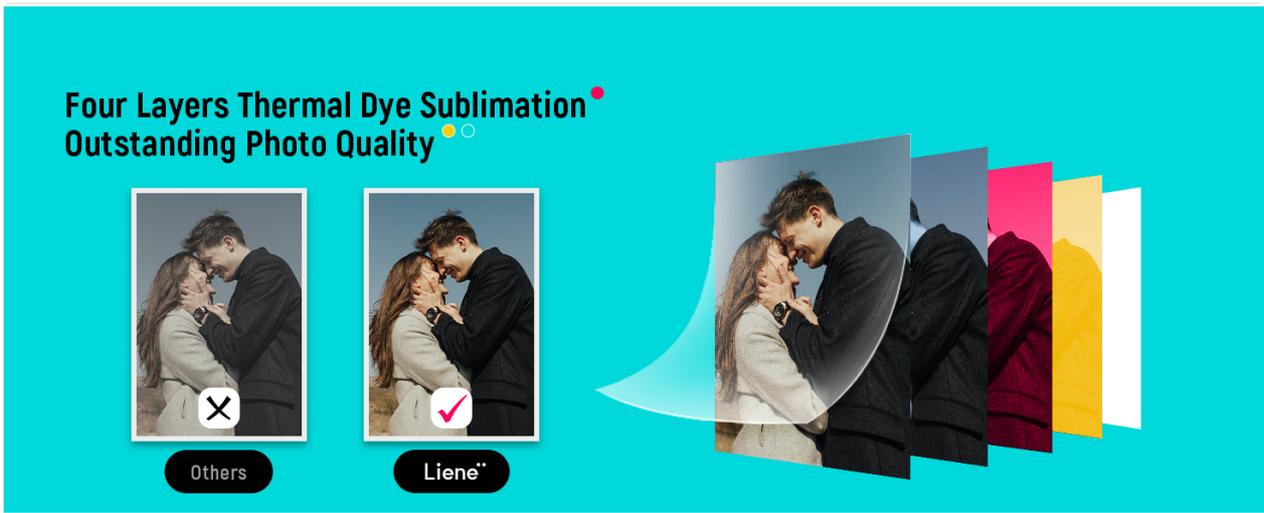


Figure 8: Printing ID and Visa photos using the Liene App.

MAINTENANCE

Cleaning the Print Head

If you observe smudges or streaks on your printed photos, the print head may need cleaning. Refer to the Liene App or the full user manual for detailed instructions on how to perform print head cleaning.

Storage

The Liene M100 features a minimalist and magnetic suction design, allowing the paper cassette to unite with the printer for compact and easy storage when not in use. This helps protect the paper from dust and damage.

Special Megnetic Suction Design

Easy to Carry

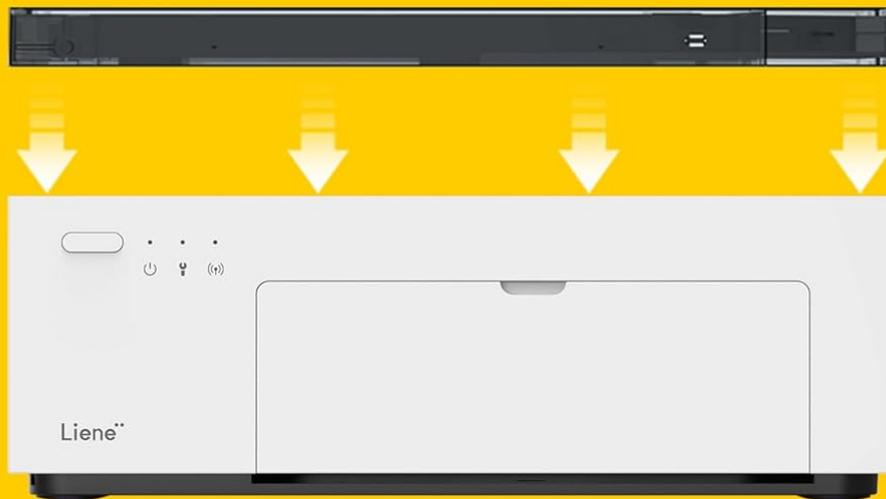


Figure 9: Magnetic suction design for easy storage.

TROUBLESHOOTING

Photos Not Appearing in App

If some photos from your phone's gallery do not appear in the Liene App, try editing the missing photos individually on your phone. This action can sometimes refresh their visibility within the app. Ensure your app is updated to the latest version.

Connectivity Issues

If you experience issues connecting to the printer's Wi-Fi hotspot, ensure the printer is powered on and the Wi-Fi indicator light is flashing or solid blue. Try restarting both your device and the printer. Confirm that your

device's operating system and the Liene App are up to date.

Print Quality Issues

If prints are blurry, have incorrect colors, or show lines, ensure the ink cartridge is properly installed and not empty. Clean the print head as described in the Maintenance section. Verify that the photo paper is loaded correctly with the glossy side facing up.

SPECIFICATIONS

Feature	Detail
Brand	Liene
Model Name	DHP513
Printing Technology	Dye Sublimation
Connectivity Technology	Wi-Fi, USB
Maximum Media Size	4 x 6 inch
Print Media	Glossy photo paper
Max Input Sheet Capacity	20
Maximum Color Print Resolution	300 x 300 dpi
Initial Page Print Time	59 seconds
Compatible Devices	Smartphones, PC, Laptops
Control Method	App
Product Dimensions	7.48 x 9.84 x 7.48 inches
Item Weight	6.32 pounds
Country of Origin	China

WARRANTY AND SUPPORT

The Liene M100 Photo Printer comes with a **12-month warranty**.

For further assistance, you can refer to the official [User Manual \(PDF\)](#) or visit the [Liene Store on Amazon](#).