

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLACK+DECKER](#) /
- › [BLACK+DECKER Countertop Microwave Oven User Manual](#)

## BLACK+DECKER 0.9-Cu. Ft. 900-Watt

# BLACK+DECKER Countertop Microwave Oven User Manual

Model: 0.9-Cu. Ft. 900-Watt

## INTRODUCTION

---

This manual provides important information for the safe and efficient operation of your new BLACK+DECKER Countertop Microwave Oven. Please read all instructions carefully before using the appliance and retain this manual for future reference.

The BLACK+DECKER 0.9 Cu. Ft. 900-Watt Microwave Oven is designed for convenient and efficient cooking. It features 10 power levels, multiple one-touch cooking programs, and an easy-to-read LED display with a kitchen timer and clock. Its compact size makes it suitable for various kitchen spaces.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the microwave oven if the door or door seals are damaged.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Use only microwave-safe utensils.
- Do not overcook food.
- Regularly clean the oven cavity, door, and seals.
- This appliance is for residential use only.


### Child Safety Lock:

The microwave includes a child safety lock function to prevent accidental use or access by children. Refer to the "Operating Instructions" section for details on how to activate and deactivate this feature.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your microwave oven.

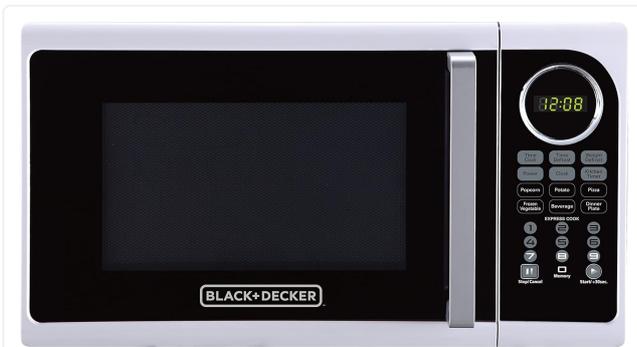

**Figure 1:** Front view of the BLACK+DECKER Countertop Microwave Oven. This image shows the overall design, including the white exterior, black door, and control panel with an LED display.



**Figure 2:** Interior view of the microwave oven. The door is open, revealing the glass turntable and the interior LED lighting, which allows for easy monitoring of cooking progress.



**Figure 3:** Detailed view of the control panel. This panel features an LED display, numerical keypad, and dedicated

buttons for various functions such as Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, and Dinner Plate.

## Control Panel Functions:

- **LED Display:** Shows cooking time, power level, clock, and other indicators.
- **Time Cook:** Used to set manual cooking time.
- **Time Defrost:** Defrosts food based on time input.
- **Weight Defrost:** Defrosts food based on weight input.
- **Power:** Adjusts the cooking power level (10 levels available).
- **Clock:** Sets the current time.
- **Kitchen Timer:** Functions as a standalone timer.
- **One-Touch Programs:** Dedicated buttons for common foods (Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, Dinner Plate).
- **Express Cook (1-6 min):** Quickly starts cooking for 1 to 6 minutes.
- **Start/+30 Sec.:** Starts cooking or adds 30 seconds to the cooking time.
- **Stop/Cancel:** Stops cooking or clears settings.
- **Memory:** Stores frequently used custom settings.

## SETUP

---

### Unpacking:

- Remove all packaging materials from inside and outside the microwave oven.
- Check the oven for any damage, such as a misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches, or dents inside the cavity or on the door. If any damage is present, do not operate the oven and contact customer service.
- Place the turntable ring and glass tray securely inside the oven cavity.

### Placement:

- Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in the oven.
- Ensure adequate ventilation. Allow at least 3 inches (7.5 cm) of space on the top, sides, and back of the oven for proper airflow. Do not block any ventilation openings.
- Keep the microwave away from heat sources and strong magnetic fields.
- Do not place the microwave in a cabinet unless specifically designed for built-in microwave installation with proper ventilation. This model is designed for countertop use.

### Electrical Connection:

- Plug the microwave oven into a properly installed and grounded 3-prong outlet.
- Do not use an extension cord or adapter.
- Ensure the voltage and frequency match the ratings on the appliance's label.

## OPERATING INSTRUCTIONS

---

### Setting the Clock:

1. Press the "Clock" button.

2. Use the number pad to enter the current time (e.g., 12:30 for 12:30 PM).
3. Press the "Clock" button again to confirm.

### Manual Cooking:


1. Place food in a microwave-safe container on the turntable.
2. Press the "Time Cook" button.
3. Enter the desired cooking time using the number pad (e.g., 1:30 for 1 minute 30 seconds).
4. Press the "Power" button, then use the number pad to select a power level (1-10, where 10 is 100% power).
5. Press "Start/+30 Sec." to begin cooking.

### One-Touch Cooking Programs:

Your microwave features 6 one-touch cooking programs for convenience:

- **Popcorn:** For pre-packaged microwave popcorn.
- **Potato:** For baking potatoes.
- **Pizza:** For reheating pizza slices.
- **Frozen Vegetable:** For cooking frozen vegetables.
- **Beverage:** For heating drinks.
- **Dinner Plate:** For reheating a dinner plate.

To use, simply place the food in the oven and press the corresponding one-touch program button. The oven will automatically set the time and power level.

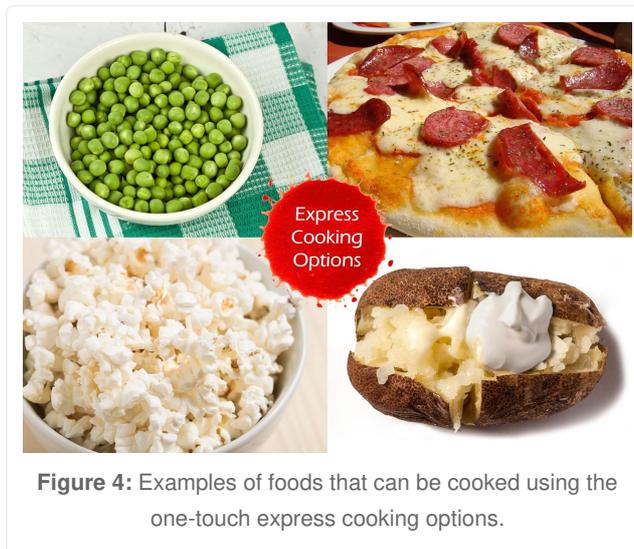

### Express Cook (1-6 minutes):

For quick heating, press any number from 1 to 6 on the number pad. The oven will start cooking immediately for that many minutes at 100% power.

### Defrosting:

- **Time Defrost:** Press "Time Defrost", enter the desired defrosting time, and press "Start/+30 Sec.".
- **Weight Defrost:** Press "Weight Defrost", enter the weight of the food in ounces or grams using the number pad, and press "Start/+30 Sec.". The oven will calculate the defrosting time automatically.

### Child Safety Lock:

- **To Activate:** Press and hold the "Stop/Cancel" button for 3 seconds. The display will show "LOCK" or a lock icon.

- **To Deactivate:** Press and hold the "Stop/Cancel" button for 3 seconds again. The "LOCK" or lock icon will disappear.

## Product Overview Video:

Your browser does not support the video tag.

This video provides a visual overview of the BLACK+DECKER Countertop Microwave Oven, demonstrating its features, controls, and sleek design. It highlights the easy-to-use control panel, interior LED lighting, and compact size, offering a comprehensive look at the product's functionality and aesthetic.

## MAINTENANCE

---

### Cleaning the Microwave Oven:

- Always unplug the oven before cleaning.
- Clean the inside of the oven regularly with a damp cloth and mild detergent. Do not use abrasive cleaners or steel wool.
- The glass turntable and turntable ring can be washed in warm soapy water or in a dishwasher.
- Wipe the exterior with a damp cloth. Avoid getting water into the ventilation openings.
- Clean the door and door seals frequently to remove any spills or splatters.

### Storage:

If storing the microwave for an extended period, ensure it is clean and dry. Store it in a cool, dry place, preferably in its original packaging to protect it from dust and damage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Oven will not start.	Power cord not plugged in; Fuse blown or circuit breaker tripped; Door not closed properly.	Ensure power cord is securely plugged in; Check household fuse or reset circuit breaker; Close door firmly.
Food not cooking or heating properly.	Incorrect cooking time or power level set; Door not closed properly; Food quantity too large.	Adjust cooking time/power; Ensure door is fully closed; Reduce food quantity or increase cooking time.
Turntable makes noise or does not rotate.	Turntable not properly seated; Food obstructing rotation.	Reposition turntable and ring; Ensure no food is blocking movement.
Oven light not working.	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Child lock is active.	Child safety lock is engaged.	Press and hold "Stop/Cancel" for 3 seconds to deactivate.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

---

- **Brand:** BLACK+DECKER

- **Model Number:** 0.9-Cu. Ft. 900-Watt
- **Capacity:** 0.9 Cubic Feet
- **Wattage:** 900 watts
- **Product Dimensions (D x W x H):** 15.9"D x 19.1"W x 11.5"H
- **Item Weight:** 29.4 pounds
- **Color:** White
- **Material:** Stainless Steel, Plastic
- **Installation Type:** Countertop
- **Special Feature:** Child Safety Lock
- **Included Components:** Microwave and Turn Table
- **Manufacturer:** Midea

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. You may also contact customer service at the number provided on the product label or in the included documentation.

For additional assistance, you can visit the [BLACK+DECKER Store on Amazon](#).