

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER 1.1 Cu. Ft. 1000-Watt Countertop Microwave Oven Instruction Manual

BLACK+DECKER 1.1-Cu. Ft. 1000-Watts

BLACK+DECKER 1.1 Cu. Ft. 1000-Watt Countertop Microwave Oven Instruction Manual

Model: 1.1-Cu. Ft. 1000-Watts

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your new BLACK+DECKER 1.1 Cu. Ft. 1000-Watt Countertop Microwave Oven. Please read all instructions carefully before use and retain this manual for future reference.



Image: Front view of the BLACK+DECKER 1.1 Cu. Ft. 1000-Watt Countertop Microwave Oven, showcasing its

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy, observe the following basic precautions:

- Read all instructions before using the appliance.
- Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found in the full product manual.
- This appliance must be grounded. Connect only to properly grounded outlets. See "GROUNDING INSTRUCTIONS" section in the full manual.
- Install or locate this appliance only in accordance with the provided installation instructions.
- Do not heat whole eggs or sealed containers, as they may explode.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not cover or block any openings on the appliance.
- Do not store this appliance outdoors. Do not use this product near water.
- Do not immerse cord or plug in water.
- Keep the cord away from heated surfaces.
- Do not let cord hang over edge of table or counter.
- Use this appliance only for its intended use as described in this manual.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when the appliance is used by or near children.
- Do not operate this appliance with an empty oven.
- Do not use this appliance for commercial purposes.

SETUP AND INSTALLATION

Unpacking Your Microwave Oven

1. Remove all packing materials from inside the oven cavity.
2. Inspect the oven for any damage, such as a misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches, or dents inside the cavity or on the door. If any damage is present, do not operate the oven and contact customer service.
3. Ensure the glass turntable, turntable ring, and turntable shaft are present and undamaged.

Turntable Installation

The turntable system consists of a glass tray, turntable ring, and turntable shaft. Ensure these components are correctly assembled before operating the microwave.

- Place the turntable ring in the circular depression on the oven floor.

- Place the glass tray on top of the turntable ring, ensuring it sits securely on the central shaft.



Image: Interior view of the microwave oven with the door open, showing the glass turntable and its support ring correctly placed.

Placement and Power Connection

- Place the microwave on a flat, stable surface capable of supporting its weight and the heaviest food item likely to be cooked.
- Ensure adequate ventilation. Maintain a minimum of 4 inches (10 cm) of clearance around the sides, top, and rear of the oven for proper airflow.
- Do not block air vents.
- Plug the microwave into a dedicated, properly grounded 120V, 60Hz AC outlet. Do not use extension cords or adapters.

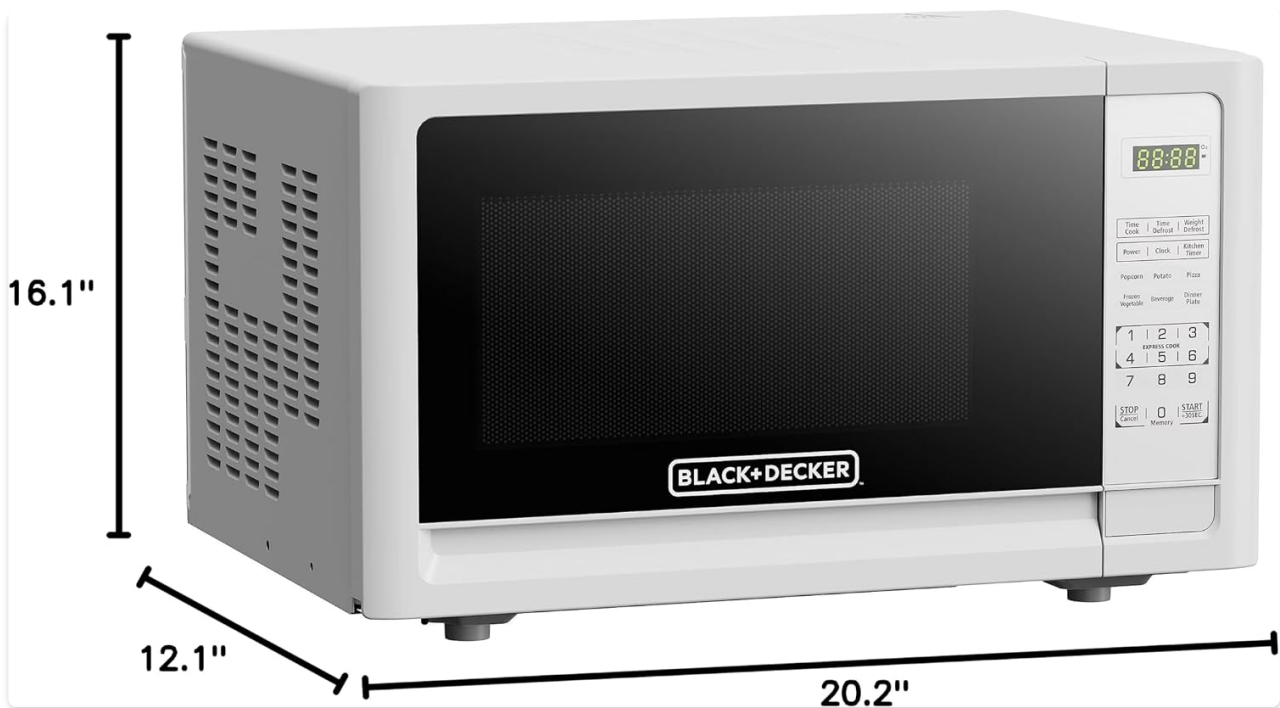


Image: Side view of the microwave oven with its dimensions (20.2"D x 16.1"W x 12.1"H) clearly indicated, illustrating space requirements.

OPERATING INSTRUCTIONS

Setting the Clock

1. Press the **"Clock"** button once.
2. Use the number pad to enter the current time (e.g., 1-2-3-0 for 12:30).
3. Press the **"Clock"** button again to confirm.

Microwave Cooking

This microwave offers 10 different power levels for precise cooking.

1. Place food in a microwave-safe container inside the oven.
2. Close the door securely.
3. Press the **"Time Cook"** button.
4. Enter the desired cooking time using the number pad.
5. To adjust power level (optional): Press **"Power"** button, then enter a number from 1 to 10 (10 for 100% power, 1 for 10% power).
6. Press **"Start/+30SEC"** to begin cooking.

Express Cook Function

For quick cooking at 100% power, use the express cook options.

- Press **"Start/+30SEC"** to immediately start cooking for 30 seconds at full power. Each subsequent press adds 30 seconds.
- For 1-3 minutes of express cooking, simply press the corresponding number button (1, 2, or 3) on the

keypad. The oven will start immediately at 100% power.

Defrosting Food

The microwave offers both time and weight defrost options.

Time Defrost

1. Press the "**Time Defrost**" button.
2. Enter the desired defrosting time using the number pad.
3. Press "**Start/+30SEC**" to begin.

Weight Defrost

1. Press the "**Weight Defrost**" button.
2. Enter the weight of the food in ounces (e.g., 16 for 1 lb).
3. Press "**Start/+30SEC**" to begin.

Auto-Menu Functions

Pre-programmed settings for common food items:

- **Popcorn:** Press the "Popcorn" button.
- **Potato:** Press the "Potato" button.
- **Pizza:** Press the "Pizza" button.
- **Frozen Vegetable:** Press the "Frozen Vegetable" button.
- **Beverage:** Press the "Beverage" button.
- **Dinner Plate:** Press the "Dinner Plate" button.

For each auto-menu function, you may need to press the button multiple times to select the desired quantity or serving size, then press "**Start/+30SEC**". Refer to the control panel for specific quantity indicators.

Kitchen Timer

Use the kitchen timer for general timing, independent of microwave cooking.

1. Press the "**Kitchen Timer**" button.
2. Enter the desired time using the number pad.
3. Press "**Start/+30SEC**" to begin the countdown.

Child Safety Lock

To prevent unintended operation, especially by children, activate the child lock.

1. To activate: Press and hold the "**STOP/Cancel**" button for 3 seconds. A lock indicator will appear on the display.
2. To deactivate: Press and hold the "**STOP/Cancel**" button for 3 seconds again. The lock indicator will disappear.

CARE AND MAINTENANCE

Cleaning the Oven Interior

- Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent or microwave-safe cleaner.
- Remove the glass turntable and turntable ring for cleaning. Wash them in warm, soapy water or in the dishwasher.
- Ensure the oven cavity is dry before closing the door.

Cleaning the Oven Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- Clean the control panel with a soft, slightly damp cloth. Do not use excessive water or spray cleaners directly onto the panel.

Odor Removal

To remove odors from the oven, combine a cup of water with several lemon slices or a tablespoon of vinegar in a microwave-safe bowl. Heat on high for 5-7 minutes, then let it sit in the oven for a few minutes before removing and wiping the interior.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Oven will not start	• Power cord not securely plugged in. • Door not closed properly. • Child lock activated. • Blown fuse or tripped circuit breaker.	• Ensure power cord is firmly plugged into a grounded outlet. • Close the door firmly until it latches. • Deactivate child lock (press and hold STOP/Cancel for 3 seconds). • Check household fuse/circuit breaker.
Food not heating	• Incorrect cooking time or power level set. • Door not closed properly. • Ventilation blocked.	• Verify cooking time and power level settings. • Ensure door is fully closed. • Check for obstructions around air vents.
Turntable not rotating	• Turntable not correctly placed. • Food item obstructing rotation.	• Ensure glass tray is seated correctly on the turntable ring and shaft. • Rearrange food to ensure it does not touch oven walls.
Unusual noise during operation	• Turntable components not properly seated. • Food container touching oven walls.	• Check turntable assembly. • Ensure food container is centered and not too large.

If the problem persists after attempting these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	1.1-Cu. Ft. 1000-Watts
Capacity	1.1 Cubic Feet
Wattage	1000 watts
Voltage	120 Volts
Product Dimensions (D x W x H)	20.2 x 16.1 x 12.1 inches
Item Weight	34.1 pounds
Color	White
Special Feature	Child Safety Lock
Installation Type	Countertop
Material	Stainless Steel (Interior/Door Trim)

WARRANTY INFORMATION

This product is covered by a manufacturer's warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product packaging or visit the official BLACK+DECKER website. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, service, or to order replacement parts, please contact BLACK+DECKER customer support.

- **Website:** Visit the official BLACK+DECKER website for support resources and contact information.
- **Telephone:** Refer to your product packaging or the BLACK+DECKER website for the most current customer service phone numbers.

When contacting support, please have your product model number (1.1-Cu. Ft. 1000-Watts) and serial number (if applicable) ready.

© 2025 BLACK+DECKER. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.