

[Manuals.plus](#) /

> [AAU](#) /

> AAU AOW03 Cordless Water Dental Flosser User Manual

AAU AOW03

AAU AOW03 Cordless Water Dental Flosser User Manual

Model: AOW03

1. PRODUCT OVERVIEW

The AAU AOW03 Cordless Water Dental Flosser is designed to provide effective oral cleaning, improving gum health and removing food debris and plaque. This portable and rechargeable oral irrigator features multiple cleaning modes and interchangeable tips to suit various dental needs.



Image: The AAU AOW03 Cordless Water Dental Flosser, its packaging, and the included assortment of jet tips.

Key Features:

- **Deep Cleaning:** Utilizes upgraded Pulse Technique with 2200-3000 pulses/minute and 50-150 PSI water pressure for effective plaque and debris removal.
- **5 Cleaning Modes:** Offers Strong, Normal, Soft, Pulse, and Child modes with a memory function to recall your last used setting.
- **Extended Battery Life:** Provides up to 30 days of continuous use on a 5-hour charge, with convenient USB-C charging.
- **Large Water Tank:** Features a 350ml water tank for uninterrupted cleaning and an IPX7 waterproof rating for safe use in the shower.
- **Rotatable Nozzle & Multiple Tips:** Includes a 360° rotatable nozzle and 6 interchangeable jet tips for comprehensive cleaning of hard-to-reach areas.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x AAU Oral Irrigator

- 3 x Standard Jet Tips
- 1 x Orthodontic Tip
- 1 x Periodontal Tip
- 1 x Tongue Cleaner Tip
- 1 x Charging Cable (USB-C)
- 1 x User Manual
- 1 x Quick Guide

Packing List

- 1 x AAU Oral Irrigator
- 3 x Standard Jet Tip
- 1 x Orthodontic Tip
- 1 x Periodontal Tip
- 1 x Tongue Cleaner Tip
- 1 x Charging Cable
- 1 x User Manual
- 1 x Quick Guide



Image: All components included in the AAU AOW03 Cordless Water Dental Flosser package, including the main unit, various tips, charging cable, and documentation.

Jet Tips Overview:

The device comes with six specialized tips for different cleaning needs:

- **Standard Jet Tips (3x):** For daily gum line cleaning.
- **Orthodontic Tip (1x):** Designed to remove food debris from braces and orthodontic appliances.
- **Periodontal Tip (1x):** Suitable for cleaning periodontal pockets.
- **Tongue Cleaner Tip (1x):** For cleaning tongue coating to help freshen breath.

6 TIPS INCLUDED

For your different needs and for multiple family members



Standard Jet Tips
For daily gum line clean



Orthodontic Tip
Remove food debris in the brace



Periodontal Tip
Suitable for periodontal pocket cleaning



Tongue Cleaner Tip
For cleaning tongue coating



Image: Visual representation of the six included jet tips: Standard, Orthodontic, Periodontal, and Tongue Cleaner tips, with descriptions of their uses.

3. SPECIFICATIONS

Feature	Detail
Model Number	AOW03
Water Tank Capacity	350 ML
Water Pressure Range	50-150 PSI
Pulse Frequency	2200-3000 per minute
Cleaning Modes	5 (Strong, Normal, Soft, Pulse, Child)
Jet Tips Included	6 (3 Standard, 1 Orthodontic, 1 Periodontal, 1 Tongue Cleaner)
Waterproof Rating	IPX7
Battery Type	Lithium Metal (included)

Charging Time	Approximately 5 hours for full charge
Usage Time per Charge	Up to 30 days
Power Source	Battery Powered (USB-C rechargeable)
Dimensions	10.12 x 3.7 x 3.62 inches
Weight	12.35 ounces

4. SETUP

4.1. Charging the Device

Before first use, fully charge the water flosser. Connect the provided USB-C charging cable to the charging port on the device and plug the other end into a compatible USB power source (e.g., USB adapter, power bank, laptop, car charger). The charging indicator will show the charging status. A full charge typically takes about 5 hours and provides up to 30 days of use.



RECHARGEABLE & PORTABLE

5 Hours Charged for use 30 days



USB adapter



Power bank



Notebook



Car charger



Image: The water flosser connected to a USB power source, illustrating its rechargeable and portable design.

4.2. Filling the Water Tank

1. Open the water tank cover located on the side of the device.
2. Fill the 350ml water tank with lukewarm water. You may also use mouthwash as recommended by your dentist.
3. Close the water tank cover tightly to prevent leakage. Ensure the charging port cover is also securely closed before use.

IPX7 WATERPROOF & 350ML LARGE CAPACITY

Convenient and Safe to use
in the shower



Safety for Bath



Water Wash



Tips: make sure the charging port cover is closed tightly before use

350ML Large Water Tank

Image: The water flosser highlighting its large 350ml water tank and IPX7 waterproof design, suitable for use in wet environments.

4.3. Attaching a Nozzle

1. Select the desired jet tip.
2. Insert the tip into the hole at the top of the flosser handle until it clicks into place.
3. To remove a tip, press the tip release button on the side of the device and pull the tip out.

360° ROTATABLE NOZZLE

Extensive all-round oral cleaning
Fixed/replaceable nozzle



Image: The water flosser illustrating its 360-degree rotatable nozzle, which allows for easy adjustment to reach all areas of the mouth.

5. OPERATION

5.1. Power On/Off

Press the 'ON/OFF' button to turn the device on or off.

5.2. Selecting a Mode

With the device on, press the 'MODE' button to cycle through the five cleaning modes:

- **Child (50 PSI):** Gentle pressure for children (8+ years) or new users.
- **Soft (80 PSI):** For daily cleaning or sensitive teeth.
- **Pulse (110 PSI):** Pulsating stream to remove plaque and massage gums.
- **Normal (125 PSI):** Effective cleaning for general use and breath freshening.
- **Strong (150 PSI):** Deep cleaning, ideal for between teeth or around braces.

The device features a memory function that will automatically start in the last used mode.

SUPER POWERFUL PRESSURE

5 PRESSURE SETTINGS




Child 50PSI

Children with 8 years old or above, new users



Soft 80PSI

Daily cleaning or sensitive teeth

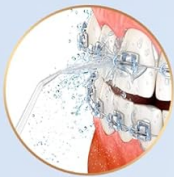

Pulse 110PSI

Remove 99.99% plaque, massage gums



Normal 125PSI

Effective cleaning or breath freshening



Strong 150PSI

Deep cleaning between teeth or braces



Image: The water flosser control panel displaying the five distinct pressure settings and their recommended uses.

5.3. Usage Instructions

1. Lean over a sink and place the tip in your mouth, aiming the stream at your gumline at a 90-degree angle.
2. Turn on the device and select your desired mode.
3. Guide the water stream along your gumline, pausing briefly between teeth. Allow the water to flow into the sink.
4. Use the 360° rotatable nozzle to reach all areas of your mouth, including the back of your teeth.
5. Continue until you have cleaned all areas or the water tank is empty.
6. Turn off the device and empty any remaining water from the tank.

DEEPLY CLEANING FOR YOUR TEETH



99%

Remove 99% dental plaque



90%

Up to 90% more effective solve traditional oral care



80%

80% cleaner than tooth brushing



Image: A visual representation of the water flosser's effectiveness in deeply cleaning teeth and removing dental plaque.

6. MAINTENANCE

6.1. Cleaning the Device

- After each use, empty any remaining water from the tank.
- Wipe the exterior of the device with a soft, damp cloth.
- Do not immerse the main unit in water, despite its IPX7 rating, to prolong its lifespan.

6.2. Cleaning the Water Tank

- The water tank is detachable for easy cleaning. Twist and pull to remove it from the main unit.
- Rinse the tank thoroughly with water. For deeper cleaning, you can add a small amount of vinegar to the water and run it through the device, then rinse with clean water.
- Ensure the tank is dry before reattaching or storing.

6.3. Storing the Device

Store the water flosser in a cool, dry place away from direct sunlight. Ensure the water tank is empty and dry before storage.

7. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. If the battery is low, connect it to the charger.
- **Weak water pressure:** Check if the water tank is sufficiently filled. Ensure the jet tip is securely attached and not clogged.
- **Water leakage:** Verify that the water tank cover and the charging port cover are closed tightly. Ensure the jet tip is correctly inserted.
- **Unusual noise:** If the device makes an unusual noise, turn it off immediately and contact customer support.

8. WARRANTY INFORMATION

The AAU AOW03 Cordless Water Dental Flosser typically comes with a standard warranty. Some purchases may qualify for an extended 3-year warranty upon registration with the manufacturer. Please refer to the warranty card included in your package or contact customer support for specific details regarding your product's warranty period and terms.

9. CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please refer to the contact information provided in your Quick Guide or User Manual. You can also reach out to the seller's customer service for support.